



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagoffroad.com



VIDEO INSTRUCTIONS

<https://www.youtube.com/watch?v=I-YSJDL-2QI>





IAG Brake Light Extension For 2021+ Bronco

IAG Brake Light Extension for 2021+ Bronco


Part Number: IAG-ACC-F1070

Congratulations on the purchase of your Brake Light Extension, and thank you for choosing IAG Offroad! These instructions are intended for users with basic mechanical skills. Professional installation not required.

Product includes:

1 IAG Brake Light Extension

2 (X4) Torx 40 Bolts

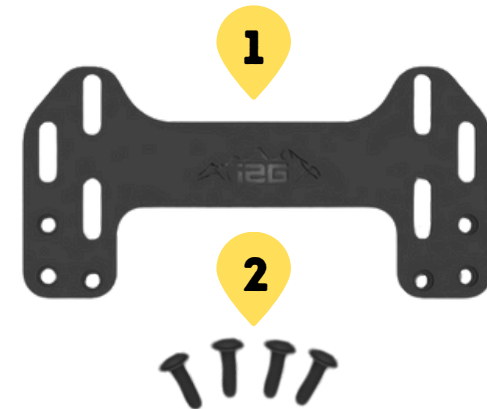

Tools Needed:

19mm socket

Torx30 socket

Torx40 socket



Step 1:

Remove spare tire from tire carrier.

Step 2:


Remove the four factory t30 screws holding the brake light to the tire carrier.

Step 3:

Install the IAG Brake Light Extension onto the tire carrier with two provided t40 bolts. (Only two bolt holes are used for base tire carrier.)

Step 4:

Install the brake light onto the Extension using the factory screws, adjust to proper height.

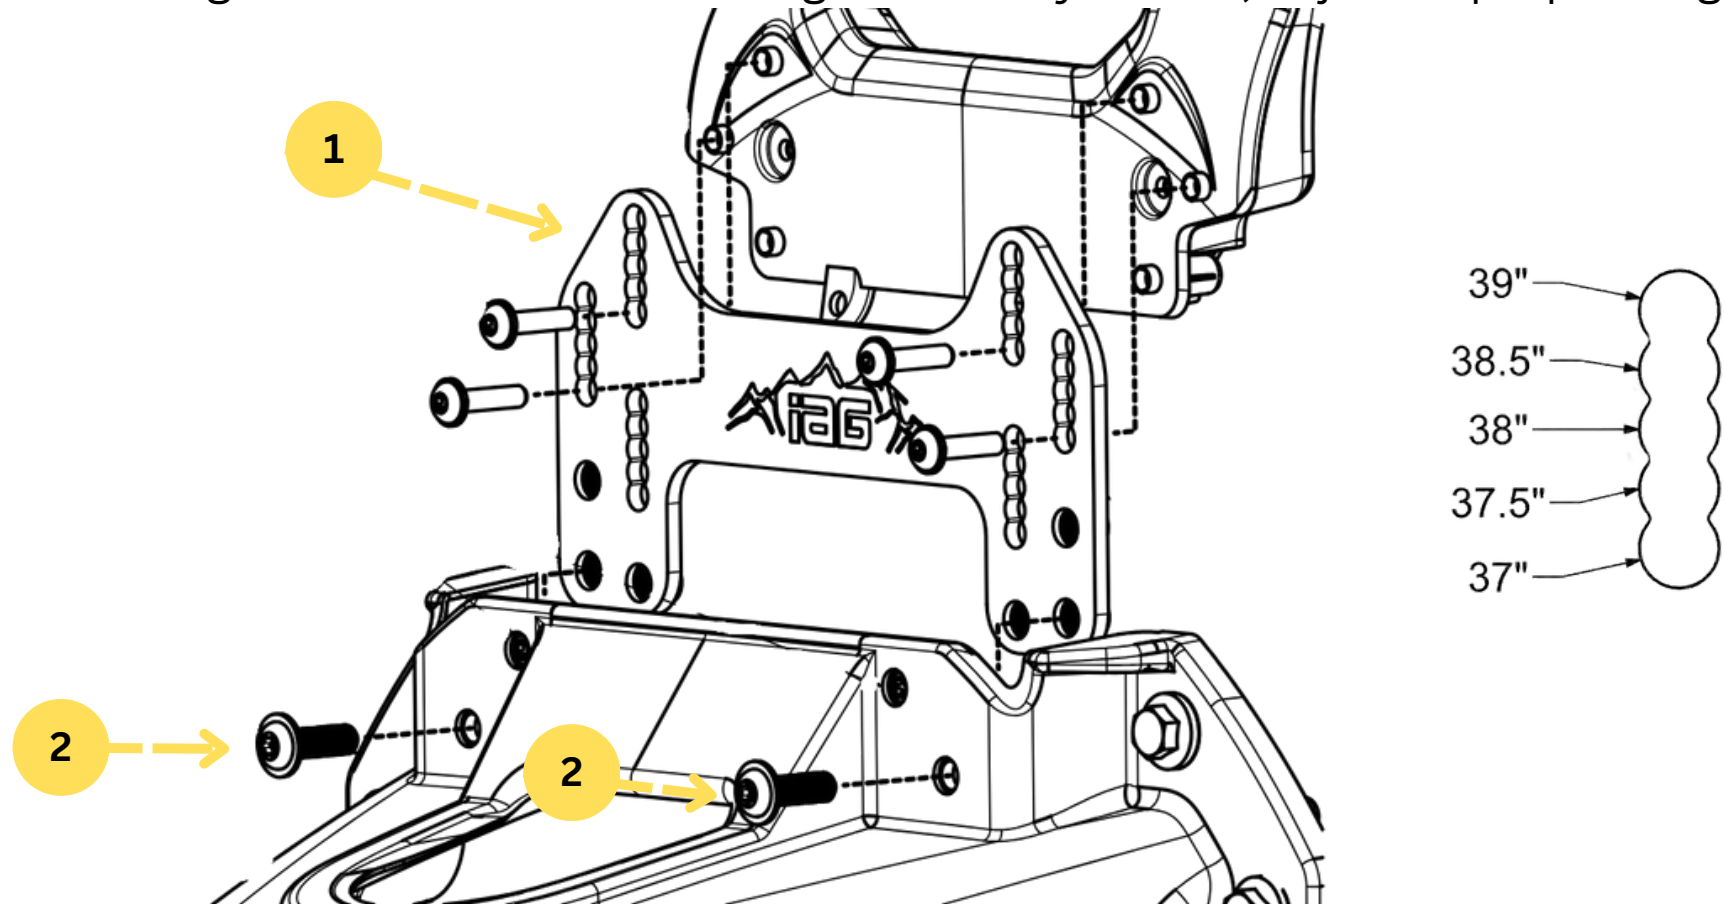

If you have any questions about the installation or product please contact
support@iagoffroad.com or call 410-840-3555