



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)




support@iagoffroad.com



VIDEO INSTRUCTIONS

<https://www.youtube.com/watch?v=5fU6F-h7FTE>



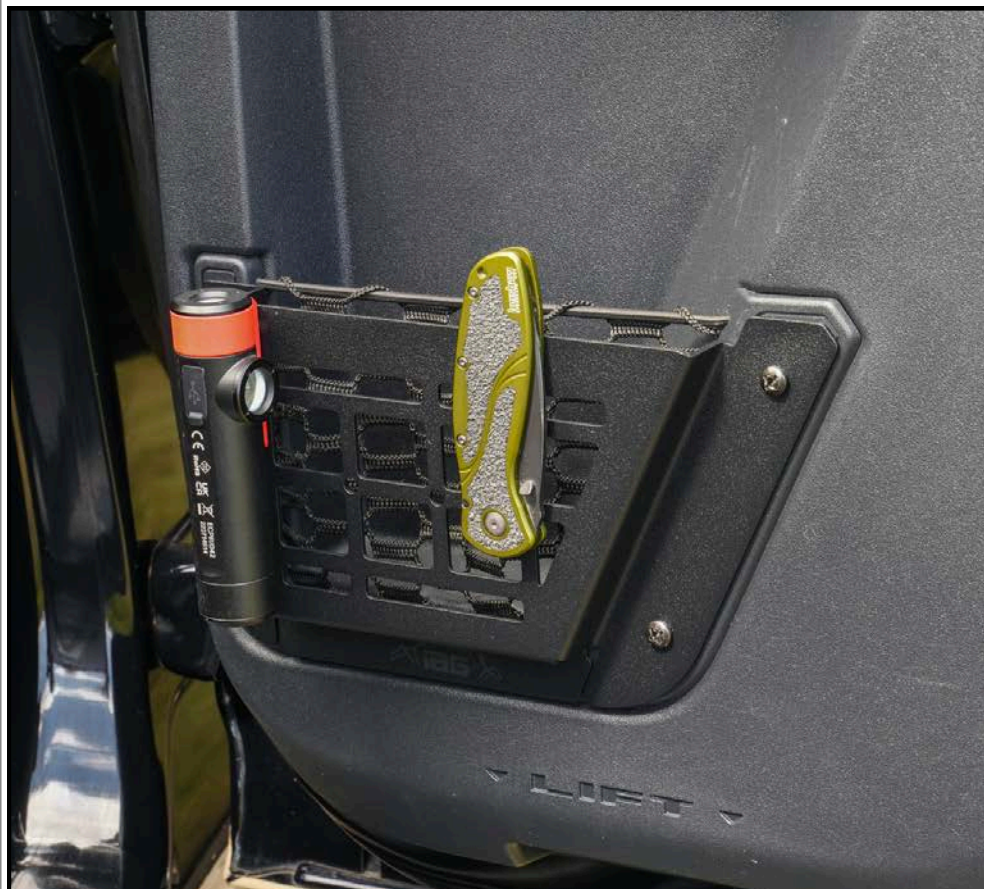

IAG Molle Rear Door Bins For 2021+ Bronco

Molle Rear Door Bins for 2021+ Bronco

Part Number: IAG-ACC-F1081


Congratulations on the purchase of your Door Bins, and thank you for choosing IAG Offroad! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Product includes:

1 Left Door Bin

2 Right Door Bin

3 (X8) Self Tapping
Screws

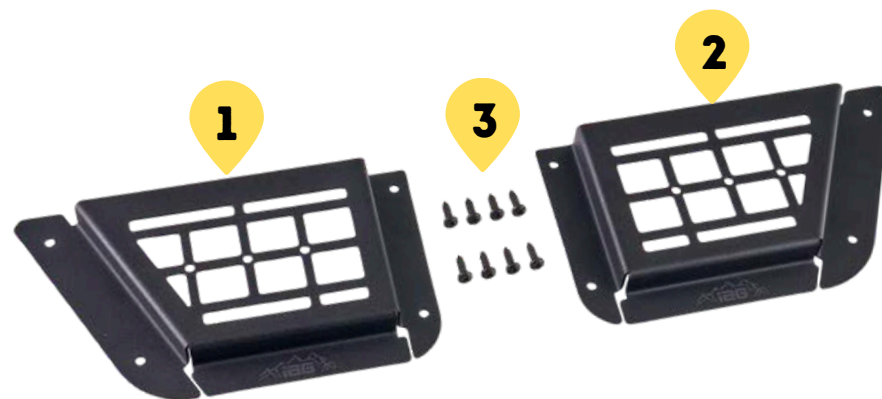

Tools Needed:

#3 Philips Drive Bit
Power Drill or Bit Driver





Step 1:
Align the Left Door
Bin with the driver
side Rear Door
Pocket.



Step 2:
Using a #3 Philips
bit, install the
provided Self
Tapping Screw into
the Door Bin.



Step 3:
Install remaining
screws.



Step 4:
Repeat for other
side.



If you have any questions about the product or install
please reach out to support@iagoffroad.com or call
410-840-3555