



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagoffroad.com



VIDEO INSTRUCTIONS

<https://www.youtube.com/watch?v=MmgXp8S8yg0>



IAG Multilevel Tailgate Table

For 2021+ Bronco





IAG-ACC-F1082, IAG Multilevel Tailgate Table For 2021+ Bronco

Congratulations on the purchase of your Tailgate Table and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.

Tools Needed:


Socket/Wrench Sizes:

- 8mm and 10mm
- 3mm Allen

Other Tools:

- Plastic Trim Pry Tool
- Pocket Flathead Screwdriver

Scan or click QR code for
instruction video.

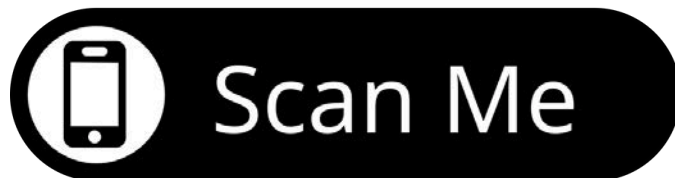

Contents:



1 Tailgate Table

2 Bottle Opener
(X4) 3mm Allen Bolts




Hardware:



3 (X4) M5 T Nut
(X4) M5 Nut (8mm)



4 (X4) M6 T Nut
(X4) M6 Nut (10mm)

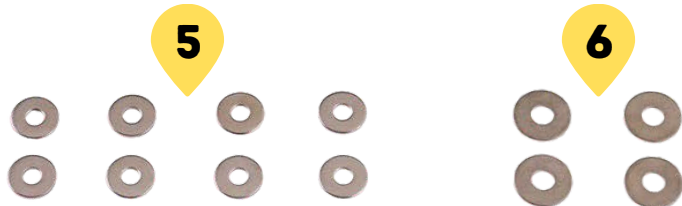

5 (X4) M5 Washer

6 (X2) M6 Washer



7 (X6) Black Washers


8 (X4) Lock Nut (8mm)

9 (X2) Lock Nut (10mm)



Step 1

Using a plastic trim pry tool, remove the interior trim panel from the tailgate.

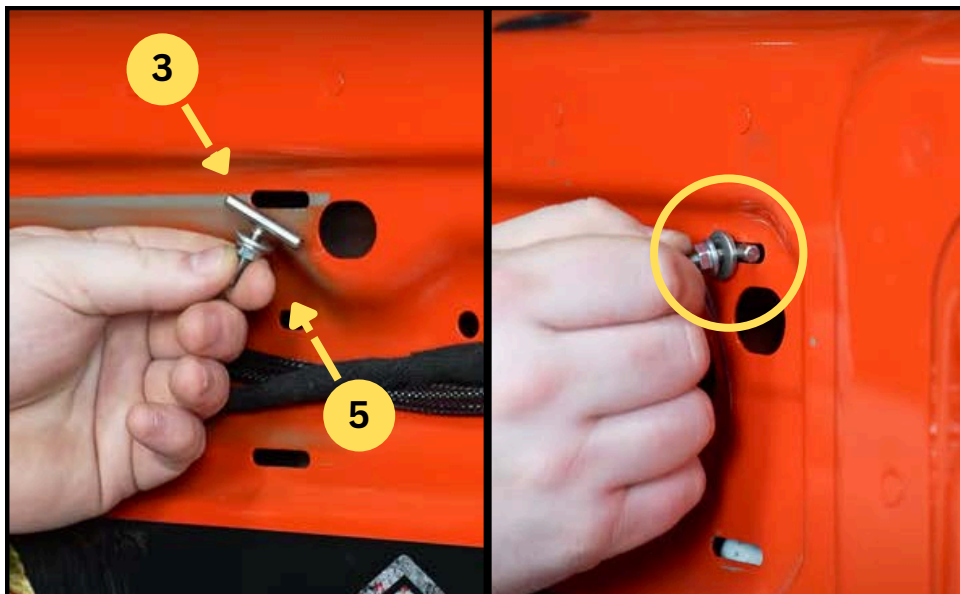

Step 2

Prepare the M5 T Studs with Washers and Nuts.

Insert the T Stud into the upper slots of the tailgate.




Step 2 pt. 2

Insert the four M5 T Studs into the shown locations.

Using an 8mm wrench tighten the nuts. (7Nm)

Note: A small flathead pocket screwdriver may be needed to prevent the T Studs from rotating. Insert the pocket screwdriver through the slots in the tailgate, and hold the T Stud in place.

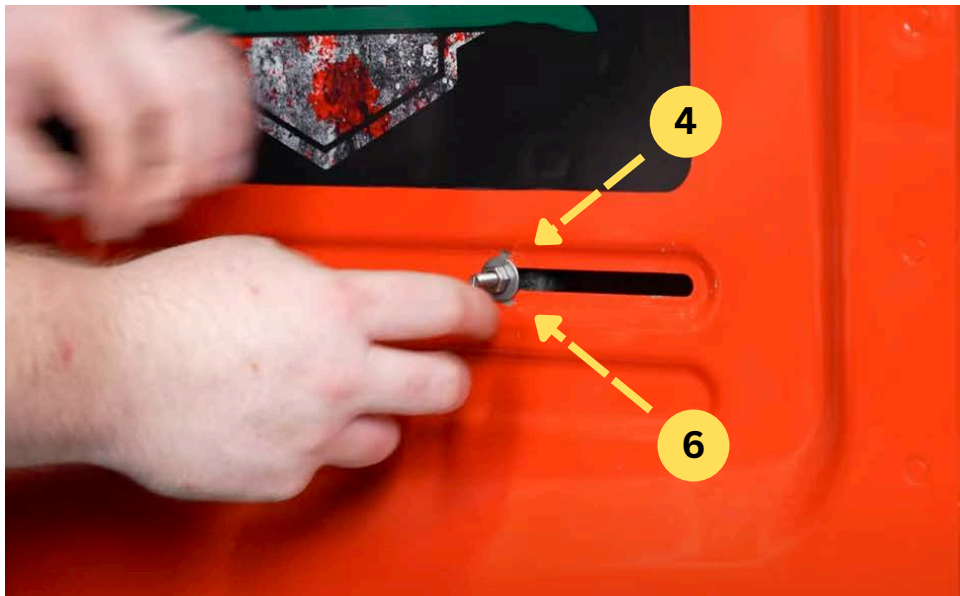

Step 3

Prepare the M6 T Studs with Washers and Nuts.

Insert the T Stud into the lower slots of the tailgate.




Step 3 pt. 2

Insert the two M6 T Studs into the shown locations.


Using an 10mm wrench tighten the nuts. (10Nm)

Note: A small flathead pocket screwdriver may be needed to prevent the T Studs from rotating. Insert the pocket screwdriver through the slots in the tailgate, and hold the T Stud in place.

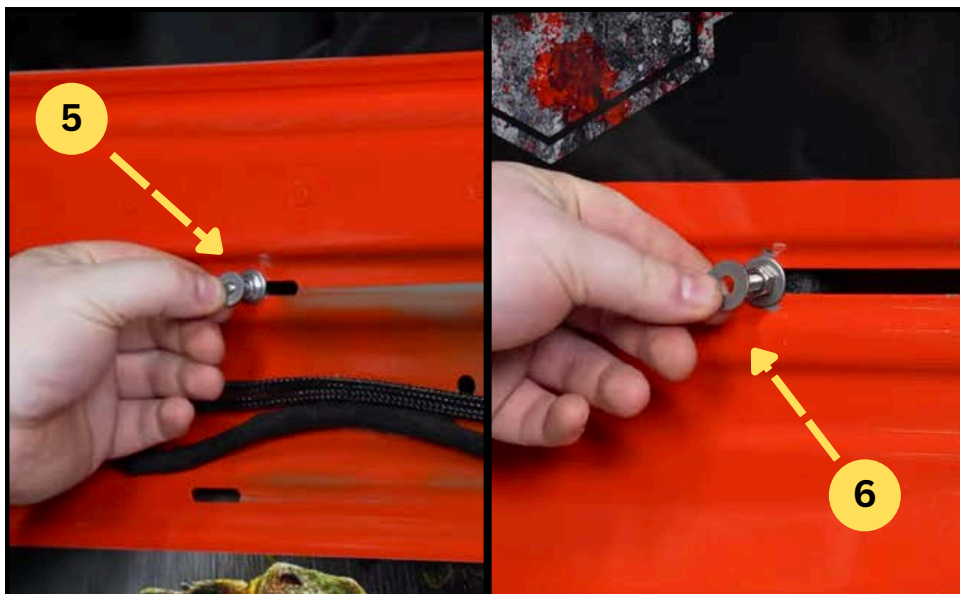

Step 4

Install Oversized Washers onto the matching T Studs.

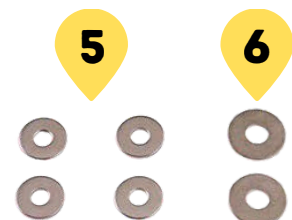




Step 5

Place the Tailgate Table in the open position.



Install the Tailgate Table onto the Tailgate.

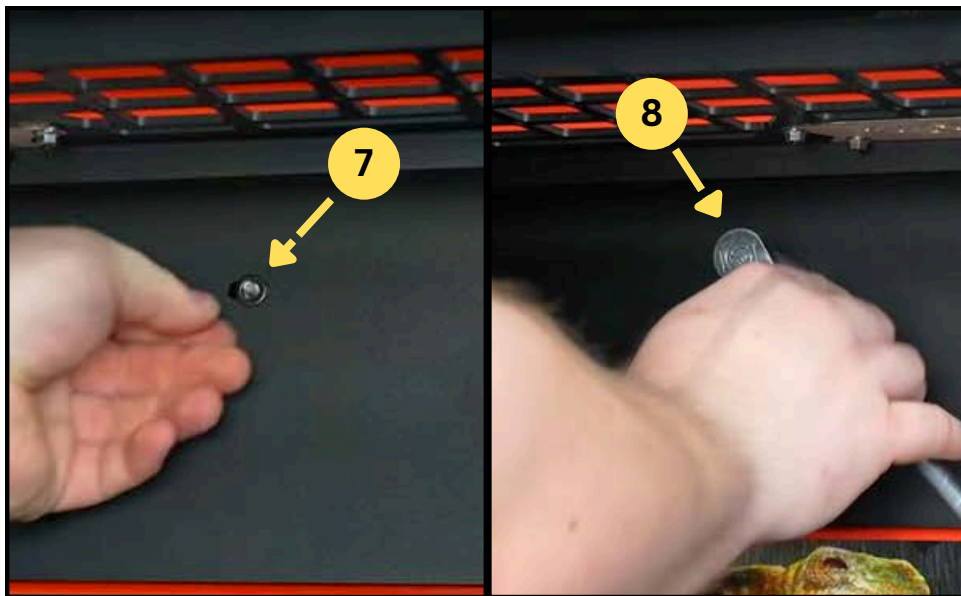

Step 6

Install the Black Washers onto the upper studs.

Install the 8mm Lock Nuts onto the Studs and tighten. (7Nm)

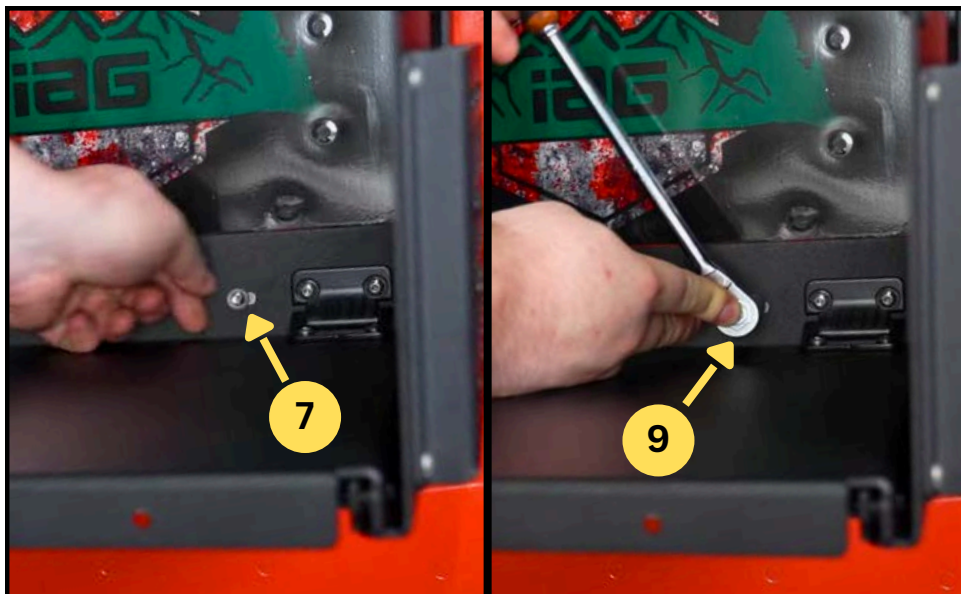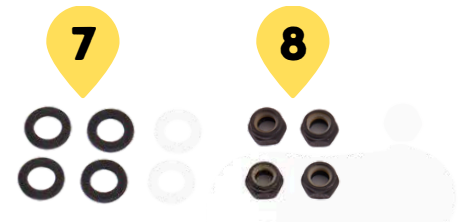


Step 7

Install the Black Washers onto the lower studs.


Install the 10mm Lock Nuts onto the Studs and tighten. (10Nm)



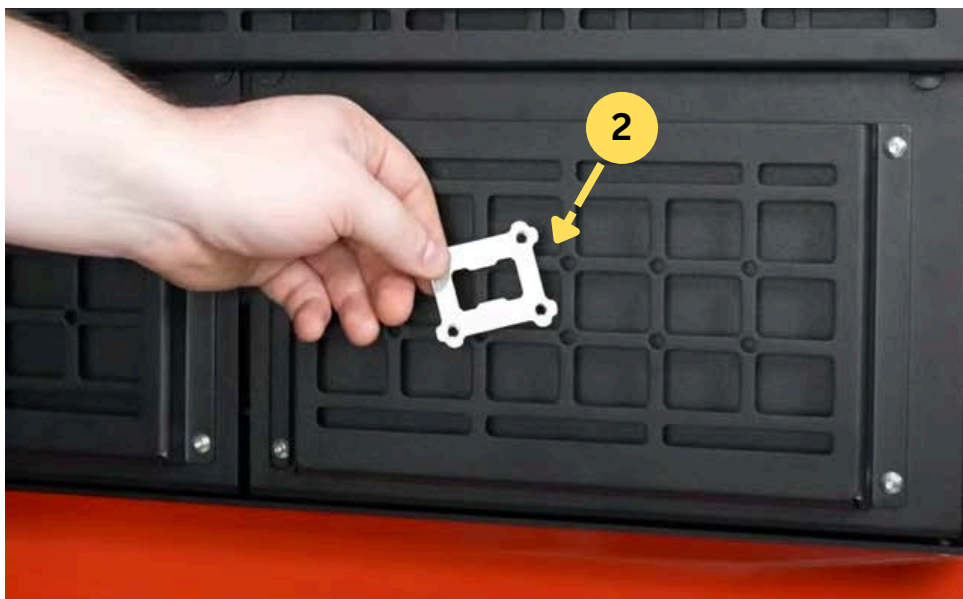

Step 8

Prepare the Provided IAG Bottle Opener.

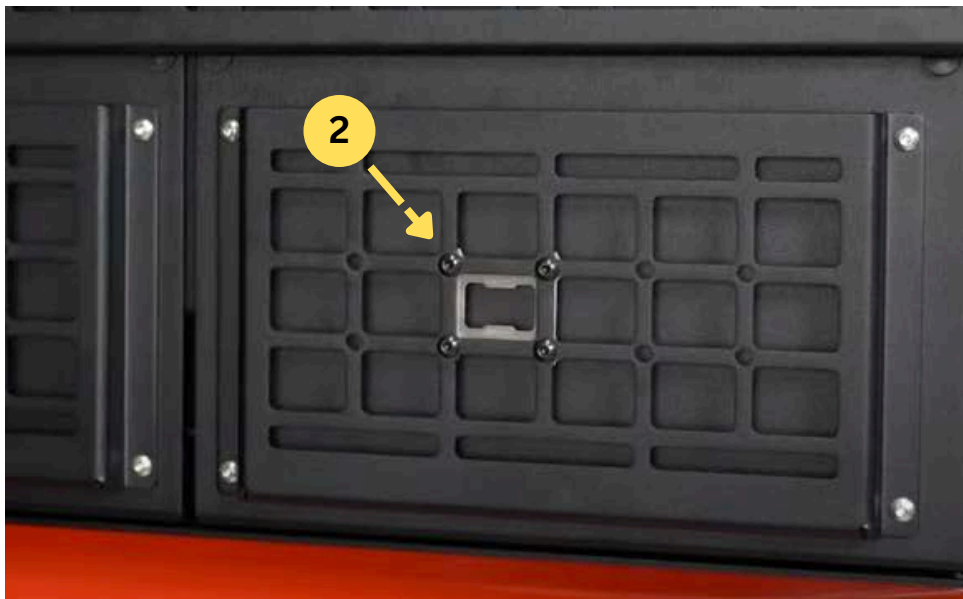

Step 9

Install Bottle opener onto desired MOLLE Panel with provided 3mm Allen Bolts



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555