



## U.S. BASED SUPPORT

**HOURS: MONDAY - FRIDAY | 8AM - 5PM EST**



[1.410.840.3555](tel:14108403555)




[support@iagoffroad.com](mailto:support@iagoffroad.com)



**VIDEO INSTRUCTIONS**

<https://iagoffroad.com/vi/IAG-ACC-F1086>

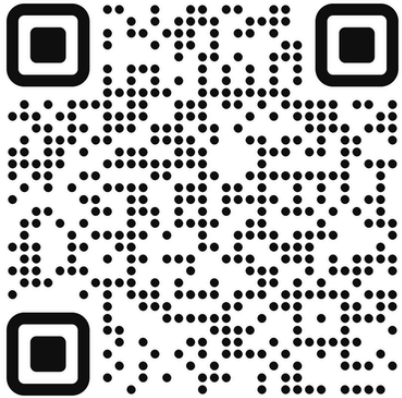

**SCAN ME**



**IAG OFF-ROAD  
MULTILEVEL TAILGATE TABLE  
WITH CUTTING BOARD  
FOR 2021+ BRONCO**



**IAG Off-Road**

## Multilevel Tailgate Table with Cutting Board For 2021+ Bronco

**Part Number: IAG-ACC-F1086**

Congratulations on the purchase of your Tailgate Table, and thank you for choosing IAG Off-Road!

These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.

### Tools Needed:

Socket/Wrench Sizes:

- 8mm
- 10mm
- 3mm Allen

Other Tools:

- Pocket Screwdriver
- Plastic Trim Pry Tool


Scan or click QR code for instruction video:



### Parts Included:



- 1** Tailgate Table
- 2** (X4) M5 T-Bolt
- 3** (X8) M5 Washer (Oversized)
- 4** (X4) 8mm Nut
- 5** (X4) M5 Washer (Black)
- 6** (X4) 8mm Nut (Black)
- 7** (X2) M6 T-Bolt
- 8** (X8) M6 Washer (Oversized)
- 9** (X2) 10mm Nut
- 10** (X2) M6 Washer (Black)
- 11** (X2) 10mm Nut (Black)

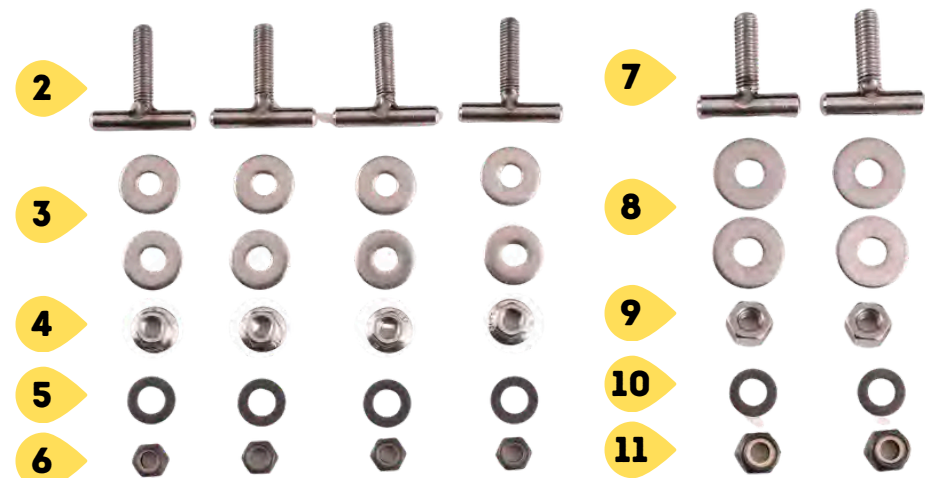

### Step 1

Using a plastic trim pry tool, remove the interior trim panel from the tailgate.



### Step 2


Prepare the M5 T Bolt with Oversized Washers and 8mm Nuts.

Assemble the T Bolt with one of the M5 Washers and 8mm Nut.



### Step 2 pt. 2

Insert the four M5 T Studs into the shown locations, in the upper tailgate slotted holes.

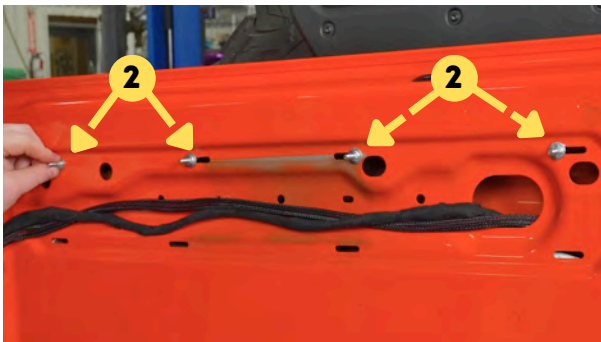

### Step 3

Using a pocket screwdriver to hold the T-Bolts from the back, tighten the 8mm nuts.


Torque to 5ft-lb.



### Step 4


Prepare the M6 T Bolt with Oversized Washers and 10mm Nuts.

Assemble the T Bolt with one of the M6 Washers and 8mm Nut.

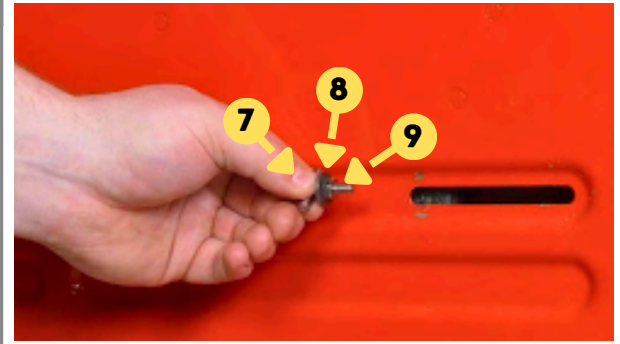

### Step 4 pt. 2


Insert the two M5 T Studs into the shown locations, in the lower tailgate slotted holes.

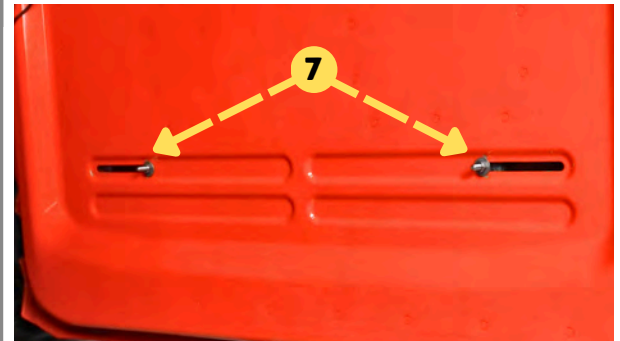

### Step 5

Using a pocket screwdriver to hold the T-Bolts from the back, tighten the 10mm nuts.

Torque to 7 ft-lb

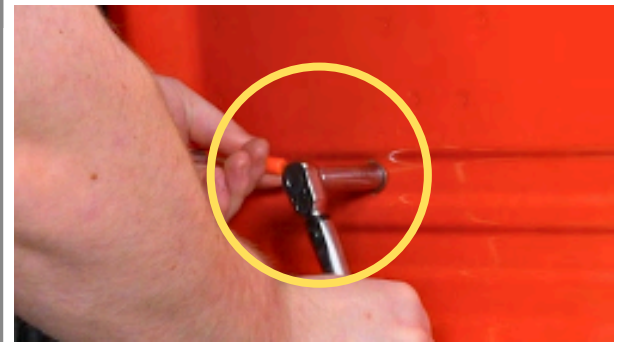


### Step 6

Install M5 Oversized Washers onto the four upper M5 Bolts.



### Step 6 pt. 2

Install M6 Oversized Washers onto the two lower M6 Bolts.

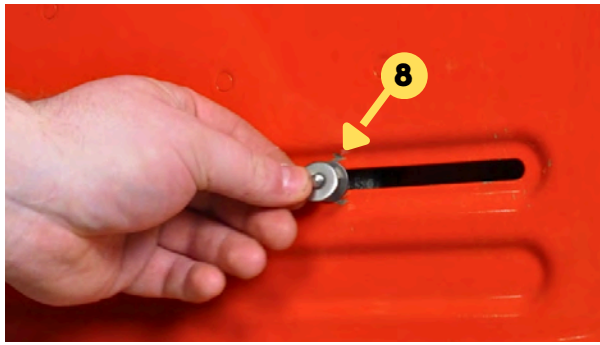


### Step 7

With the Tailgate Table open, Install the Tailgate Table onto the vehicle. Align the Bolt Holes with T-Bolts.



### Step 8

Install the Black 8mm Nuts with Washers onto the four upper M5 Bolts.

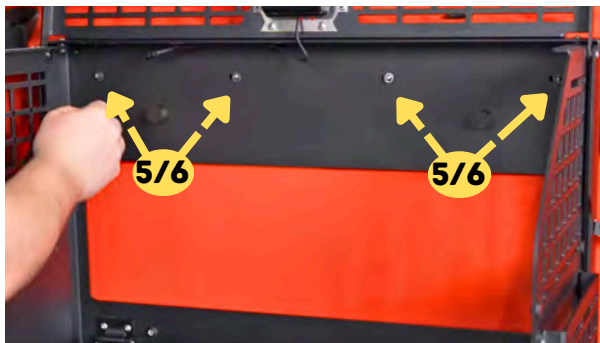

### Step 9


Install the Black 10mm Nuts with Washers onto the two lower M6 Bolts.



### Step 10

Tighten the four upper 8mm nuts evenly until tight.


Torque to 5ft-lb.

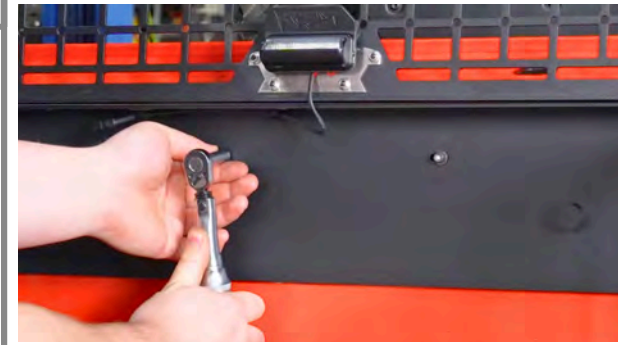

### Step 11


Tighten the two lower 10mm nuts evenly until tight.

Torque to 7ft-lb.

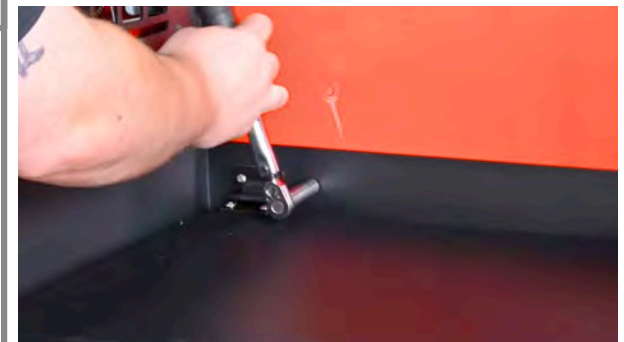

### Step 12

Install the IAG Bottle Opener on desired Molle Slot using provided 3mm Allen Bolts.

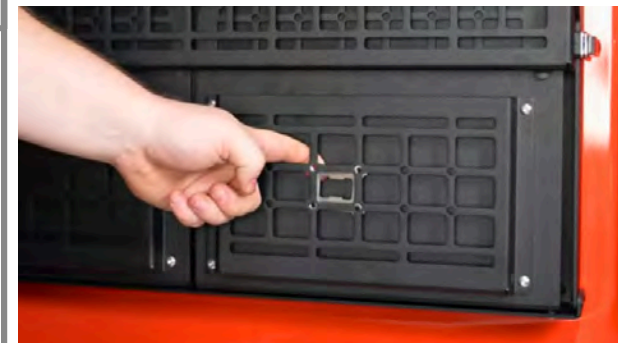

### Finished!

Enjoy your Tailgate Table!

