



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagoffroad.com



VIDEO INSTRUCTIONS

<https://iagoffroad.com/vi/IAG-ACC-F1091BK-OPT>



SCAN ME



**IAG OFF-ROAD
BRAKE FLUID CAP
FOR 21+ BRONCO, 15+ F-150,
19+ RANGER, 22+ MAVERICK**



IAG Off-Road Brake Fluid Cap

For Bronco, F-150, Ranger, Maverick

Part Number: IAG-ACC-F1091

Congratulations on the purchase of your Brake Fluid Cap, and thank you for choosing IAG Off-Road!

These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.

Tools Needed:

Socket/Wrench Sizes:

- Torx 6 Driver (Provided)

Scan or click QR code for instruction video:



Parts Included:




- 1 IAG Brake Fluid Cap
- 2 Color Ring
- 3 (X12) T6 Bolts
- 4 (X2) IAG Sticker

Step 1

Prepare the IAG Brake Cap, Color Ring, and Twelve T6 Bolts.

Install the Color Ring onto the IAG Cap and secure with the provided Bolts. Tighten until snug.

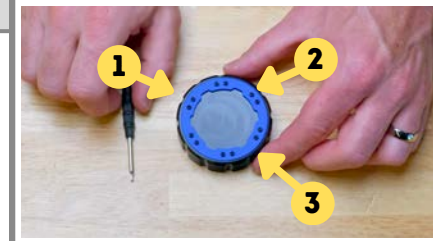

Step 1

Remove the factory Brake Fluid Cap.



Step 1

Install the IAG Brake Fluid Cap.



Step 1

Apply the desired IAG Sticker to the Brake Fluid Cap.

