



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)




support@iagoffroad.com




VIDEO INSTRUCTIONS

<https://iagoffroad.com/vi/IAG-ACC-F1092BK-OPT>

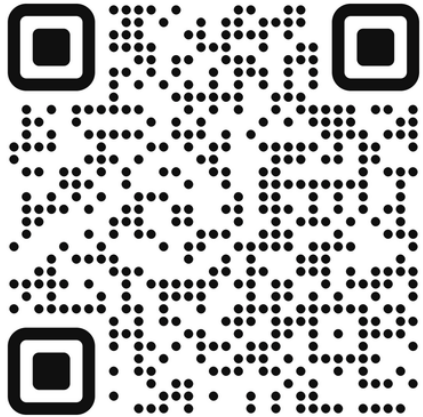

SCAN ME

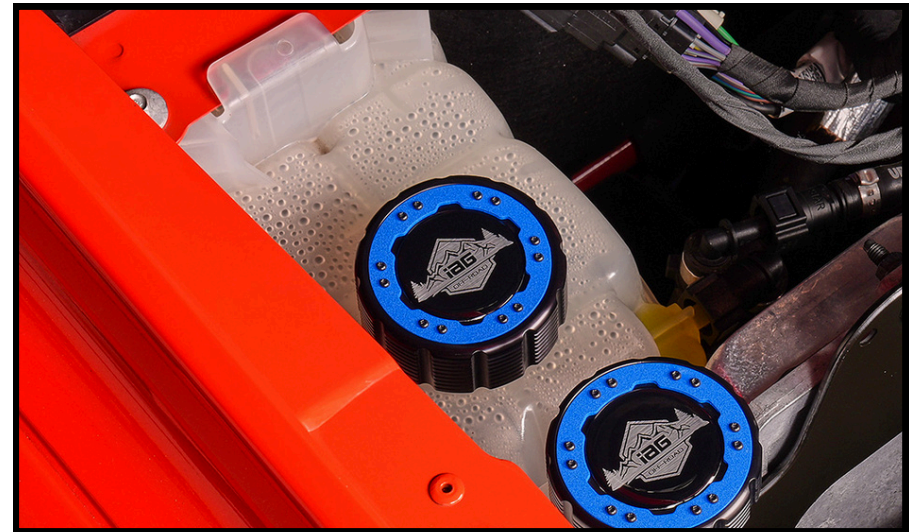

**IAG OFF-ROAD
COOLANT RESERVOIR CAP
FOR 21+ BRONCO, 15+ F150,
19+ RANGER, 22+ MAVERICK**



IAG Off-Road

Coolant Reservoir Cap

For Bronco, F-150, Ranger, Maverick

Part Number: IAG-ACC-F1092

Congratulations on the purchase of your Coolant Cap, and thank you for choosing IAG Off-Road!

These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.

Tools Needed:

Socket/Wrench Sizes:

- Torx 6 Driver (Provided)

Scan or click QR code for instruction video:



Parts Included:




- 1 IAG Coolant Cap
- 2 Color Ring
- 3 (X12) T6 Bolts
- 4 (X2) IAG Sticker

Step 1

Prepare the IAG Coolant Cap, Color Ring, and Twelve T6 Bolts.

Install the Color Ring onto the IAG Cap and secure with the provided Bolts. Tighten until snug.

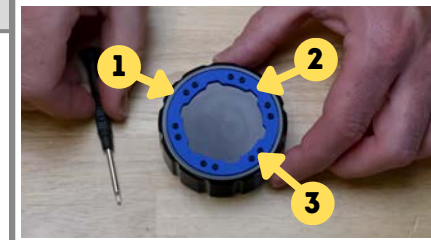

Step 1

Install the IAG Coolant Cap overtop the factory Coolant Cap.

Note the locating tabs inside the IAG Coolant Cap, align the tabs at the 3 and 9 o'clock position.



Step 1

Align the Cap with the Ridges of the factory coolant cap, firmly press the IAG Coolant Cap onto the factory Coolant Cap.



Step 1

Apply the desired IAG Sticker to the Coolant Cap.

