



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagoffroad.com




VIDEO INSTRUCTIONS

<https://iagoffroad.com/vi/IAG-ACC-F1093BK-OPT>



SCAN ME

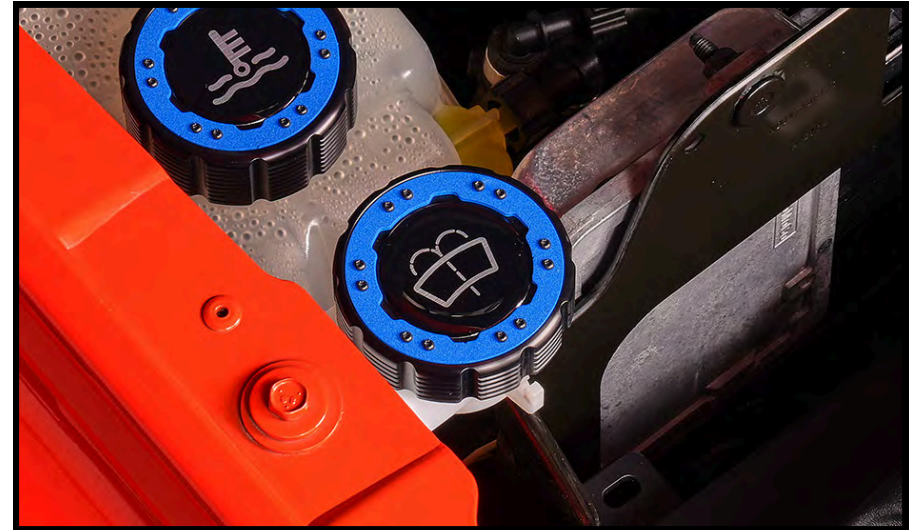

**IAG OFF-ROAD
WASHER FLUID CAP
FOR 21+ BRONCO,
24+ RANGER, 22+ MAVERICK**



**IAG Off-Road
Washer Fluid Cap
For Bronco, Ranger, Maverick
Part Number: IAG-ACC-F1093**

Congratulations on the purchase of your Washer Cap, and thank you for choosing IAG Off-Road!

These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.

Tools Needed:

Socket/Wrench Sizes:

- Torx 6 Driver (Provided)

Scan or click QR code for instruction video:



Parts Included:




- 1** IAG Washer Fluid Cap
- 2** Color Ring
- 3** (X12) T6 Bolts
- 4** (X2) IAG Sticker

Step 1

Prepare the IAG Washer Cap, Color Ring, and Twelve T6 Bolts.

Install the Color Ring onto the IAG Cap and secure with the provided Bolts. Tighten until snug.

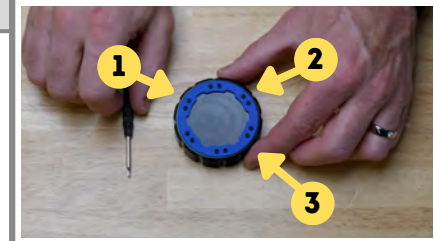

Step 1

Remove the factory Washer Fluid Cap.



Step 1

Install the IAG Washer Fluid Cap.



Step 1

Apply the desired IAG Sticker to the Washer Fluid Cap.

