



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



1.410.840.3555



support@iagoffroad.com



VIDEO INSTRUCTIONS

https://www.youtube.com/watch?v=GIQ_jrn6Dmo





IAG Glove Box Light For 2020+ F150

IAG Glove Box Light for 2020+ F150

Part Number: IAG-ACC-F1101

Congratulations on the purchase of your Glove Box Light, and thank you for choosing IAG Offroad! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Product includes:

1 Glove Box Light

2 Light Bracket

3 Thumb Screw

4 Adapter Harness

5 Fuse Adapter



Tools Needed:

8mm Wrench or Socket

Small Pliers or Fuse Puller






Step 1: Open the Glove Box, Depress the tabs on the side of the Glove Box and lower the compartment.



Step 2: Remove the Glove Box from the vehicle.



Step 3: Locate the 8mm Bolt on the Dash Support Bar, behind the glove box. Loosen the bolt, but do not remove.

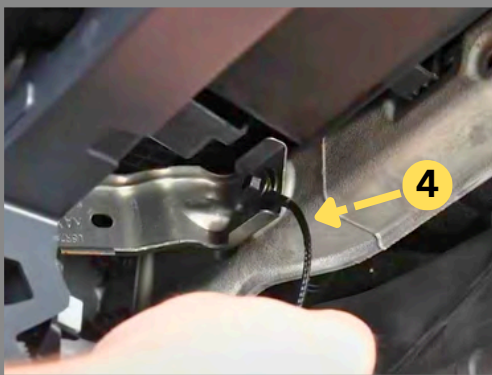


Step 4: Prepare the Adapter Harness. Slide the spade connector underneath the bolt and tighten.




Step 5: Locate the Kick Panel to the right of the passenger foot well. Remove trim to expose Fuse Box.



Step 6: Locate the 10 amp micro fuse about halfway up the fuse box. Remove the fuse.

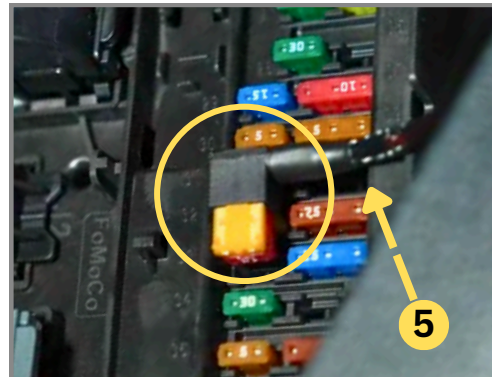

Step 7: Prepare the Fuse Adapter. Install the 10 Amp fuse into the Adapter. Install the Adapter into the Fuse Box.

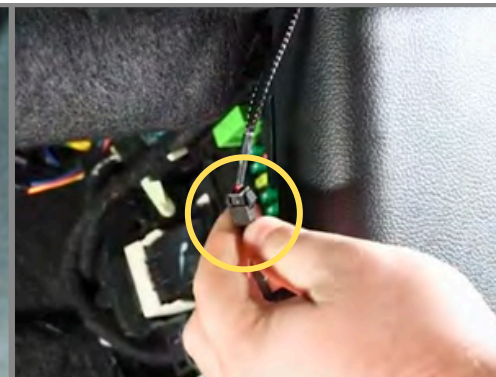

Step 8: Route the Adapter Harness towards the fuse box and connect the fuse adapter. Tuck harness behind trim.



Step 2: Prepare the IAG Light and Bracket. Install the Bracket onto the back of the glove box and slide the Light into the Bracket. Secure with thumb screw.



Step 10: Connect the Adapter Harness to the Glove Box Light. Zip tie excess to factory wiring harness.



Step 11: Reinstall Glove Box and Trim.



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555