IAG I-Line Rear D Pillar Audio Cover For 2021+ Ford Bronco









IAG-ACC-F3158 D Pillar Audio Cover for 6.5" For 2021+ Ford Bronco


Congratulations on the purchase of your IAG I-Line Rear D Pillar Audio Cover, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website.




- 1 Passenger side cover
- 2 Passenger side pod
- **3** Driver side pod
- 4 Driver side cover
- **5** (x2) Speaker wiring
- **6** Speaker screws
- **7** Mounting brackets (For two door models)

Tools needed: Torx Plus 30 socket and rachet

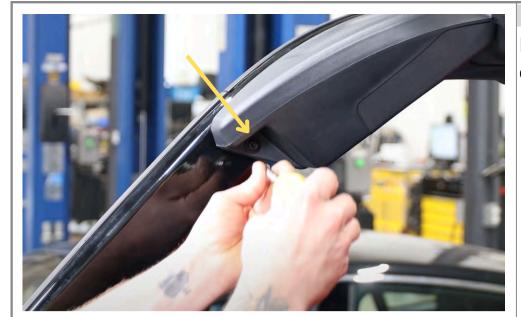

Remove TP30 Bolt from the drivers side rear speaker.

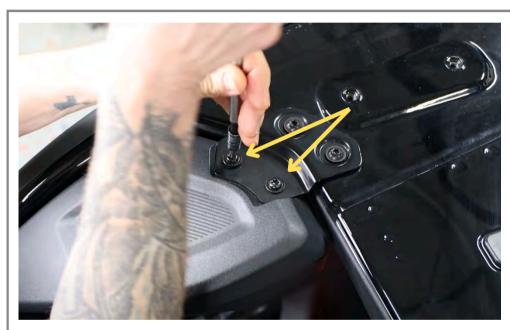

Step 2

Remove the two TP30 Bolts from the speaker bracket.



Step 3

Remove the speaker pod. To disengage the clip, use even pressure and pull the speaker pod away from the outside roll bar.



Step 4

Remove the speaker cover.
Using a plastic pry tool,
separate the speaker cover
from the pod.




Step 4 pt. 2



Step 5

Unplug the connector from the speaker, and remove the speaker pod.

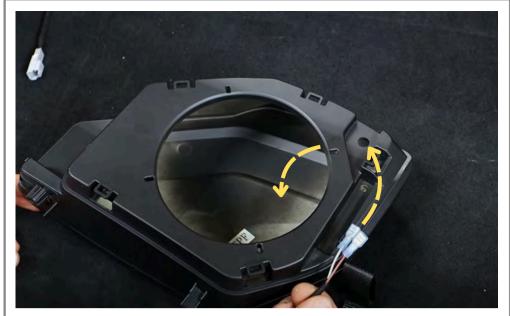

Prepare the new Speaker Pod and Speaker Wiring Harness. Route the wiring harness through the hole in the speaker pod as illustrated.




I Ross a second of the second

Step 7

Connect the speaker harness to the speaker.

Use the recommended connector for the speaker. In this case spade connectors are used.

(Speakers sold separately)

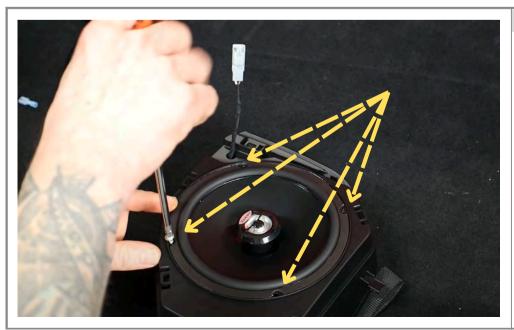

Step 7 pt.2

Install speaker into pod. Secure using provided screws.





(Two Door Broncos Only)

On 2 door models, replace the factory mounting brackets with the provided brackets.





Step 8

Remove the retention clip from the stock speaker pod.

Transfer the clip to the same position on the new speaker pod.



Step 9

Connect the new speaker pod to the vehicle wiring harness.

Ensure the speaker wiring is tucked into the channels of the speaker pod.



Install the new speaker cover.

Ensure that the wiring is not pinched were the cover meets the pod.





Step 11

Install the new speaker pod. Install and tighten the factory Torx bolts.



Step 12

Install and tighten the factory Torx bolt.



Repeat for other side.



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555