



IAG Aluminum Multilevel Tailgate Table For 2021+ Ford Bronco

Part #: IAG-ACC-F3181



Congratulations on the purchase of your IAG Aluminum Multilevel Tailgate Table for 2021+ Ford Bronco, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Product includes:

- ① Tailgate table
- ② Hardware bag


②




①



Step 1/12:
Remove rear tailgate cover.

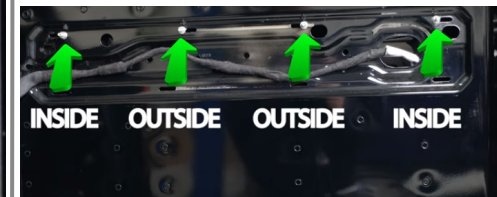


Step 2/12:
Placement of the top four t-bolts.

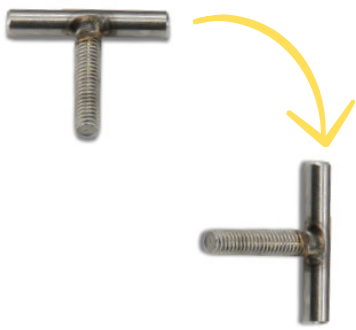

Step 3/12:
Turn t-bolts 90 degrees so they are facing vertically inside the holes on the tailgate.



Step 4/12:
Install each t-bolt with a washer first and then a nut.

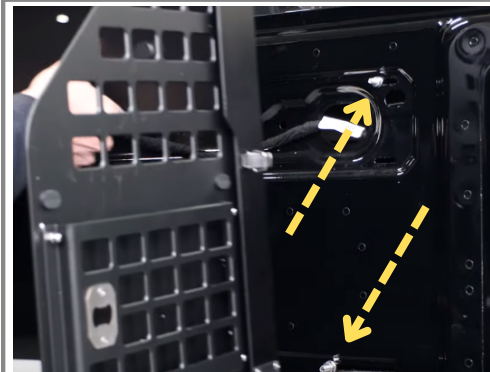

Step 9/12:
Line up tailgate holes with studs.



Step 10/12:
Install a washer and nut to the **top** four studs.



Step 5/12:
Make sure t-bolt stays in place as you tighten the nut and washer down.




Step 6/12:
Install the lower t-bolts with washer first and then a nut.



Step 11/12:
Install a washer and nut to the **bottom** two studs.



Step 12/12:
Tighten all of the top and bottom mounting bolts.

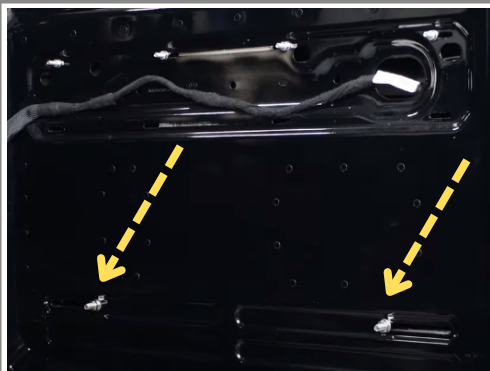

Step 7/12:
Install each t-bolt to the inside of the slot and tighten.



Step 8/12:
Unlatch both sides of the tailgate table and open for install onto the studs.



If you have any questions about the installation or product please contact support@iagoffroad.com or call 410-840-3555