



# U.S. BASED SUPPORT

**HOURS: MONDAY - FRIDAY | 8AM - 5PM EST**



[1.410.840.3555](tel:14108403555)



[support@iagoffroad.com](mailto:support@iagoffroad.com)



**VIDEO INSTRUCTIONS**

<https://www.youtube.com/watch?v=hIguULRerek>





## **IAG Pinch Weld Covers For 2021+ Bronco 2 Door**


### **IAG Pinch Weld Covers for 2021+ Bronco 2 Door**

**Part Number: IAG-BDY-F1015**

Congratulations on the purchase of your Pinch Weld Covers, and thank you for choosing IAG Offroad! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

#### **Product includes:**

- 1** (X4) Pinch Weld Covers
- 2** (X2) Logo Plate
- 3** (X4) 10mm Nuts
- 4** (X4) 4mm Allen Bolts

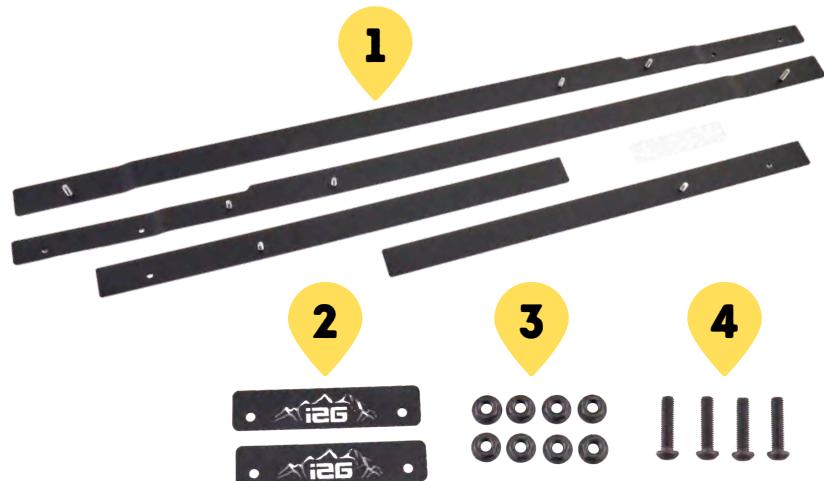

#### **Tools Needed:**

- 4mm Allen Wrench/Socket
- 10mm Wrench/Socket



Scan Me



**Step 1:** Remove the two factory 10mm bolts from the bottom of the Driver Side Front Fender.



**Step 2:** Locate the Front Left Pinch Weld Cover. Note the upward facing notch, and the outward facing jogged bend.



**Step 3:** Locate the Rear Left Pinch Weld Cover. Install the stud of the Front Cover through the hole of the Rear Cover.



**Step 4:** Install the assembled Pinch Weld Covers onto the Pinch Weld.



**Step 5:** Install and tighten two provided 10mm nuts onto the front studs. (10Nm)



**Step 6:** Install and tighten two provided 10mm nuts onto the rear studs. (10Nm)



**Step 7:** Prepare one of the provided Logo Plates and two 4mm Allen Bolts.



**Step 8:** Install the Logo Plate and two provided 4mm Allen Bolts into the Front Fender. (10Nm)



**Step 9:** Repeat for other side.



If you have any questions about the product or install  
please reach out to [support@iagoffroad.com](mailto:support@iagoffroad.com) or call  
410-840-3555