



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagoffroad.com



VIDEO INSTRUCTIONS

<https://www.youtube.com/watch?v=OZ55T-2CDWE>





IAG Pinch Weld Covers For 2021+ Bronco 4 Door


IAG Pinch Weld Covers for 2021+ Bronco 4 Door

Part Number: IAG-BDY-F1016

Congratulations on the purchase of your Pinch Weld Covers, and thank you for choosing IAG Offroad! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Product includes:

1	(X4) Pinch Weld Covers	3	(X4) 4mm Allen Bolts
2	(X2) Logo Plate	4	(X12) 10mm Nuts

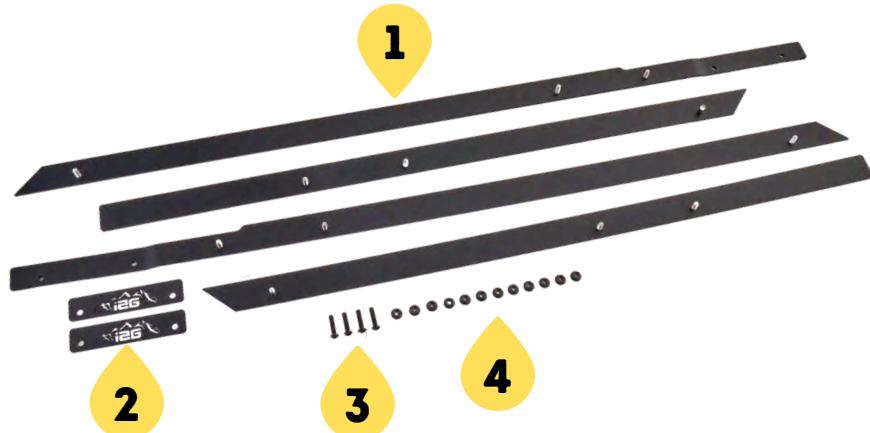

Tools Needed:


- 4mm Allen Wrench/Socket
- 10mm Wrench/Socket



Scan Me




Step 1: Remove the two factory 10mm bolts from the bottom of the Driver Side Front Fender.

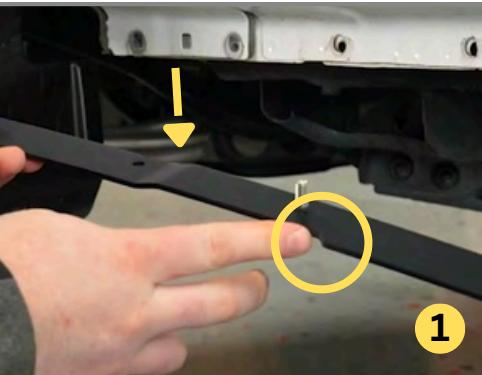


Step 2: Locate the Front Left Pinch Weld Cover. Note the upward facing notch, and the outward facing jogged bend.




Step 3: Install the Pinch Weld Cover onto the front of the Pinch Weld.

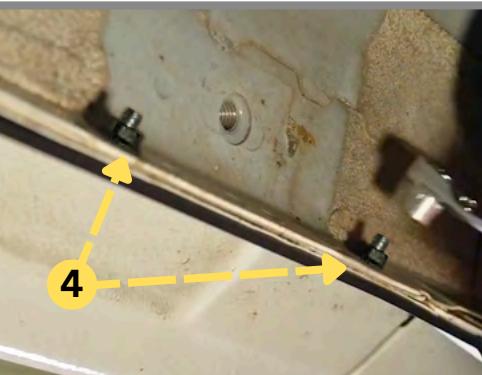

Step 4: Install and tighten two provided 10mm nuts onto the front studs. (10Nm)

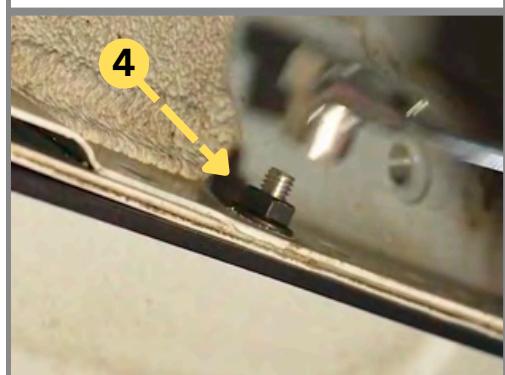

Step 5: Install and tighten provided 10mm nut onto the rear stud. (10Nm)

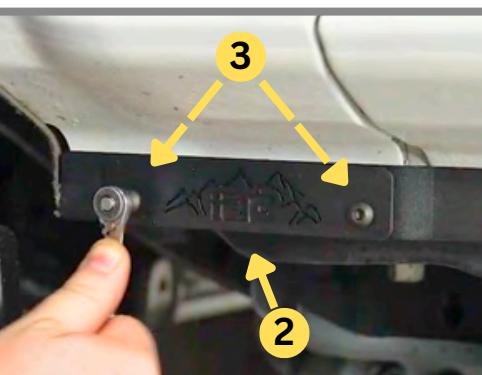


Step 6: Install the Logo Plate and two provided 4mm Allen Bolts into the Front Fender. (10Nm)



Step 7: Locate the Rear Left Pinch Weld Cover. Note the slanted cut.



Step 8: Install the Pinch Weld Cover onto the rear of the Pinch Weld. Align with the Front Pinch Weld Cover.

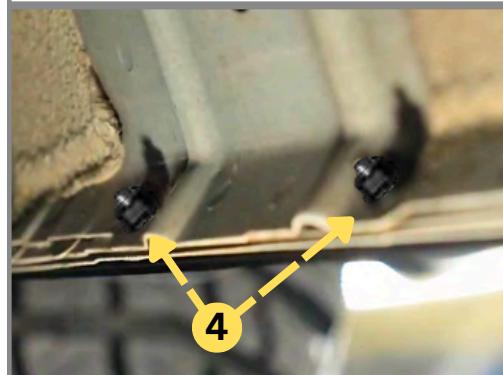

Step 9: Install and tighten two provided 10mm nuts onto the rear studs. (10Nm)



Step 10: Install and tighten provided 10mm nut onto the front stud. (10Nm)
Repeat for other side.



If you have any questions about the product or install
please reach out to support@iagoffroad.com or call
410-840-3555