



## U.S. BASED SUPPORT

**HOURS: MONDAY - FRIDAY | 8AM - 5PM EST**



[1.410.840.3555](tel:14108403555)



[support@iagoffroad.com](mailto:support@iagoffroad.com)



**VIDEO INSTRUCTIONS**

<https://iagoffroad.com/vi/IAG-BDY-F1401>



**SCAN ME**



**IAG OFF-ROAD  
BAJA BULL BAR  
FOR 2021+ BRONCO  
MODULAR BUMPER**



***IAG Off-Road***  
**Baja Bull Bar**

**For 2021+ Bronco Modular Bumper**  
**Part Number: IAG-BDY-F1401**

Congratulations on the purchase of your Bull Bar, and thank you for choosing IAG Off-Road!

These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.

**Tools Needed:**

Socket/Wrench Sizes:


- Torx Plus 40 (IP40)  
Long Socket or Wrench

Scan or click QR code for instruction video:



**Parts Included:**

- 1 IAG Baja Bull Bar**
- 2 (X8) Washers**

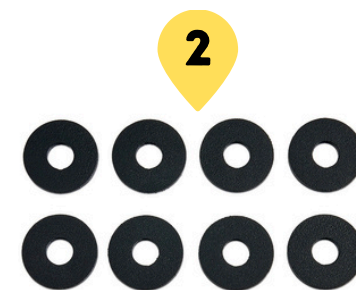


### Step 1

Using a TP 40 Socket, remove the four bolts located on top of the Bumper Ends as shown.



### Step 1 pt. 2

Using a TP 40 Socket, remove the eight bolts located above the Recovery Points as shown.

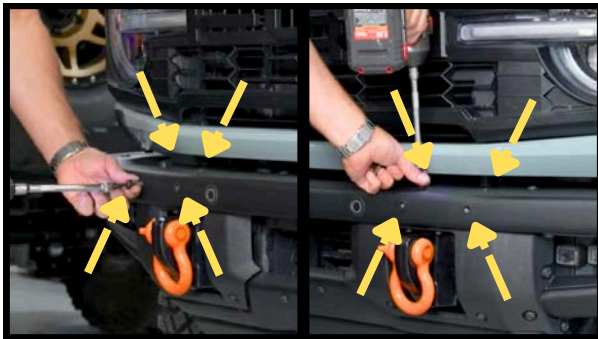

### Step 2

Install the provided Washers onto eight of the factory bolts.



### Step 3

Prepare the IAG Bull Bar, and the Bolts with provided Washers.

Install the Bull Bar onto the vehicle.



### Step 3 pt. 2

Install the Factory Bolts with Washers onto the Bull Bar front brackets.

Install the other four Factory Bolts onto the Bull Bar end brackets.

Do not tighten at this time.



### Step 4

Tighten the four lower bolts of the Bull Bar front brackets.


Torque to 18 ft-lb.



### Step 5

Tighten the four upper bolts of the Bull Bar end brackets.

Torque to 18 ft-lb.

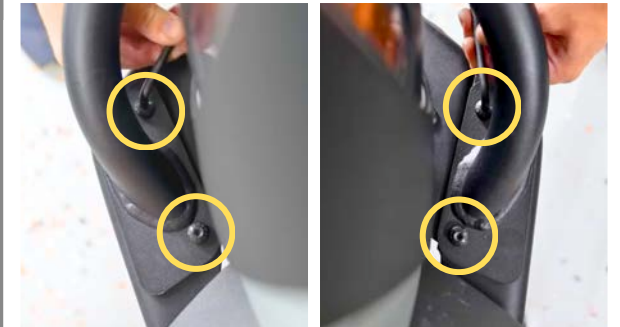

### Step 6

Tighten the four upper bolts of the Bull Bar front brackets.

Torque to 18 ft-lb.

Installation complete!

