



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



1.410.840.3555



support@iagoffroad.com




VIDEO INSTRUCTIONS

**[https://www.youtube.com/
watch?v=ZWdZQXnLD6M](https://www.youtube.com/watch?v=ZWdZQXnLD6M)**



IAG Recovery Points

For 2021+ Bronco Capable Bumper

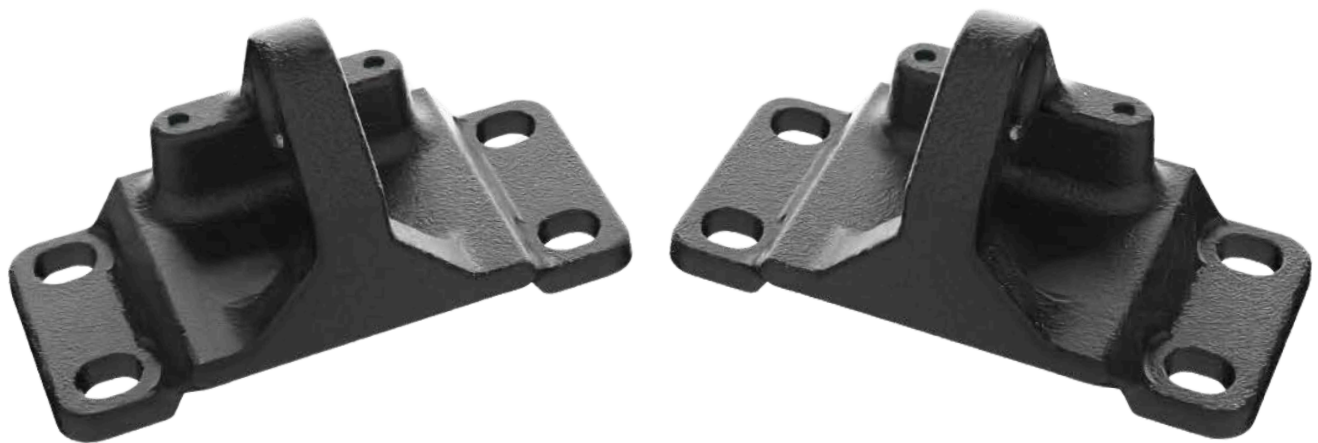



IAG-BDY-F1409 IAG Recovery Points For 2021+ Bronco Capable Bumper

Congratulations on the purchase of your IAG Recovery Points, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code

Tools Needed:

Socket/Wrench Sizes:

- 15mm, 13mm, and 8mm

Other Tools:

- Plastic Trim Pry Tool

Scan or click QR code for
instruction video.



Contents:

1 (X2) Recovery Points





Step 1

Disconnect the Bumper Harness inside the driver side fender.

Depress the tab to release the electrical connector.



Step 2

Using a plastic trim tool, remove the driver side recovery point cover.

Repeat for other side.



Step 3

If equipped, Disconnect the parking sensor from the cover.

Repeat for other side.



Step 4

Remove the six 15mm bumper bolts from the recovery points.



Step 5

Remove the bumper by lifting up, and pulling away from vehicle.



Step 6

On the back of the bumper, remove the two 8mm bolts from the recovery points.

Remove the factory recovery points.



Step 7

Reinstall bumper.



Step 8

Install the IAG Recovery Points. Reuse the factory bumper bolts.

Start all six bumper bolts by hand before tightening.



Step 9

Check bumper alignment.

With the bumper bolts snug, measure the distance from the bumper to fender on both sides.

If measurement is not even adjustment is needed.



Step 10

To adjust bumper alignment, loosen the six bumper bolts approximately half a turn.

Adjust bumper by hand and remeasure until even.



Step 11

Retighten bumper bolts once bumper is aligned.



Step 12

Reconnect the parking sensors, and reinstall the recovery point covers.



Step 13

Reconnect Bumper Harness.



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555