



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagoffroad.com






IAG Lower Light Mount Bar For 2021+ Bronco Capable Bumper

IAG Lower Light Mount Bar for 21+ Bronco Capable Bumper Part Number: IAG-BDY-F1410

Congratulations on the purchase of your IAG Lower Light Mount Bar, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation not required.

Product includes:

- 1** IAG Lower Light Mount Bar
- 2** Right Side Bracket
- 3** Left Side Bracket
- 4** (X8) Torx 45 Bolts

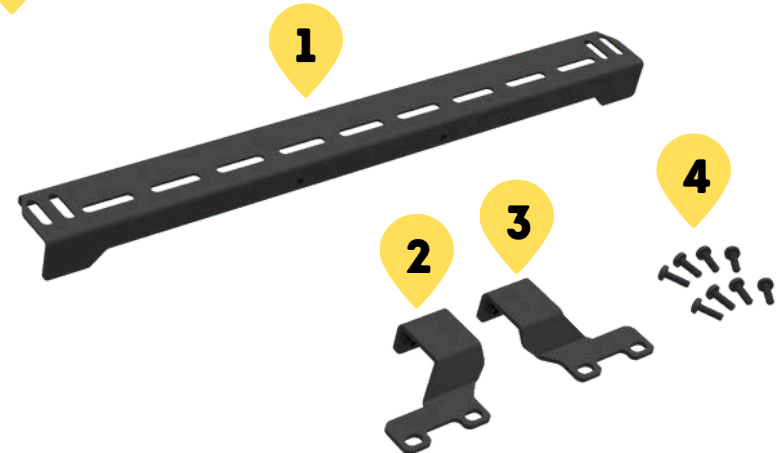

Tools Needed:

Torx 45 Socket or Wrench

Bull Bar Compatibility:

If installing with IAG OE Bull Bar, install the light bar brackets on top of the Bull Bar.

Step 1:

Install the Left Side Bracket onto the driver side IAG Recovery Point with provided bolts, do not tighten. Repeat process for Right Side Bracket.


Step 2:

Install the the IAG Light Mount Bar onto the Brackets with provided bolts, do not tighten.

Step 3:

Adjust the Light Mount Bar with the slotted holes to fit desired light bar.

Once position is set tighten all Bolts.

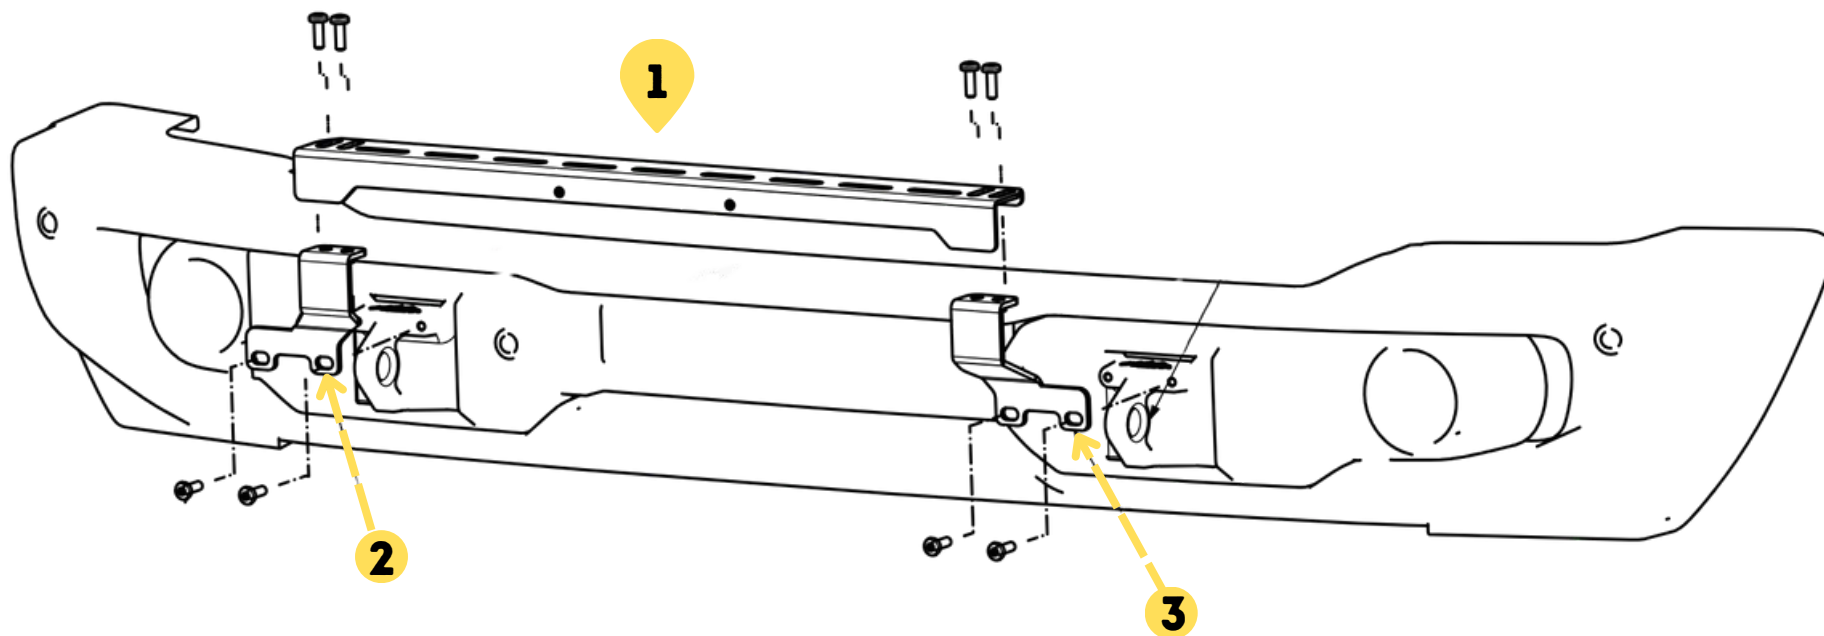

If you have any questions about the installation or product please contact
support@iagoffroad.com or call 410-840-3555