



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagoffroad.com





IAG Pod Light Mounts For 2021+ Bronco Capable Bumper

IAG Pod Light Mounts for 2021+ Bronco Capable Bumper

Part Number: IAG-BDY-F1411

Congratulations on the purchase of your Pod Light Mounts, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Product includes:

- 1 (X2) Pod Light Brackets**
- 2 (X4) Torx 40 Bolts**



Tools Needed:

Torx 40 Socket

Step 1:


Hold the Pod Light Bracket up to the IAG Recovery Point.

Step 2:

Install two of the provided Torx 40 Bolts into the Bracket and tighten. (30Nm)

Step 3:

Install desired Pod Light to the IAG Pod Light Bracket.

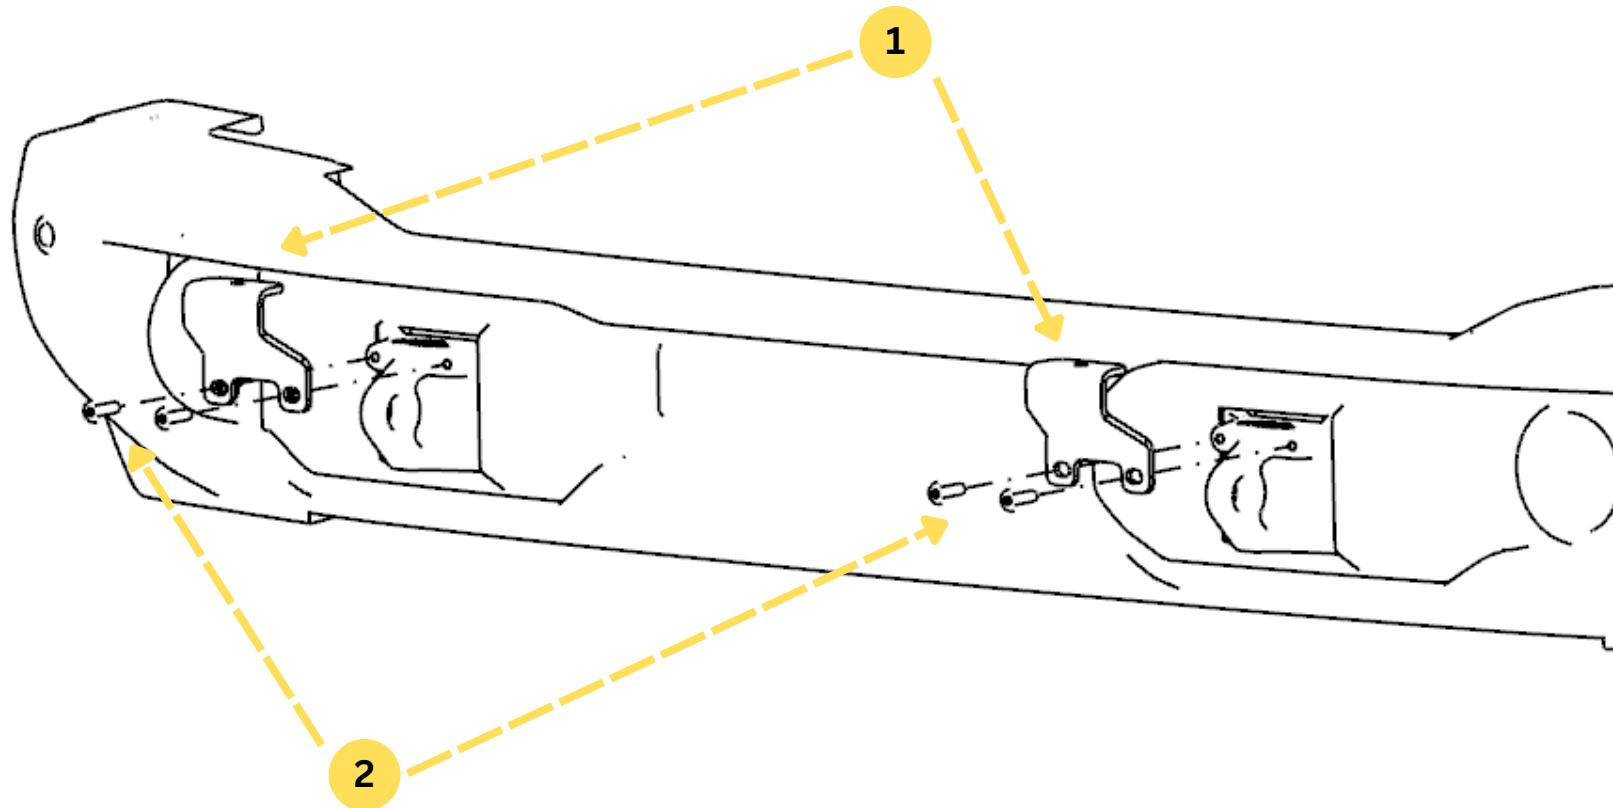

If you have any questions about the installation or product please contact
support@iagoffroad.com or call 410-840-3555