



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



1.410.840.3555



support@iagoffroad.com



VIDEO INSTRUCTIONS

**[https://www.youtube.com/
watch?v=0bCWTeI7aDM](https://www.youtube.com/watch?v=0bCWTeI7aDM)**



IAG Mini Bull Bar & Recovery Points For 2021+ Bronco Capable Bumper





IAG-BDY-F1451 IAG Mini Bull Bar & Recover Points For 2021+ Bronco Capable Bumper

Congratulations on the purchase of your IAG Bull Bar and Recovery Points, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR Code

Tools Needed:

Socket/Wrench Sizes:

- 15mm, 13mm, and 8mm
- Torx 45
- Long Wobble Extension

Other Tools:

- Plastic Trim Pry Tool

Scan or click QR code for
instruction video.



Contents:

1



2



3



1

**Bumper Plate
(Driver Side)**

2

**Bumper Plate
(Passenger Side)**

3

(X2) Recovery Points


4

IAG Mini Bull Bar

5

(X8) Torx 45 Bolt

4

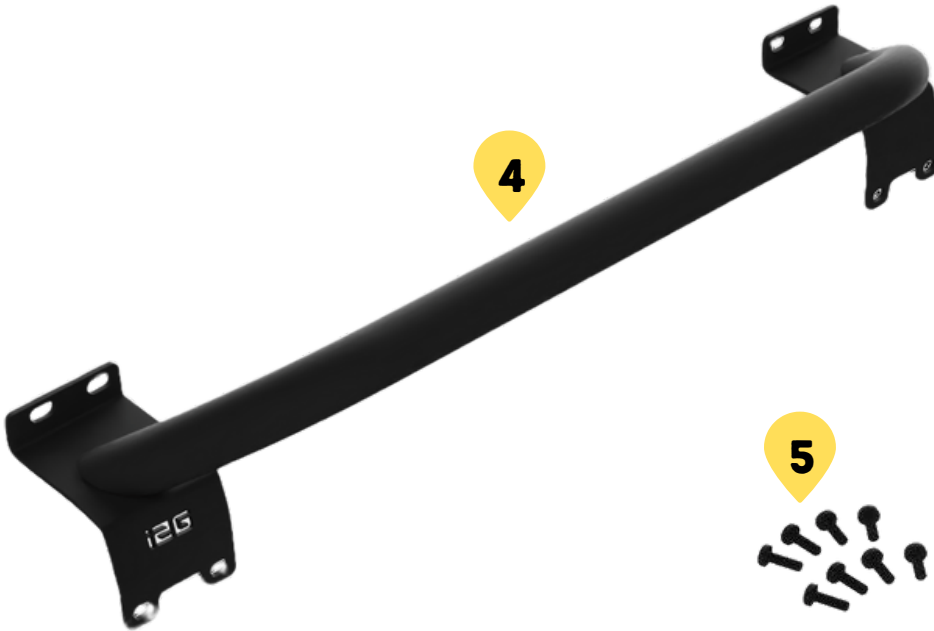

5





Step 1

Disconnect the Bumper Harness inside the driver side fender.

Depress the tab to release the electrical connector.



Step 2

Using a plastic trim tool, remove the driver side recovery point cover.



Step 3

If equipped, Disconnect the parking sensor from the cover.

Repeat for passenger side,



Step 4

Remove the six 15mm bumper bolts from the recovery points.



Step 5


Remove the bumper by lifting up, and pulling away from vehicle.



Step 6

On the back of the bumper, remove the two 8mm bolts from the recovery points.

Remove the factory recovery points.

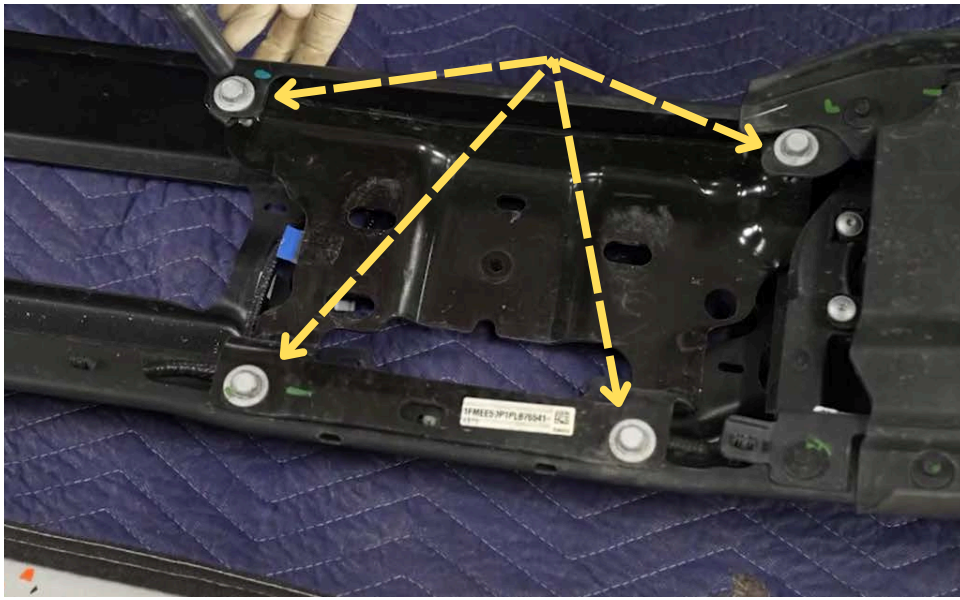

Step 7

On the back of the bumper, remove the four 13mm bolts from the passenger side bumper plate.

Remove the bumper plate.



Step 8

Prepare the passenger side IAG Bumper Plate.

Match the bolt hole orientation from the factory plate.



Step 8 pt. 2

Install the new Bumper Plate. Reuse the factory hardware, and tighten.

Repeat install for Bumper Plate on driver side.



Step 9

Reinstall bumper.



Step 10

Install the IAG Recovery Points. Reuse the factory bumper bolts.

Start all six bumper bolts by hand before tightening.



Step 11

Check bumper alignment.

With the bumper bolts snug, measure the distance from the bumper to fender on both sides.

If measurement is not even adjustment is needed.



Step 12

To adjust bumper alignment, loosen the six bumper bolts approximately half a turn.

Adjust bumper by hand and remeasure until even.



Step 13

Retighten bumper bolts once bumper is aligned.



Step 14

Reconnect the parking sensors, and reinstall the recovery point covers.

Reinstall the Bumper Harness.

Bull Bar Installation

Step 15:


With the help of a second person, hold the Mini Bull Bar up to the bumper.

Step 16:

Install the provided bolts into the IAG Recovery Points and Bumper Plates by hand, do not tighten.

Step 17:

Once all the bolts are started by hand, tighten the bolts with a Torx 45 Socket and Wobble Extension. Incrementally tighten the bolts until snug. (25Nm)

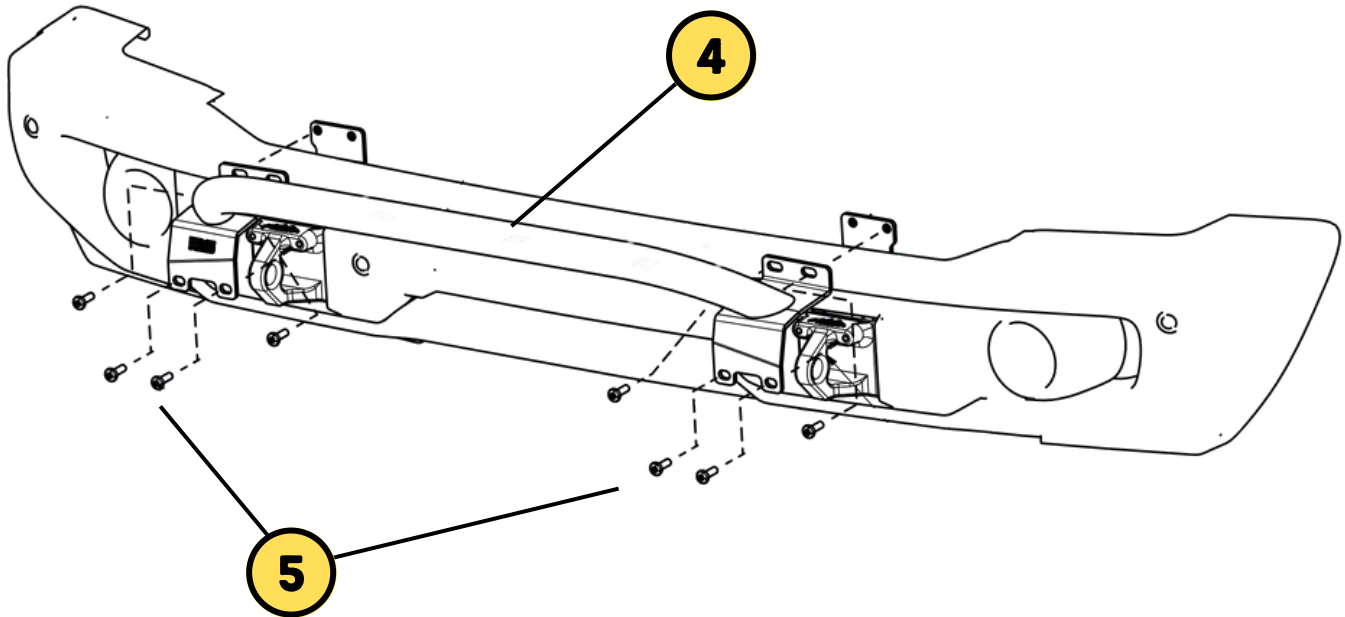

Fitment Concerns:

If the Bull Bar bolt holes do not align with the Recovery Points, Recovery Points may need adjusted. To align the Recovery Points, slightly loosen the six bumper bolts, install the Bull Bar with the Recovery Points loose. Once the Bull Bar is installed retighten the bumper bolts.



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555