



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagoffroad.com



VIDEO INSTRUCTIONS

<https://www.youtube.com/watch?v=W6w95XiciqA>






IAG V3 Drop Step For 2021+ Bronco

IAG V3 Drop Step for 2021+ Bronco

Part Number: IAG-BDY-F2229

Congratulations on the purchase of your Drop Step, and thank you for choosing IAG Offroad! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Product includes:

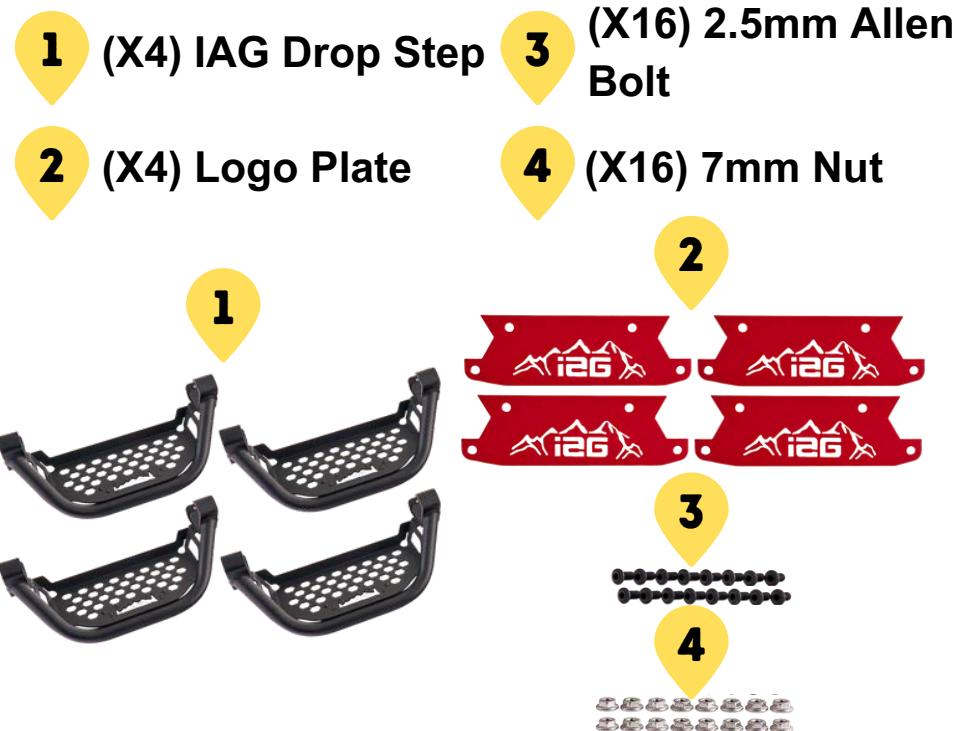

Tools Needed:

- 3mm Allen Wrench
- 10mm Wrench
- 2.5mm Allen Wrench
- 7mm Wrench



Scan Me



Step 1: Prepare the IAG Drop Step. Back out the mounting studs by hand until the end is flush with the bracket.



Step 2: Install the IAG Drop Step onto the front of the factory Rock Rail. Adjust step to desired position.



Step 7: Using a 3mm Allen Wrench, tighten the Mounting Studs until snug against the Rock Rail.




Step 8: Using a 10mm Wrench, tighten the Jam Nuts until snug.



Step 3: Using a 3mm Allen Wrench, tighten the Mounting Studs until snug against the Rock Rail.



Step 4: Using a 10mm Wrench, tighten the Jam Nuts until snug.

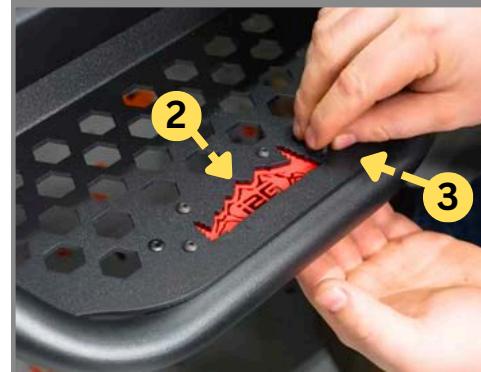

Step 9: Prepare the IAG Logo Plate and four provided 2.5mm Allen Bolts. Align the Logo Plate and install Bolts.



Step 10: Install provided 7mm nuts onto the Allen Bolts and tighten. Repeat for other side.



Step 5: Prepare the IAG Drop Step. Back out the mounting studs by hand until the end is flush with the bracket.



Step 6: Install the IAG Drop Step onto the rear of the factory Rock Rail. Adjust step to desired position.



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555