

# ***IAG Rock Armor Front Skid Plate***

***For 21+ Ford Bronco***





## IAG-BDY-F2300 Rock Armor Front Skid Plate for 21+ Ford Bronco

Congratulations on the purchase of your IAG Rock Armor Skid Plate, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.




**1** Front skid plate

**2** x5 6mm allen bolts

**3** x5 Washers

**Tools needed:** 15mm and 6mm socket

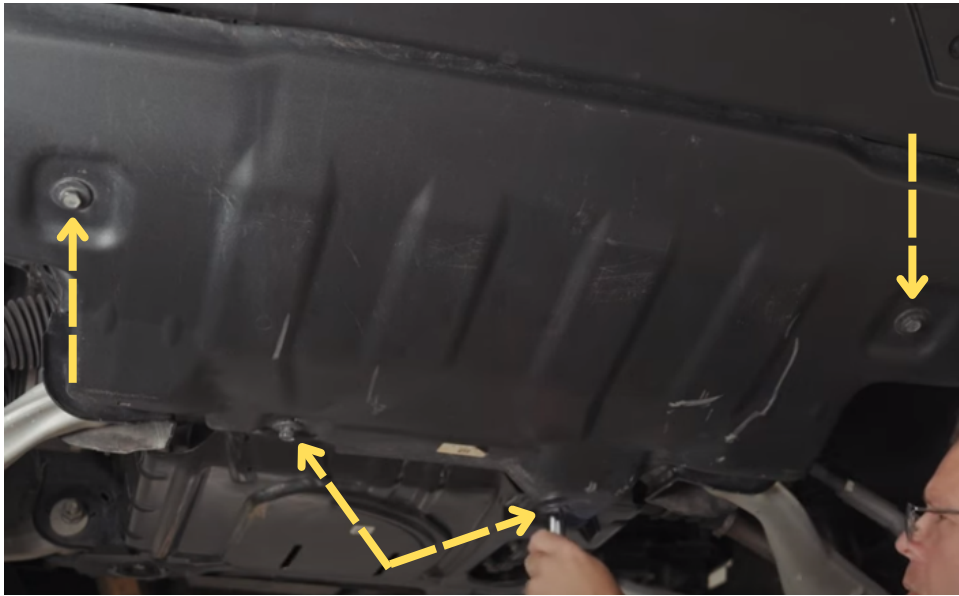


### Step 1

Remove the factory skid plate by removing the two front 15mm bolts and **loosen** the two rear 15mm bolts.




### Step 2

Remove the skid plate by sliding it off the back two 15mm bolts.

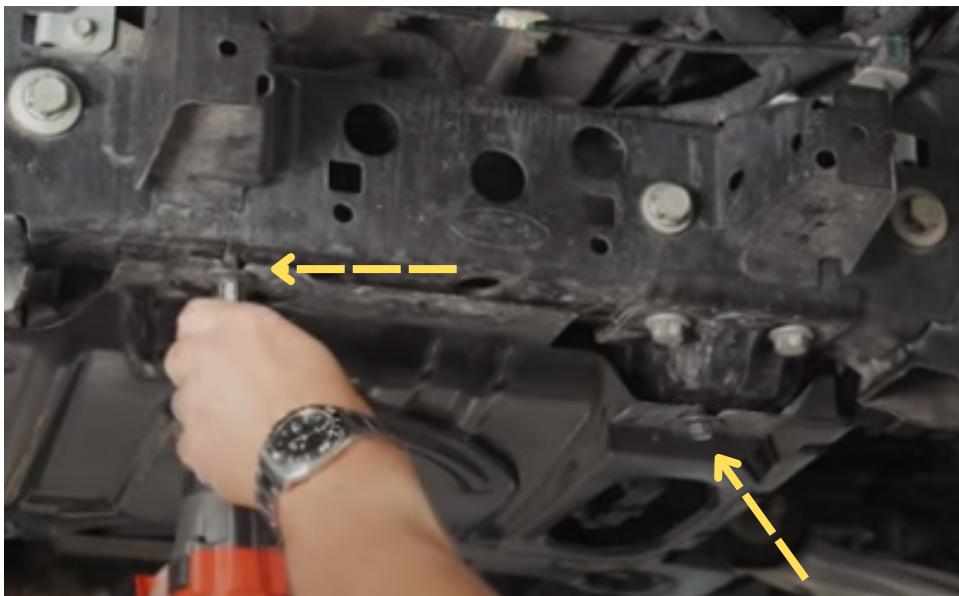

### Step 3

Then remove the two rear 15mm bolts.

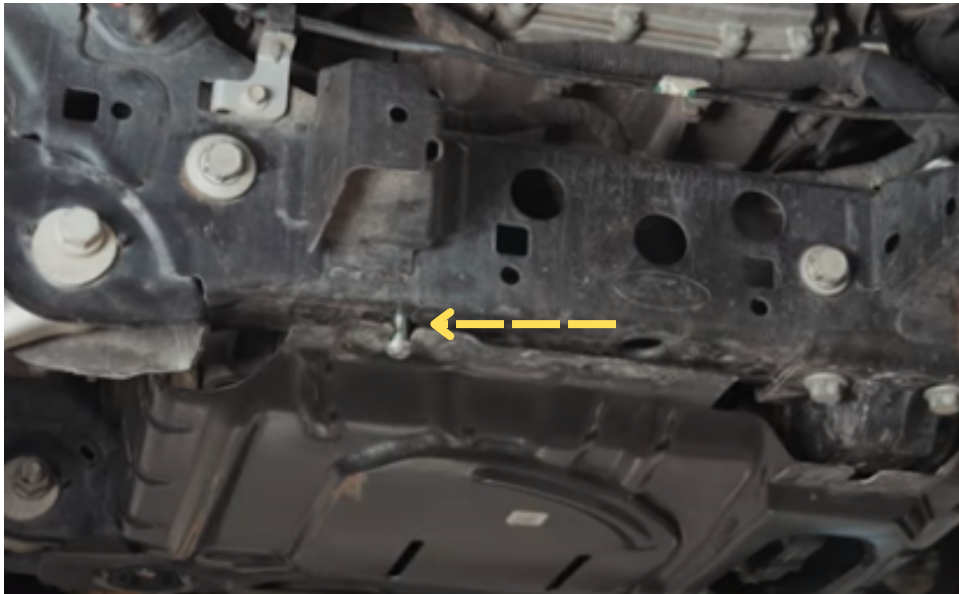

#### Step 4

Install **one** 6mm allen bolt with washer for the rear of the skid plate to slide onto.

**Note:** Do not fully tighten the 6mm bolt.



#### Step 5

Slide the new skid plate onto the rear 6mm allen bolt.



#### Step 6


Install **two** 6mm allen bolts with washers at the front of the skid plate.

**Note:** Line up the two front holes with the holes on the new skid plate.



#### Step 7

Install **one** 6mm allen bolt with washer at the rear of the skid plate.

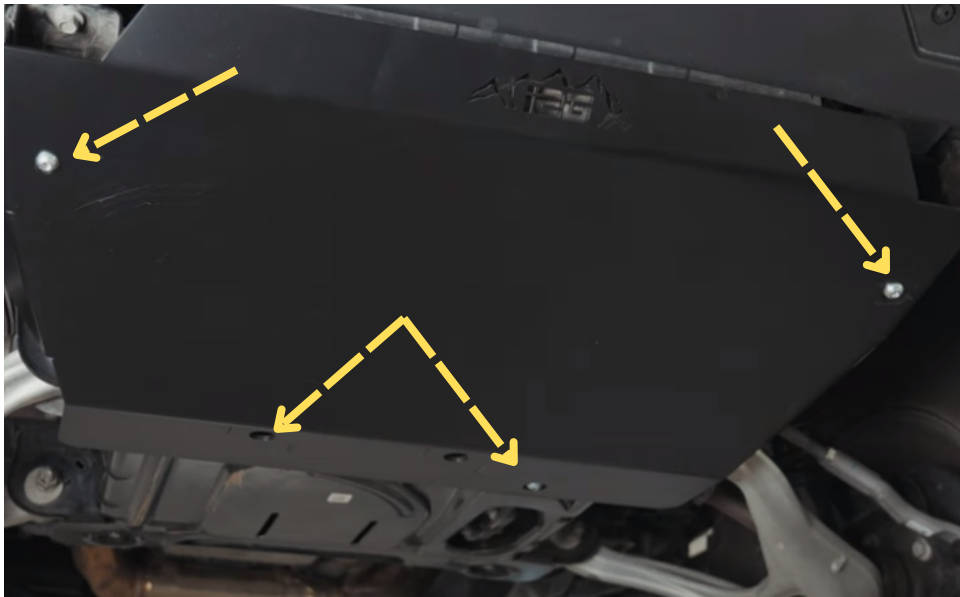

#### Step 8

Tighten all of the 6mm allen bolts.



If you have any questions about the product or install please reach out to [support@iagoffroad.com](mailto:support@iagoffroad.com)