



## U.S. BASED SUPPORT

**HOURS: MONDAY - FRIDAY | 8AM - 5PM EST**



**[1.410.840.3555](tel:14108403555)**




**[support@iagoffroad.com](mailto:support@iagoffroad.com)**



**VIDEO INSTRUCTIONS**

**<https://iagoffroad.com/vi/IAG-BDY-F2300>**

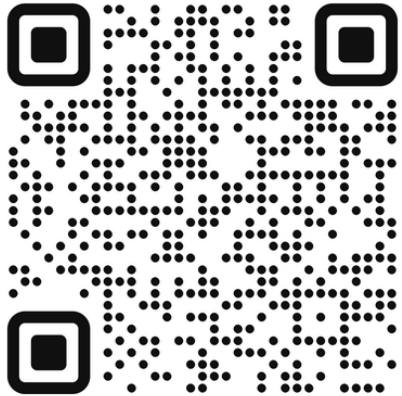

**SCAN ME**



**IAG ROCK SHIELD™  
FRONT SKID PLATE  
FOR 2021+ BRONCO**



**IAG Rock Shield™  
Front Skid Plate  
For 2021+ Bronco**

**Part Number: IAG-BDY-F2300**

Congratulations on the purchase of your Skid Plate, and thank you for choosing IAG Off-Road!

These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.

**Tools Needed:**

Socket/Wrench Sizes:

- 15mm
- 6mm Allen

Scan or click QR code for instruction video:



Revision Date: 6/11/2026

**Parts Included:**

- 1 IAG Front Skid Plate**
- 2 (X5) 6mm Allen Bolt  
(X5) Washer**



### Step 1

Locate the factory Front Skid Plate.

Using a 15mm socket, loosen the two rear bolts of the factory Skid.


Do not fully remove.



### Step 1 pt. 2

Using a 15mm Socket, remove the two front bolts of the factory skid.

Support the front of the Skid Plate by hand to prevent from falling.

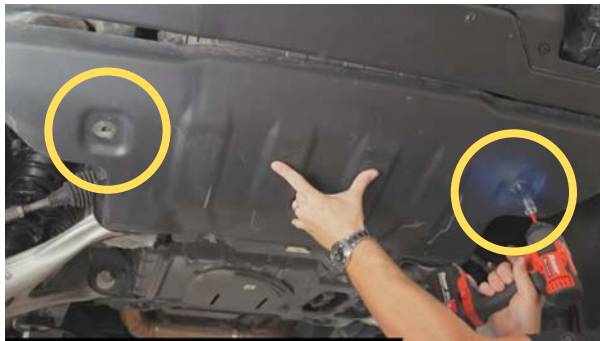

### Step 2

Remove the factory Front Skid Plate.

Slide the Skid Plate forward off of the rear bolts and pull down.



### Step 3

Using a 15mm Socket, fully remove the two rear 15mm Bolts.




### Step 4

Prepare provided 6mm Allen Bolt and Washer.

Install the Bolt into the passenger side rear bolt hole as shown.

Thread on but do not fully tighten.

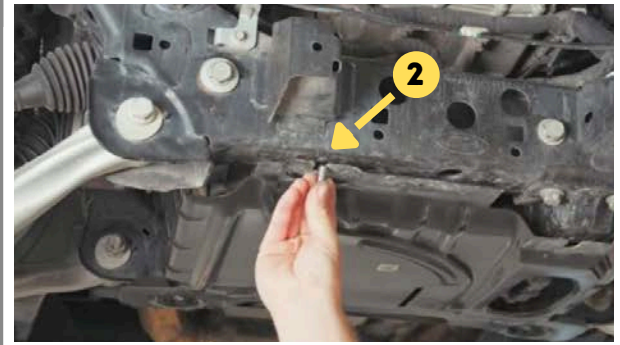

### Step 5

Prepare the IAG Skid Plate.


With the help of a second person, slide the slotted tab of the Skid Plate onto the rear 6mm Allen Bolt.



### Step 7

Prepare provided 6mm Allen Bolts and Washers.

Install the Allen Bolts into the Skid Plate as shown.

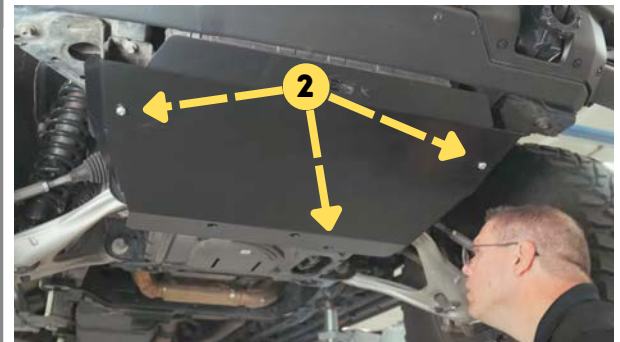

### Step 8

Ensure Skid Plate is properly Aligned. Tighten the Allen Bolts evenly until snug.

Torque to 25 ft-lb.

**Installation Complete!**

