

IAG Rock Armor Transmission Skid Plate

For 21+ Ford Bronco






IAG-BDY-F2302 IAG Rock Armor Transmission Skid Plate for 21+ Ford Bronco

Congratulations on the purchase of your IAG Rock Armor Transmission Skid Plate, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Video instructions can be found here:

<https://youtu.be/75J1fppmuvo?si=g4l71b9d06LXgJjt>

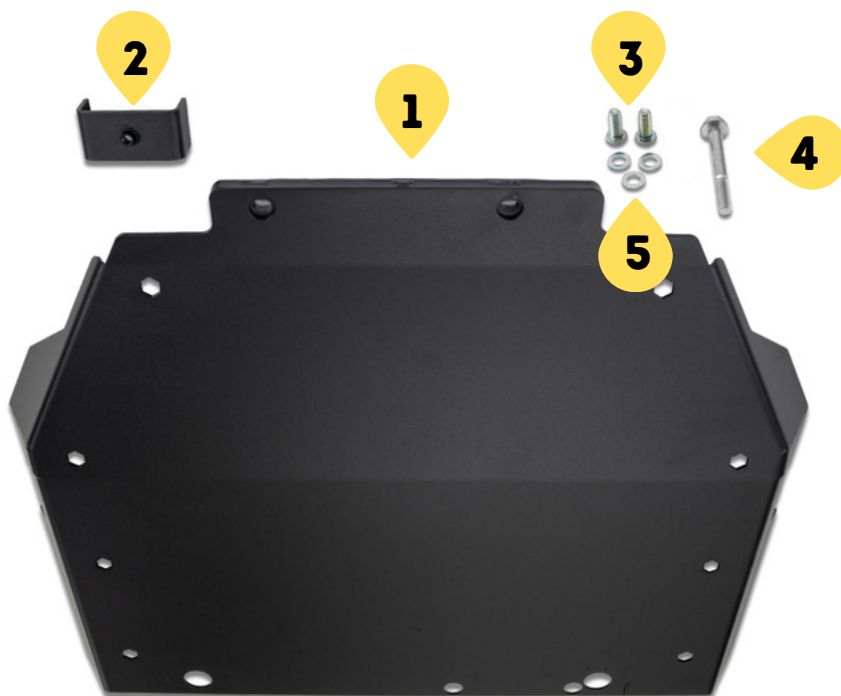

1 Transmission skid plate

2 Nut bracket


3 x2 6mm allen bolts

4 15mm hex bolt

5 x3 washers


Tools needed: 18mm socket, 15mm socket and 6mm allen wrench

Note: We recommend a second set of hands for easier install.

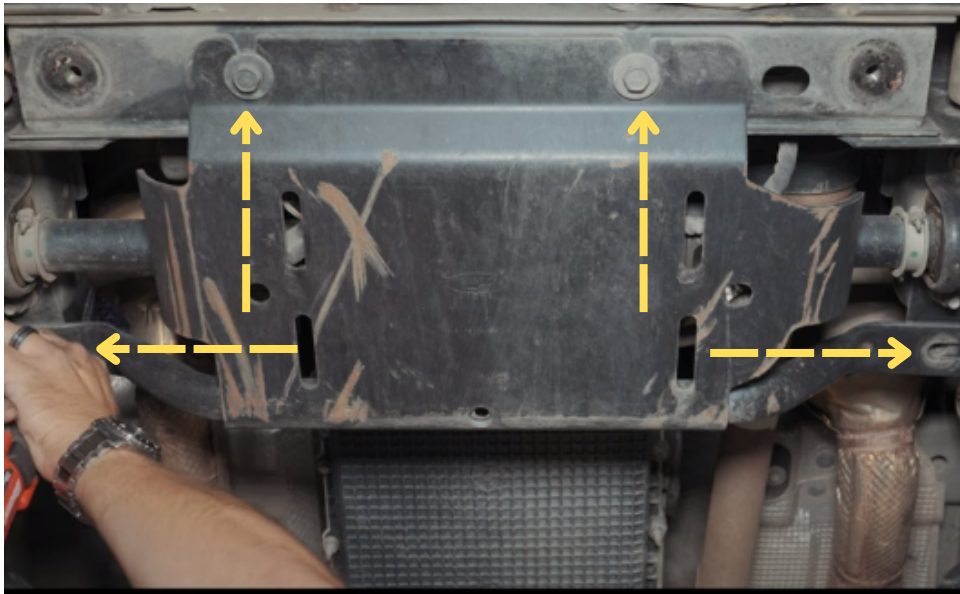

Step 1


IF vehicle is equipped with factory skid plate remove the four 15mm bolts and remove the factory skid plate.

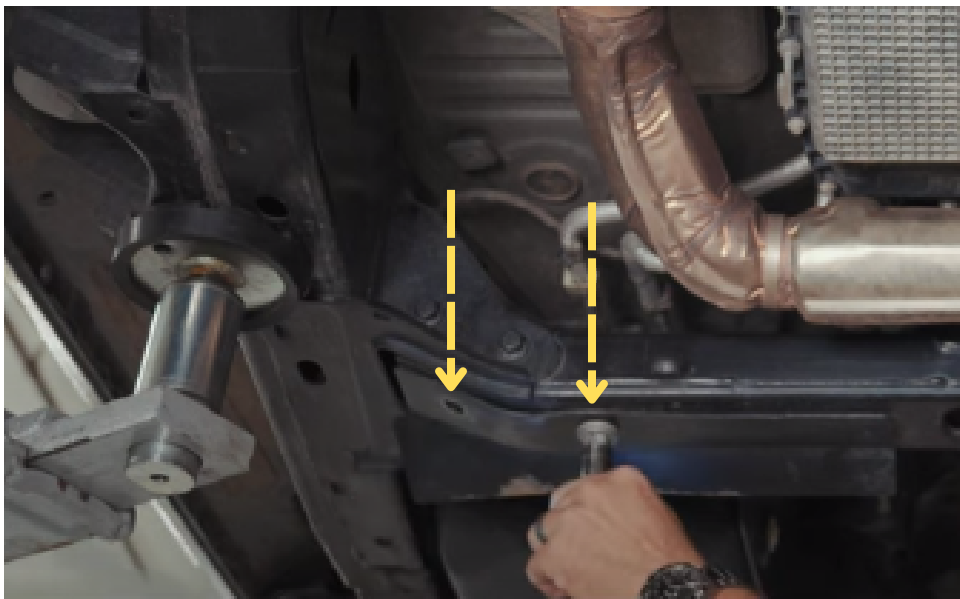

Step 2

Remove the two factory 18mm fuel tank deflection plate bolts.

Note: Keep one 18mm bolt for future step.

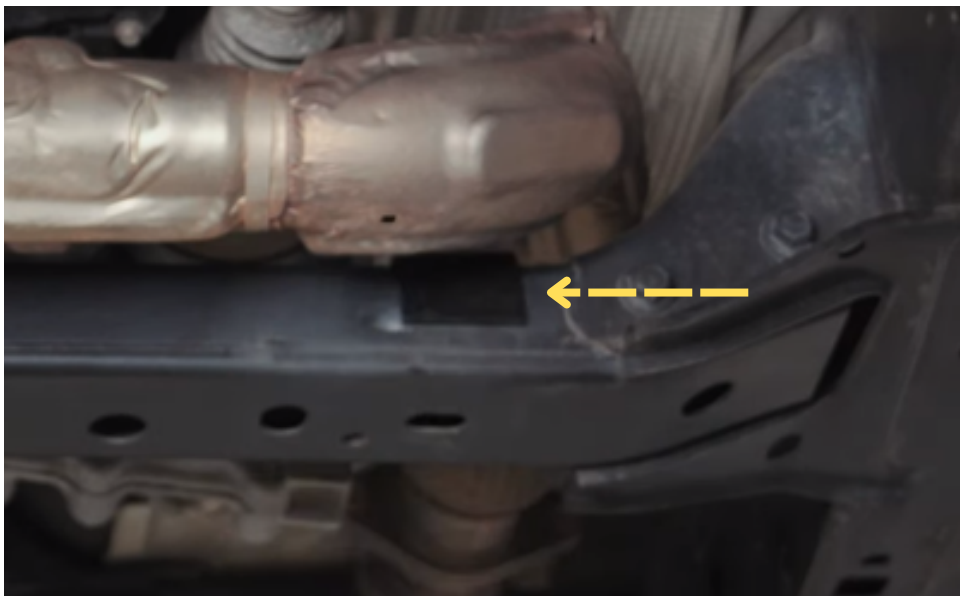

Step 3

Install the nut bracket by sliding it onto the frame from the backside.






Step 4


Align new skid plate with factory holes.

1

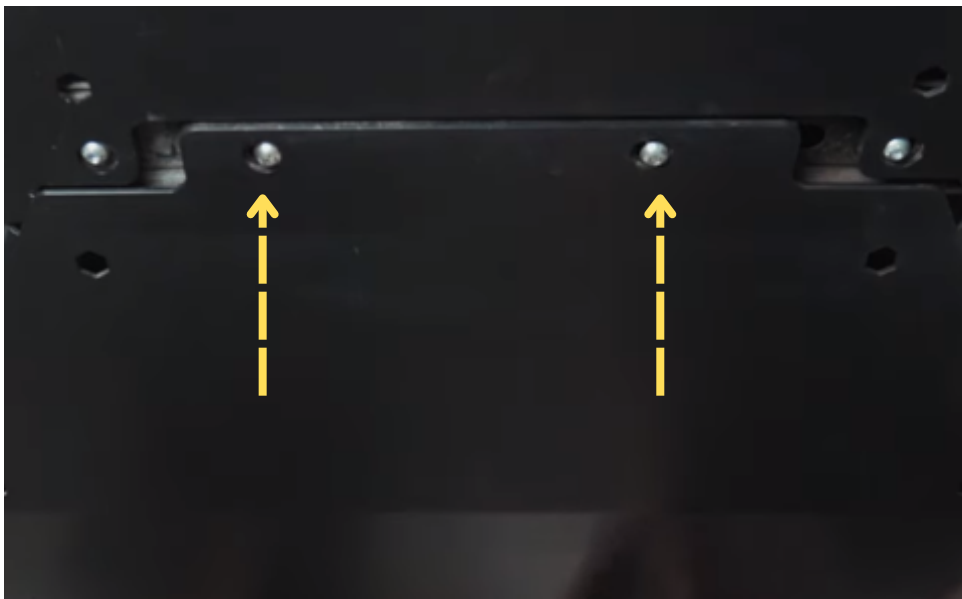

Step 5

Install two 6mm bolts and washers at the front of the transmission skid plate.

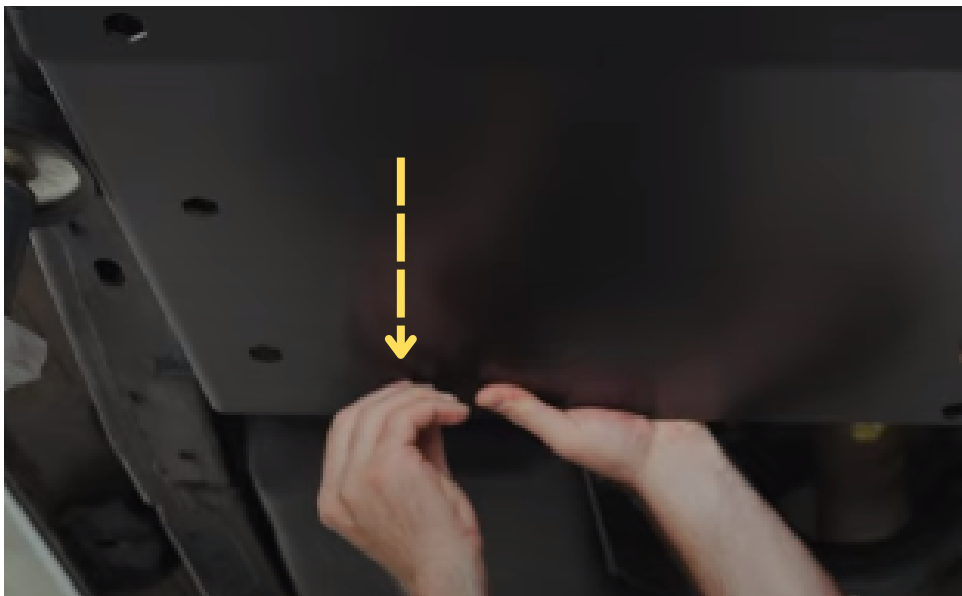


Step 6

Reinstall one 18mm factory bolt from the deflection plate.



Step 7

Install the 15mm hex bolt with washer into the nut bracket.

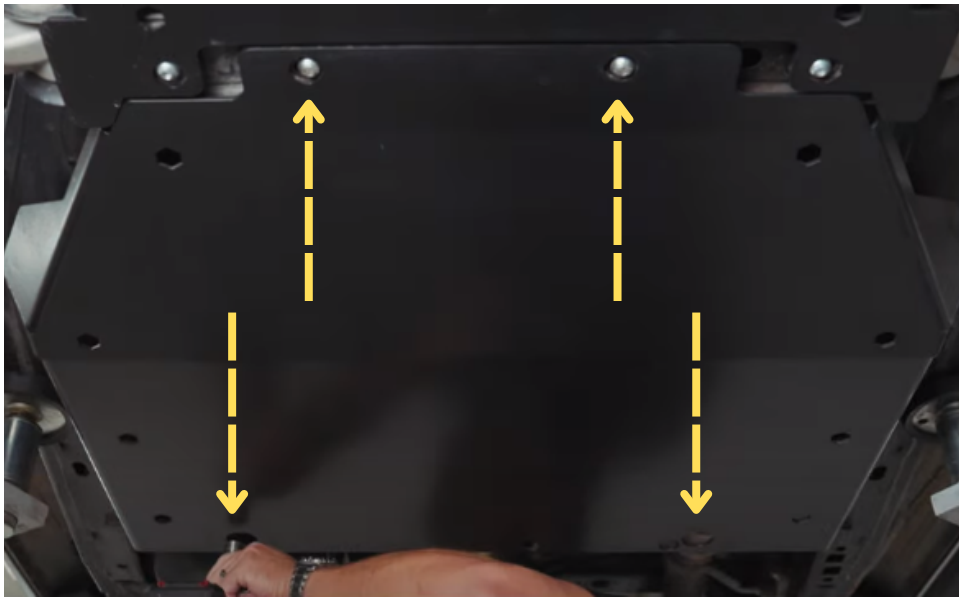

Step 8

Tighten the two 6mm allen bolts along with the 18mm factory bolt and the 15mm hex bolt.



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555