



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)




support@iagoffroad.com



VIDEO INSTRUCTIONS

<https://iagoffroad.com/vi/IAG-BDY-F2302>

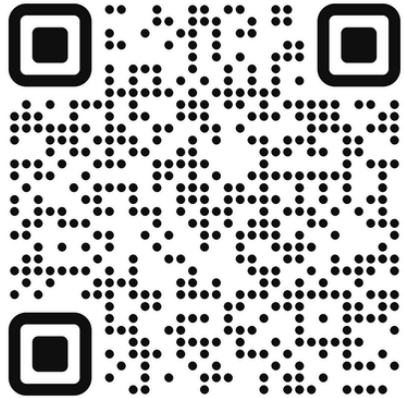

SCAN ME



**IAG ROCK SHIELD™
TRANSMISSION SKID PLATE
FOR 2021+ BRONCO**



**IAG Rock Shield™
Transmission Skid Plate
For 2021+ Bronco**

Part Number: IAG-BDY-F2302

Congratulations on the purchase of your Skid Plate, and thank you for choosing IAG Off-Road!

These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.

Tools Needed:

Socket/Wrench Sizes:

- 15mm, 18mm
- 6mm Allen

Scan or click QR code for instruction video:



Revision Date: 6/11/2026

Parts Included:


- 1** IAG Transmission Skid Plate
- 2** Bracket
- 3** (X2) 6mm Allen Bolt
- 4** 15mm Bolt
- 5** (X3) Washer



Step 1

Remove factory Transmission Skid Plate if equipped.

Using a 15mm Socket, remove the four bolts that hold the factory Skid. Remove factory Skid.

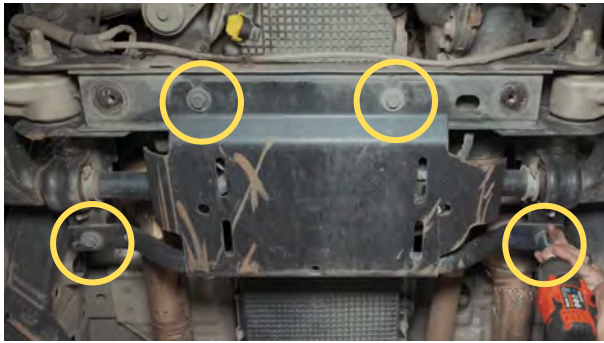


Step 1 pt. 2

Remove Factory Splash Shield.

Using a 18mm Socket, remove the two bolts that hold the factory Shield. Remove factory Shield.


Save one of these bolts for future step.



Step 2

Prepare the provided Nut Bracket.

Install the Nut Bracket onto the driver side Transmission Crossmember as shown.

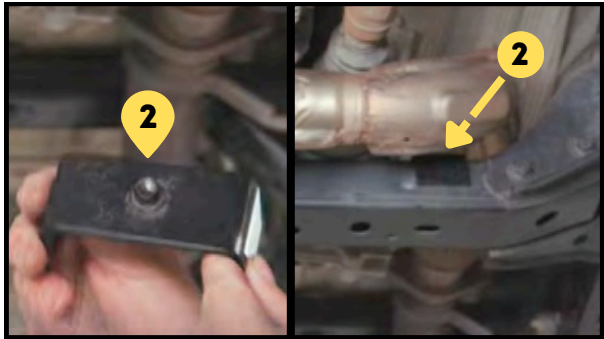


Step 3

Prepare the IAG Skid Plate.

With the help of a second person, Hold the Skid Plate up the the vehicle.


Ensure you have the provided Bolts within reach.



Step 4

Prepare provided 6mm Allen Bolts and Washers.


Install the Bolt into the front bolt holes as shown.

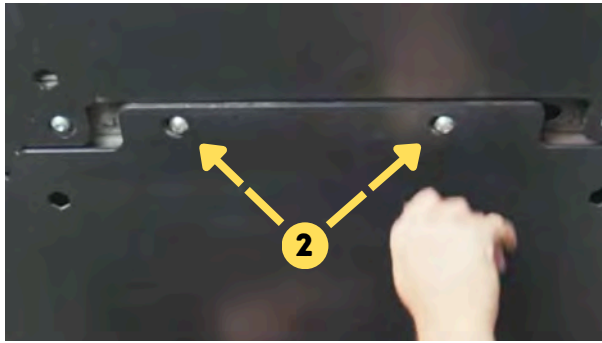

Step 5

Prepare factory 18mm Bolt.


Install the Bolt into the passenger side rear bolt hole as shown.



Step 6

Prepare provided 15mm Bolt and Washer.

Install the Bolt into the driver side rear bolt hole as shown.

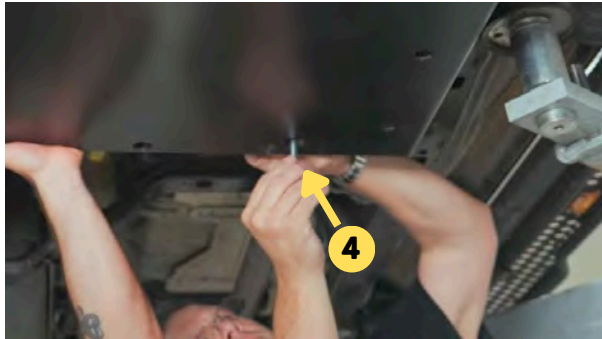

Step 7

Ensure Skid Plate is properly Aligned.

Tighten the Bolts evenly until snug.

Torque to 25 ft-lb.

Installation Complete!

