

# ***IAG Rock Armor Transfer Case Skid Plate***

***For 21+ Ford Bronco***






## IAG-BDY-F2303 IAG Rock Armor Transfer Case Skid Plate for 21+ Ford Bronco

Congratulations on the purchase of your IAG Rock Armor Transfer Case Skid Plate, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.


Video instructions can be found here:

[https://youtu.be/aE\\_36izkLH4?si=2FRCYfpFWmREPI9r](https://youtu.be/aE_36izkLH4?si=2FRCYfpFWmREPI9r)

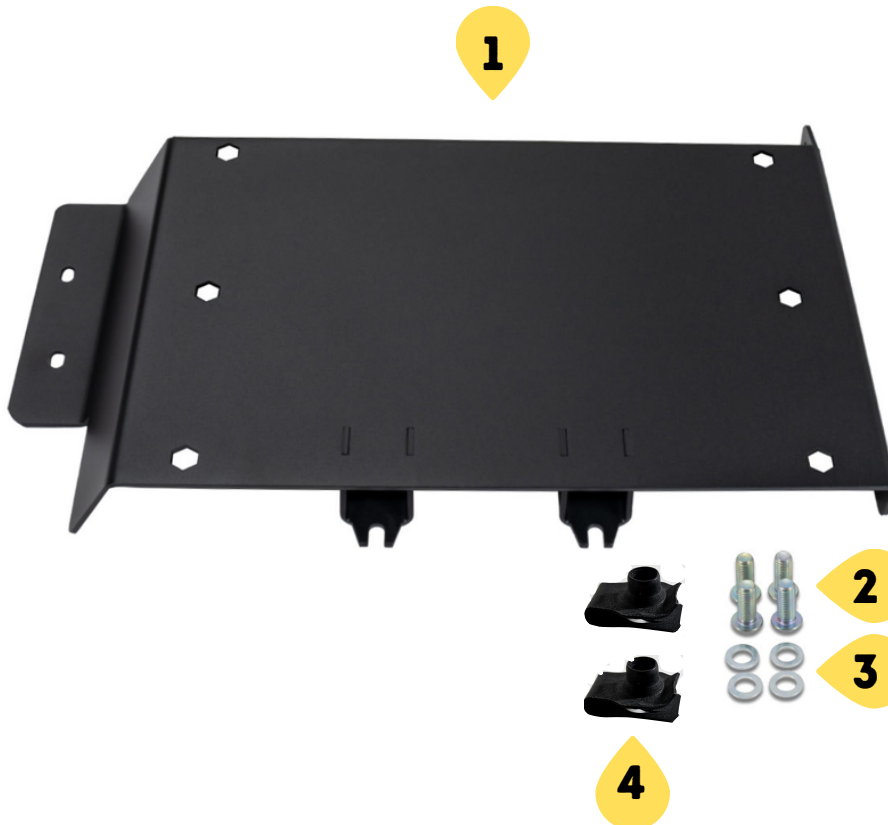


- 1** Transfer case skid plate
- 2** x4 6mm allen bolts
- 3** x4 washers
- 4** x2 clip nuts

**Tools needed:** 15mm socket 6mm allen wrench

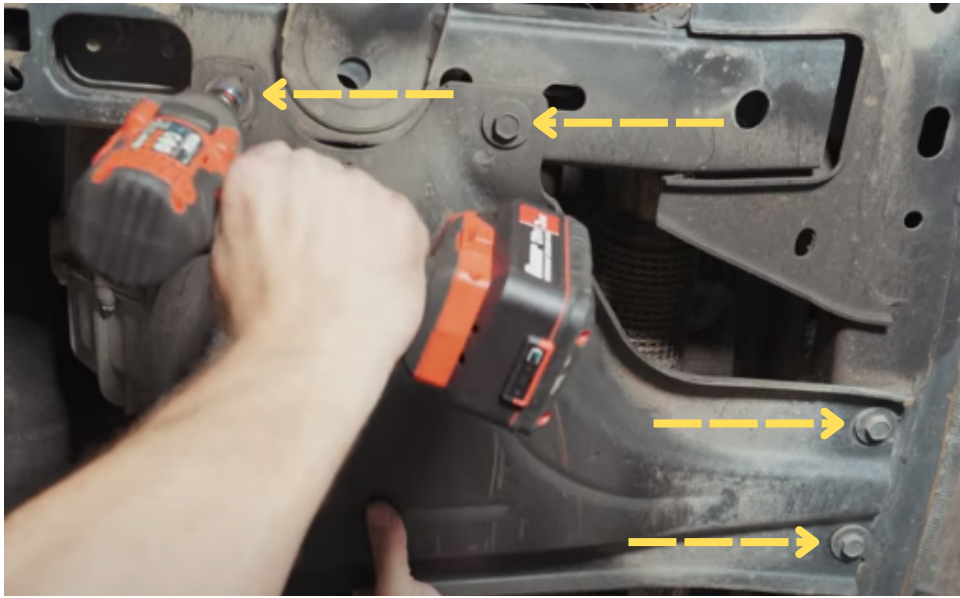


### Step 1

**IF** vehicle is equipped with skid plates remove the four 15mm bolts and remove the factory skid plate.

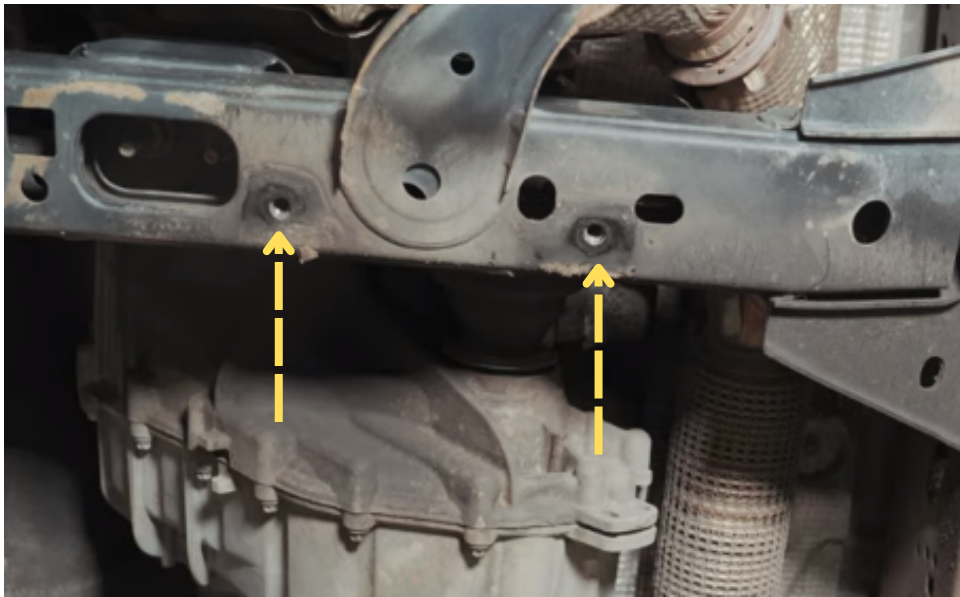

### Step 2

Install two 6mm allen bolts and washers half way.

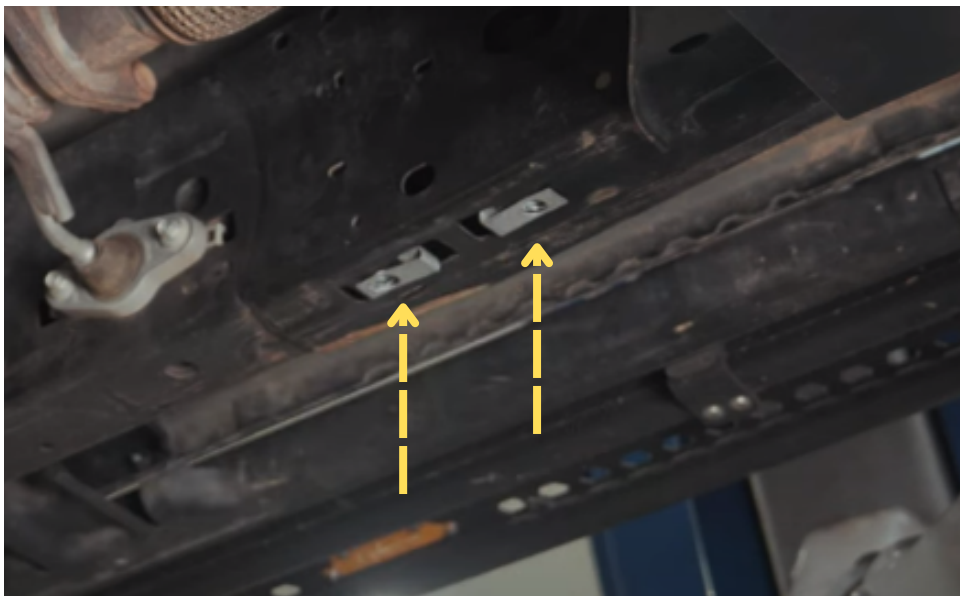

### Step 3

Install two clip nuts if vehicle was **NOT** equipped with skid plates.

4






#### Step 4


Slide the transfer skid plate onto the 6mm allen bolts.

1

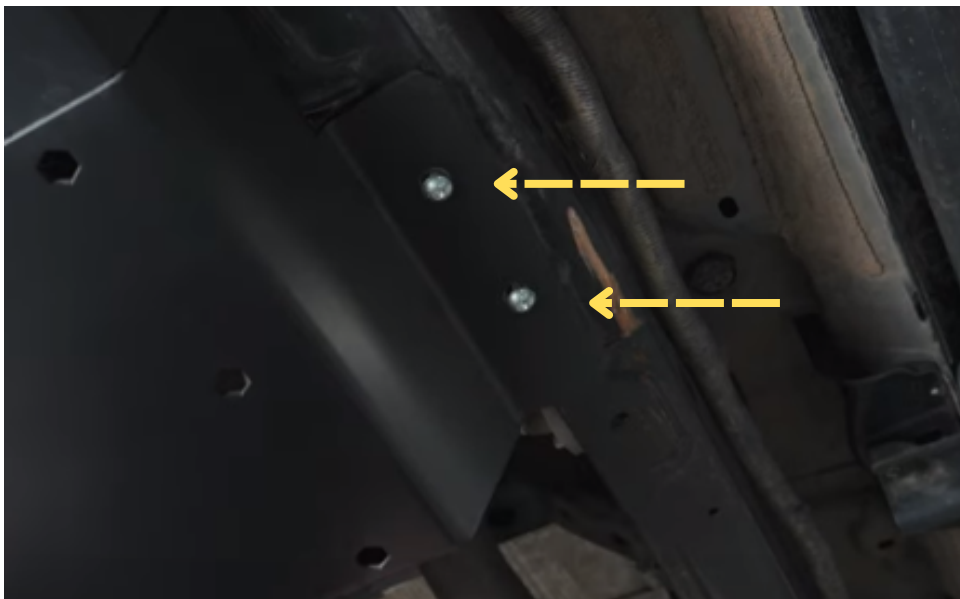

#### Step 5

Install two 6mm allen bolts and washers into each of the clip nuts.

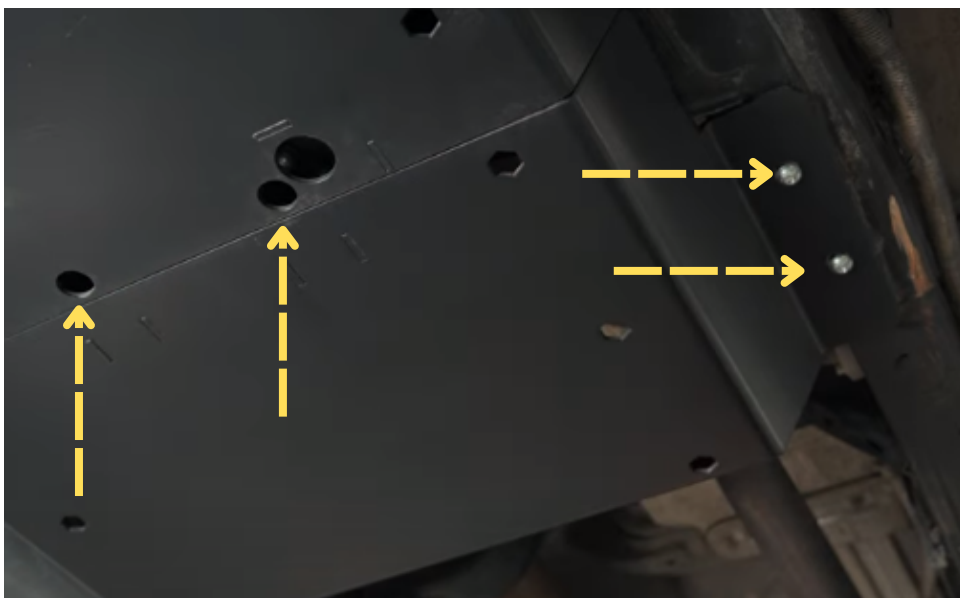

#### Step 3

Tighten all four 6mm allen bolts.



If you have any questions about the product or install please reach out to [support@iagoffroad.com](mailto:support@iagoffroad.com) or call 410-840-3555