

IAG Rock Armor Rear Lower Trailing Arm Skid Plate
For 21+ Ford Bronco






IAG-BDY-F2307 IAG Rock Armor Rear Lower Trailing Arm Skid Plate for 21+ Ford Bronco

Congratulations on the purchase of your IAG Rock Armor Rear Lower Trailing Arm Skid Plate, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Video instructions can be found here:

<https://youtu.be/NzxoG0ShHvQ?si=Psp2JkDMfUUMpAJu>

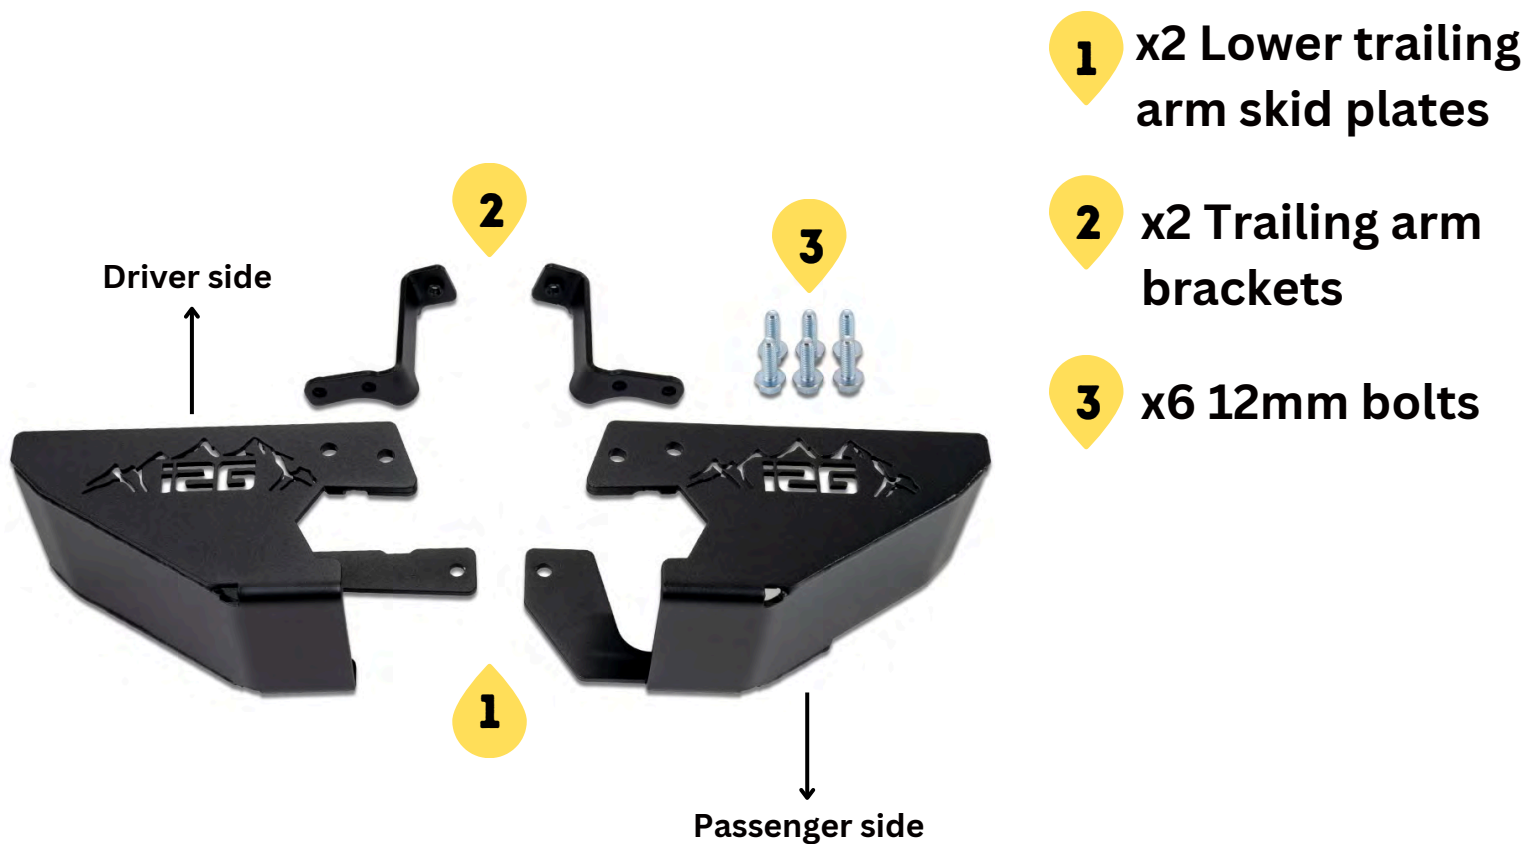

Tools needed: 12mm socket



Step 1

On the drivers side install the trailing arm bracket by sliding it in from behind the trailing arm.



Note: Line up the two holes on the trailing arm bracket with the two holes on the trailing arm.



Step 2

Slide the drivers side trailing arm skid plate onto the trailing arm mount.



Note: Hold the trailing arm bracket in place.



Step 3

Install a 12mm bolt to the inner side of the skid plate.

Note: Do not tighten the 12mm bolt.



Step 4

Install two 12mm bolts to the **outer** side of the skid plate.

Note: Do not tighten the 12mm bolts.



Step 5

Tighten the two 12mm bolts.



Step 6

Tighten the 12mm bolt on the inner side of the skid plate.

Repeat process for the other side.



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555