



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagoffroad.com



VIDEO INSTRUCTIONS

<https://www.youtube.com/watch?v=ZdIHUBt1L4A>





IAG Rear Lower Trailing Arm Skid Plates For 2021+ Bronco

IAG Lower Trailing Arm Skids for 2021+ Bronco

Part Number: IAG-BDY-F2315

Congratulations on the purchase of your Skid Plates, and thank you for choosing IAG Offroad! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Product includes:

- | | |
|---|--|
| 1 Passenger Side Skid
(Short) | 4 (X2) Spacers
(Only required for some vehicles) |
| 2 Driver Side Skid
(Long) | 5 (X2) 8mm Allen Bolts
(X2) Washers |
| 3 (X2) Brackets | 6 (X6) 12mm Bolts |



Tools Needed:

8mm Allen Wrench/Socket
12mm Wrench/Socket






Step 1: Install the Driver Side Skid Plate onto the lower rear trailing arm.



Step 2: Install the 8mm Allen Bolt with Washer into the Skid, do not tighten.

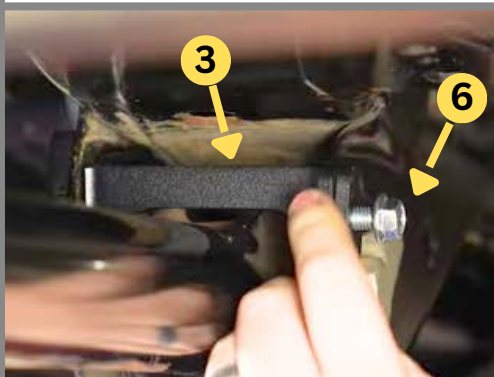

Step 3: Install the provided bracket onto the Skid. Ensure notch is facing down. Install 12mm bolt inside, do not tighten.



Step 4: Install two 12mm bolts through the outside of the Skid into the Bracket. Tighten all three 12mm bolts. (34Nm)




Step 5: Tighten the 8mm Allen bolt. (100Nm)



Step 6: Install the Passenger Side Skid Plate onto the lower rear trailing arm. (Spacers may be required depending on fuel tank skid)



Step 7: Install the 8mm Allen Bolt with Washer into the Skid, do not tighten. (Spacers may be required depending on fuel tank skid)

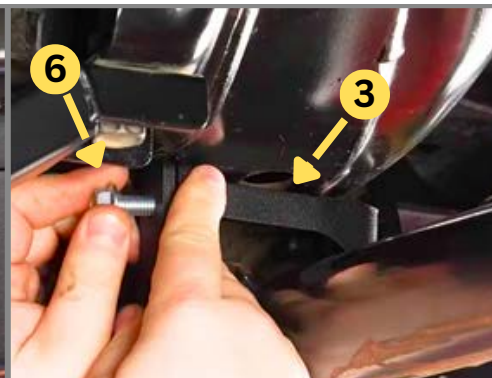

Step 8: Install the provided bracket onto the Skid. Ensure notch is facing down. Install 12mm bolt inside, do not tighten.



Step 9: Install two 12mm bolts through the outside of the Skid into the Bracket. Tighten all three 12mm bolts. (34Nm)



Step 10: Tighten the 8mm Allen bolt. (100Nm)



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555