

IAG I-Line 5pc Amber Grille Light Kit For 2021+ Bronco High End Grille





IAG-BDY-F3072 5pc Amber Grille Light Kit For 2021+ Bronco High End Grille (Badlands, Wildtrak, First Edition)

Congratulations on the purchase of your IAG I-Line 5pc Amber Grille Lights, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or at the following link:
<https://www.youtube.com/watch?v=xJZv8T-ZVnY>



1 Amber Grille Lights


2 Wiring Harness

Tools needed: 10mm socket, TORX25 socket, small pry tool




Step 1

Using a small pry tool, remove the nine push clips from the radiator shroud.

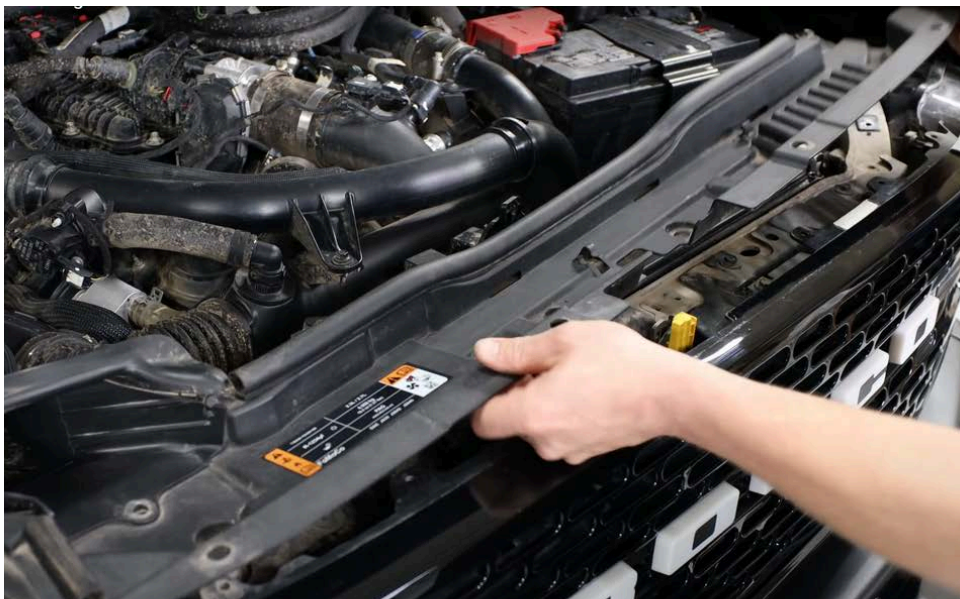

Step 1 pt. 2

Remove the radiator shroud.

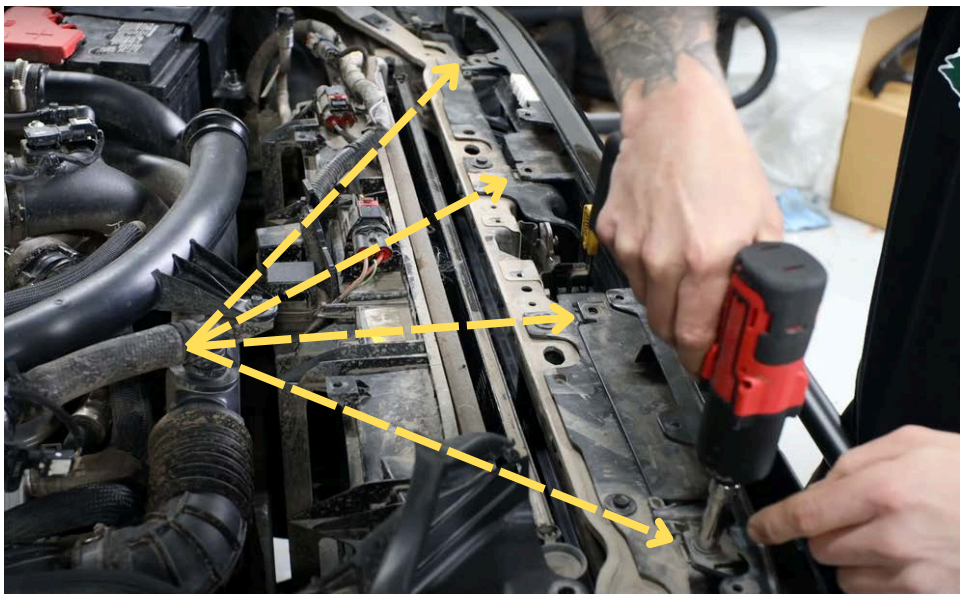

Step 2

Remove the four 10mm bolts from the grille.




Step 3

Remove the grille.

Using even pressure, pull the grille away from the vehicle.


This will disengage the tabs holding the grille in place.

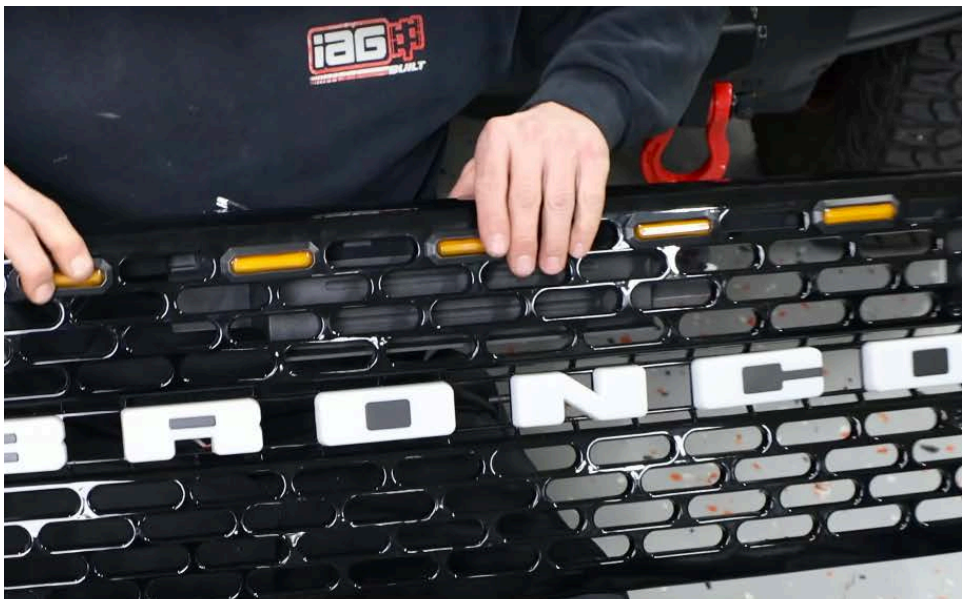

Step 4

Install the Grille Lights.

Using even pressure, push the lights into the front of the grille until they snap in place.

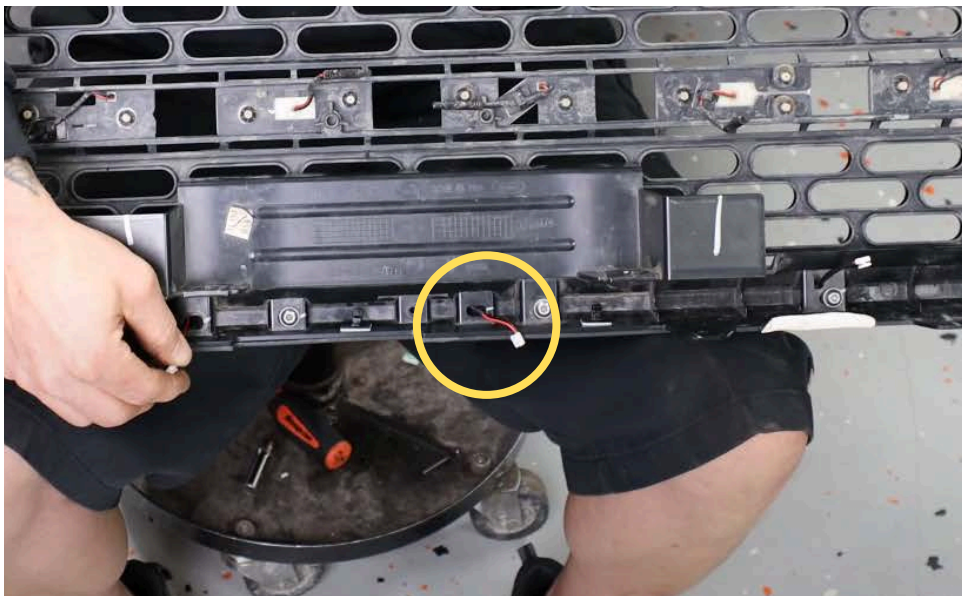

Step 4 pt. 2

Route the wiring from the lights through the backside of the grille.



Step 5

Prepare the Wiring Harness.


Connect the harness to the Grille Lights. Route the fused end towards the driver side.

2



Step 6

Route the Wiring Harness as shown, so that it tucks behind the grille.

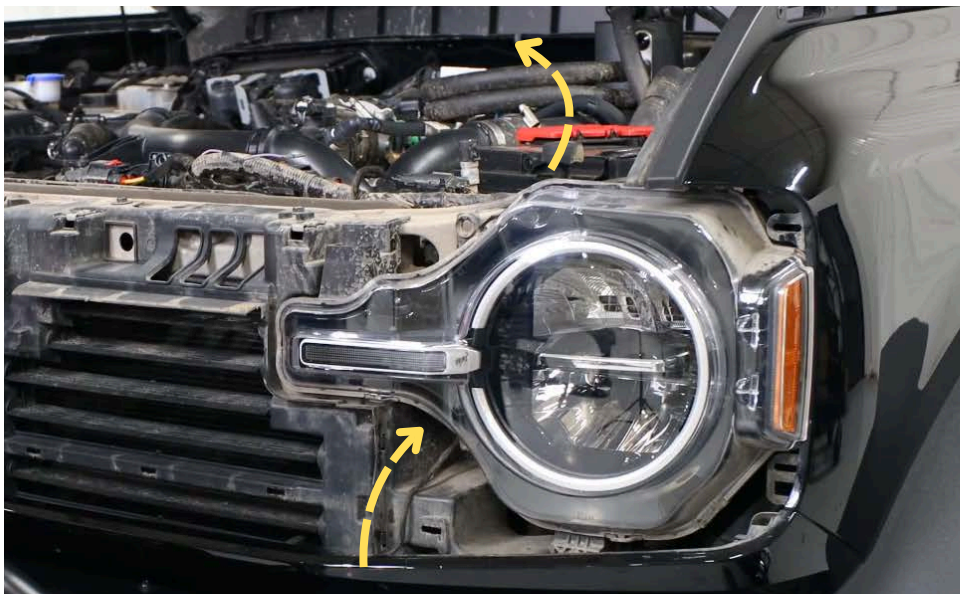

Step 7

Route the wiring harness underneath the headlight, then up into the engine bay as shown.



Step 8


Reinstall the grille.



Step 9

Disconnect the negative terminal of the battery.

Place a rag between the battery and the ground cable to prevent contact.

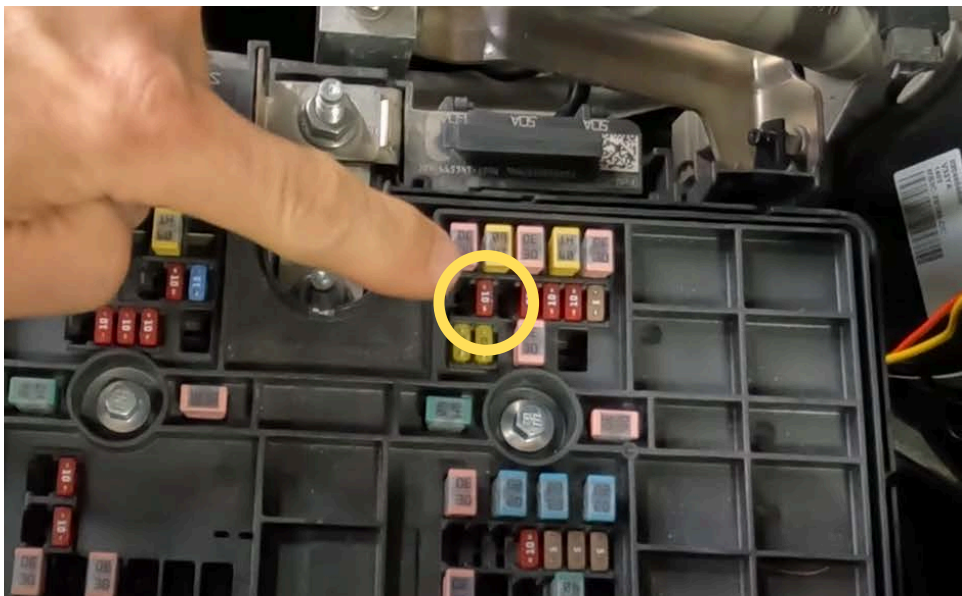

Step 10


Remove the fuse box cover.

Locate the 10amp fuse as shown.




Step 11

Remove the fuse

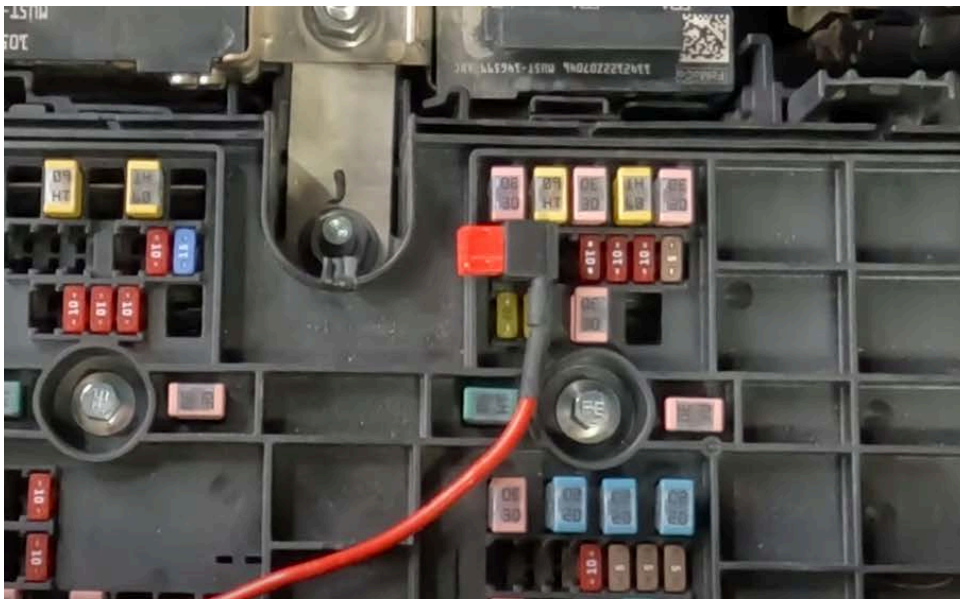

Step 12

Install the fused wire end into the fuse slot.

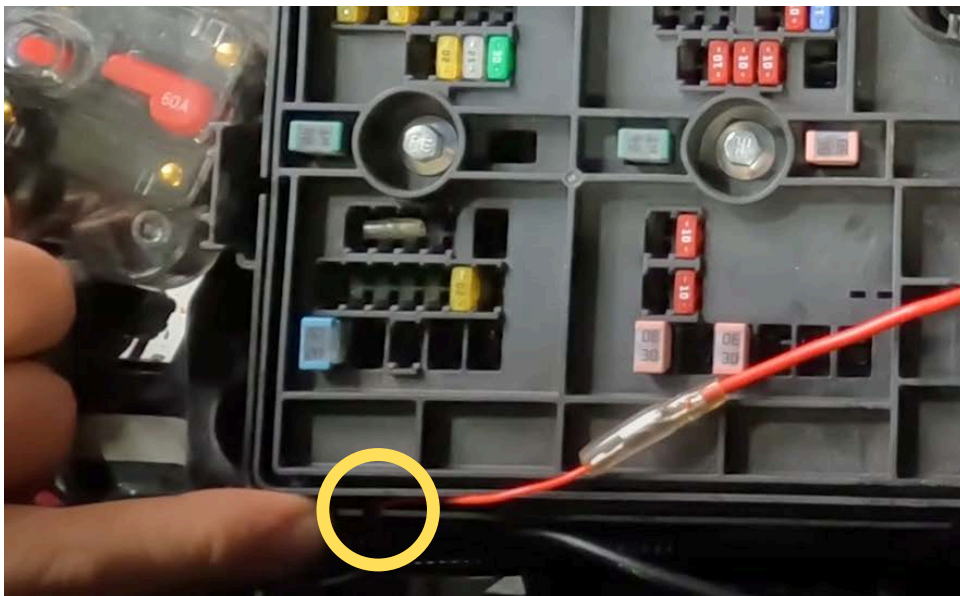

Step 13

Route the ignition harness wiring through the notch in the fuse box as shown.



Step 14

Reinstall the fuse box cover.




Step 15

Loosen the 10mm nut on the ground cable as shown.

Attach the fork terminal of the Wiring Harness to the ground cable.

Tighten the 10mm nut.

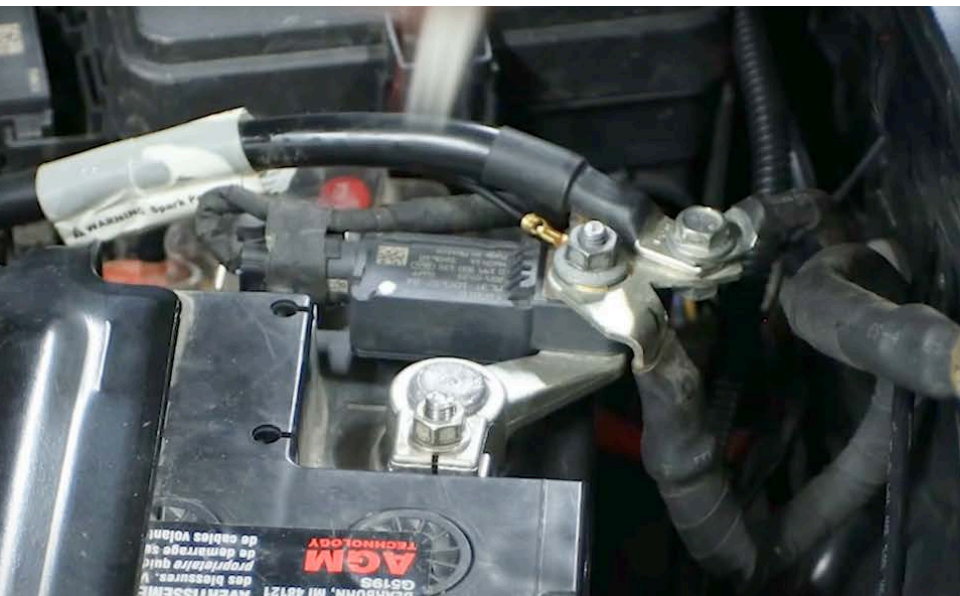

Step 16

Reconnect the ground cable to the battery.



Step 17

Reinstall and tighten the four 10mm bolts for the grille.



Step 15

Reinstall the radiator shroud and push clips.



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555