



IAG I-Line 4pc Rain Deflector Visor System 2021+ Ford Bronco Four Door


Part#: IAG-BDY-F3094



Congratulations on the purchase of your IAG I-Line 4 Piece Rain Deflector Visor system, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Product includes:

- ① x2 Adhesive promotor
- ② x4 Rain deflector
 - 2 front door
 - 2 rear door

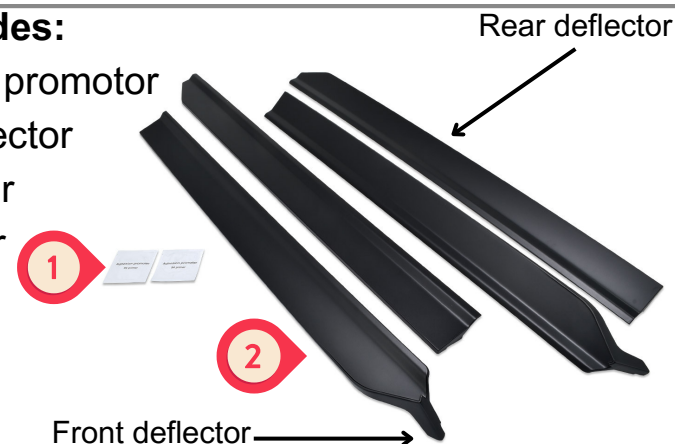

Step 1/10:

For **hard top**: remove front and middle panels.


For **soft top**: fold back

Step 2/10: Rear deflector

Apply adhesion promotor. Wipe along upper window rail surface area from rear door to front door



Step 3/10:
Before install make sure rear of deflector fits in this channel

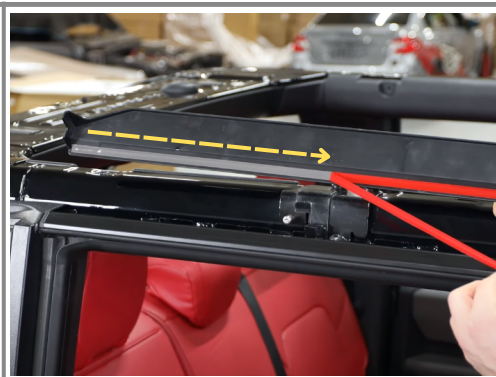

Step 4/10:
Remove the tape backing



Step 9/10:
Remove the rest of the tape backing and press down thoroughly to adhere along front deflector



Step 10/10:
Repeat steps 2-10 for other side



Step 5/10:
Once the rear is in line with the channel press down thoroughly to adhere



Step 6/10: Front deflector
Starting from the rear of the deflector remove 75% of the tape backing



Step 7/10:
Place front deflector under weather stripping. **Do not let tape touch the paint.**



Step 8/10:
Install the rear of the front deflector by bending the deflector (not letting tape touch) and click into front of rear deflector



If you have any questions about the installation or product please contact support@iagoffroad.com or call 410-840-3555