

IAG I-Line 5 Lamp Bumper Indicator For 2021+ Ford Bronco





IAG-BDY-F3134 5 Lamp Bumper Indicator For 21+ Ford Bronco Modular Bumper

Congratulations on the purchase of your 5 lamp Bumper Indicator, and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or at the following link:
<https://www.youtube.com/watch?v=jlq7Ntfh1uc>




1 Driver Indicator

2 Passenger Indicator

3 Wiring Harness Adapter

Tools needed: Torx Plus 40 socket and ratchet

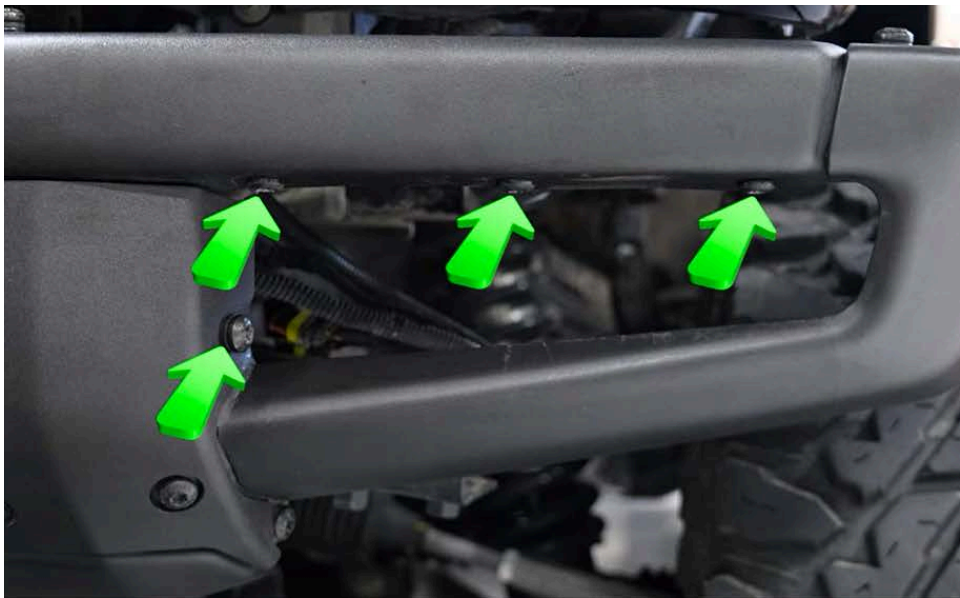

Step 1

Remove the four TP40 Bolts from the drivers side of the front bumper.



Step 1 pt. 2



Step 2

Install the new Indicator. Carefully pry back the trim on the inner part of the bumper, and insert the Indicator behind trim.





Step 3

Reinstall and tighten the 4 Torx Plus bolts.



Step 4


Remove some of the fender liner clips and fold back fender liner.
Locate the headlight connector on the back of the headlight.
Unplug the connector.



Step 5

Install the provided wiring harness adapter into headlight connector.



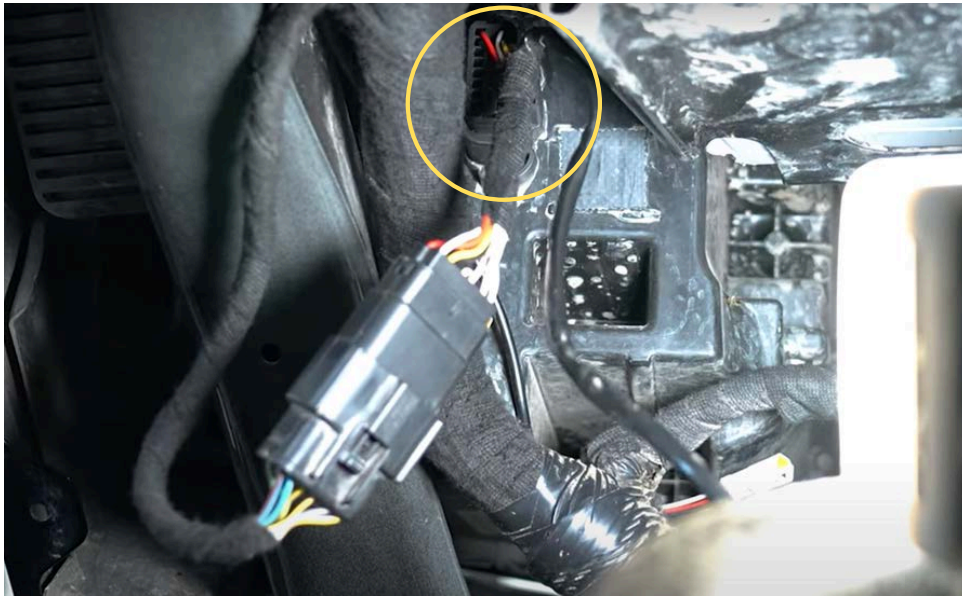


Step 6

Install the wiring harness adapter into headlight socket.



Step 7

Connect the new Indicator to the adapter harness.

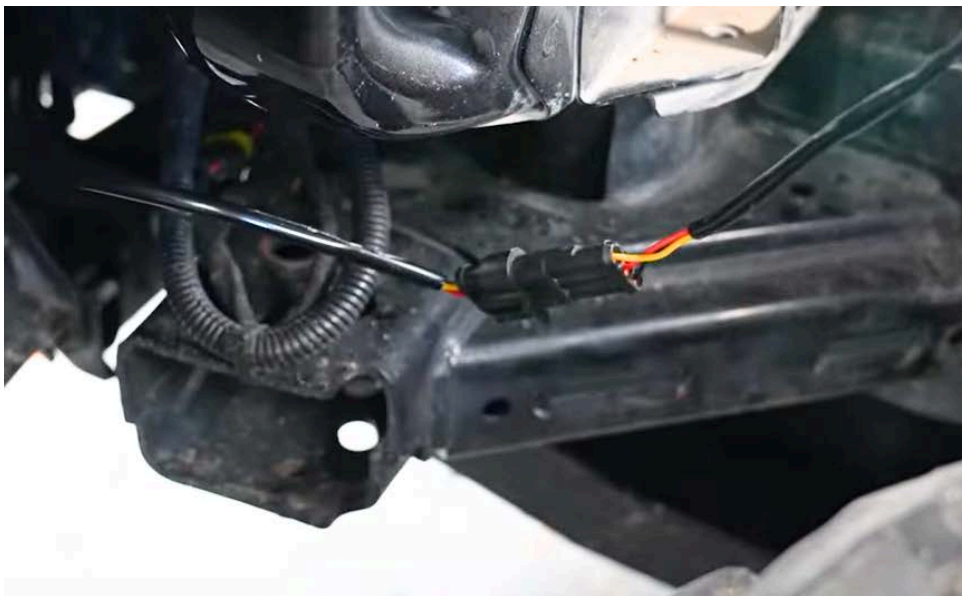

Step 7 pt. 2

Reinstall the fender liner.

Step 8

Repeat process on the other side.



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555