

# IAG EZ Step

## For 2018+ Jeep Wrangler 2 Door





## IAG-BDY-J2101 IAG EZ Step for 2018+ Jeep Wrangler 2 Door

Congratulations on the purchase of your IAG EZ Steps and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.



### Tools needed:

13mm socket, 10mm socket, 7mm socket, 5mm Allen wrench, 2.5mm Allen wrench



### Step 1


Confirm EZ step fitment.

If the EZ step slides onto the rock rail without contacting the body, fitment is good. Skip to step 6.



### Step 1 pt. 2

If the EZ step rubs against the body, spacers must be installed onto the rock rail.

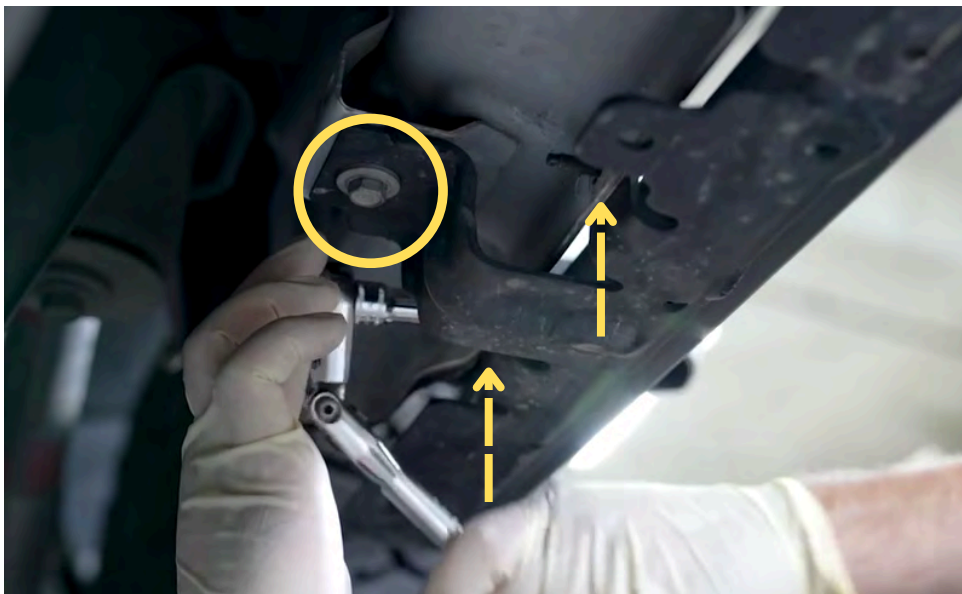

### Step 2

To install the spacers, remove the rock rail.

Start by removing the 13mm bolt and two 10mm nuts from each rock rail bracket.




### Step 3

Remove the rock rail from the vehicle.

Note: Two people are recommended for removal of the rail.




### Step 3 pt. 2

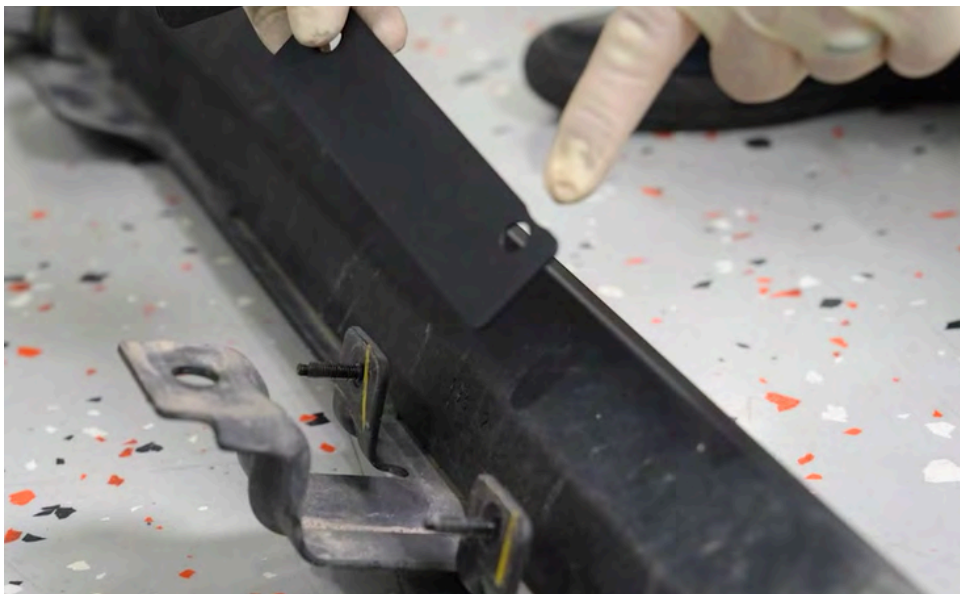

### Step 4

Install the provided spacer onto the rock rail bracket with the notch facing up.

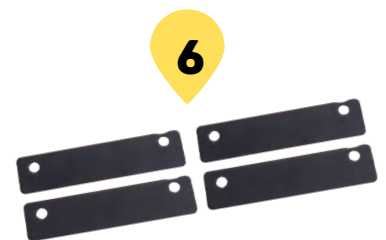



Step 4 pt. 2

Install spacers onto the remaining bracket.



Step 5

Reinstall the rock rail.



Step 5 pt. 2

Reinstall the rock rail hardware.



### Step 6

Prepare the EZ steps, badges, and badge hardware.



### Step 6 pt. 2


Align the badge plate onto the bottom of the step.

Install four 2.5 Allen bolts in through the top of the step. Install four 7mm nuts onto the Allen bolts.



### Step 7

Tighten the badge bolts.

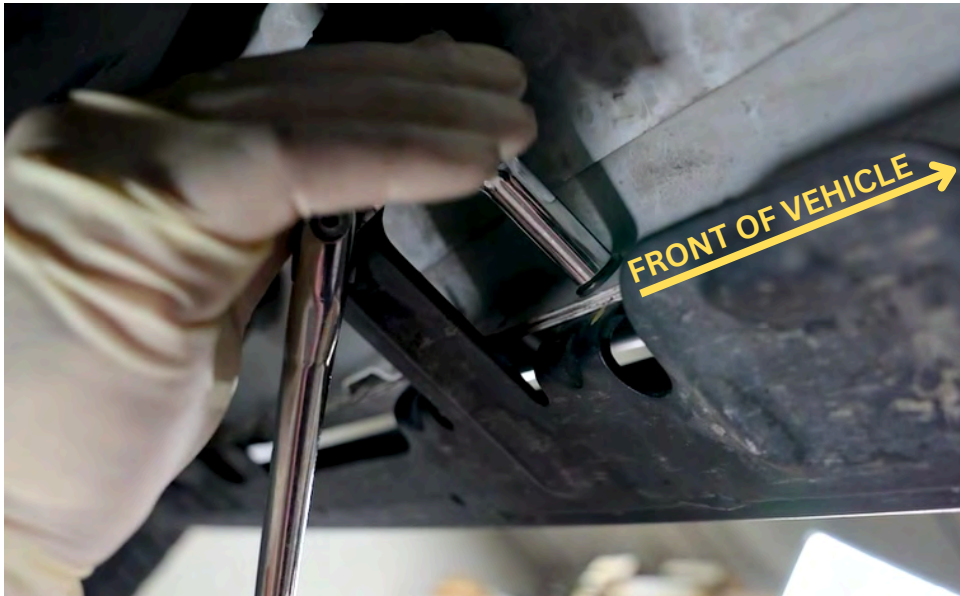

### Step 8

Locate the rock rail bracket underneath the drivers door.

Remove the front 10mm nut on the mounting bracket.



### Step 9

Prepare the step bracket.  
Install the bracket onto the stud then reinstall the 10mm nut.

Do not tighten.



### Step 10

Install the step onto the rock rail.

Align the EZ Step with the step bracket, position the EZ Step in the forward most position.



### Step 11

Prepare the step mounting hardware. Assemble the washers onto the 5mm Allen bolts.

Install two of the Allen bolts into the step and tighten.



### Step 12

Tighten the 10mm nut on the rock rail bracket.



### Step 13

Repeat the process for the other side.





If you have any questions about the product or install please reach out to [support@iagoffroad.com](mailto:support@iagoffroad.com) or call 410-840-3555