

***IAG EZ-Lift & EZ-Pull Combo Kit for 2021+
Ford Bronco 4-Door with Soft Top***






IAG-KIT-F1004 EZ Lift & EZ Pull Combo Kit for 2021+ Ford Bronco 4-Door with Soft Top

Congratulations on the purchase of your IAG EZ Lift & EZ Pull Combo Kit and thank you for choosing IAG Off Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Video instructions can be found here:

<https://www.youtube.com/watch?v=OKrsI8F0da0>

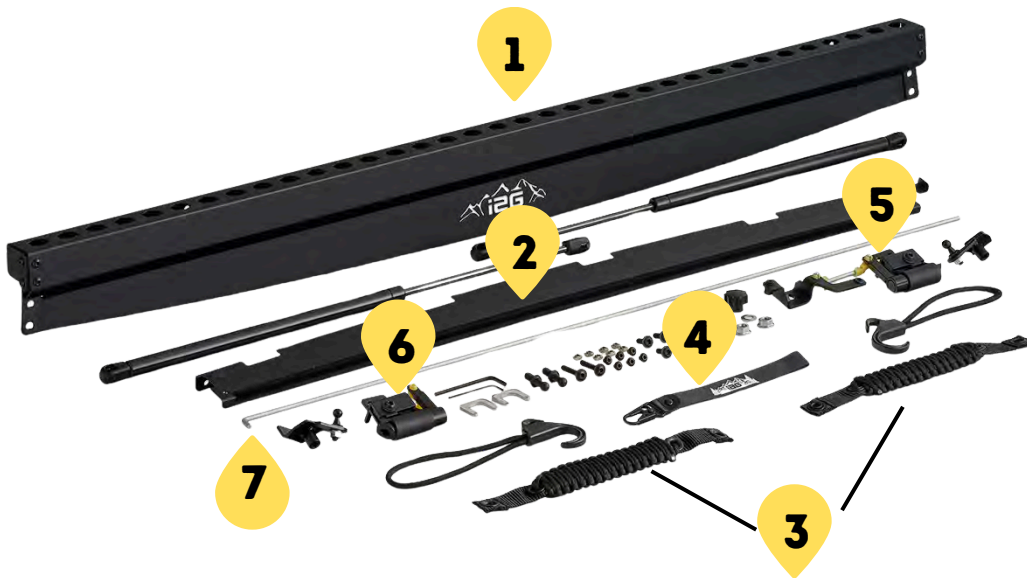

1 Top Cover

2 Lower Cover


3 x2 Paracord Grab Handles

4 Nylon Release Handle

5 Driver Side Latch Assembly

6 Pass. Side Latch Assembly

7 Rod w/ 90 Degree End

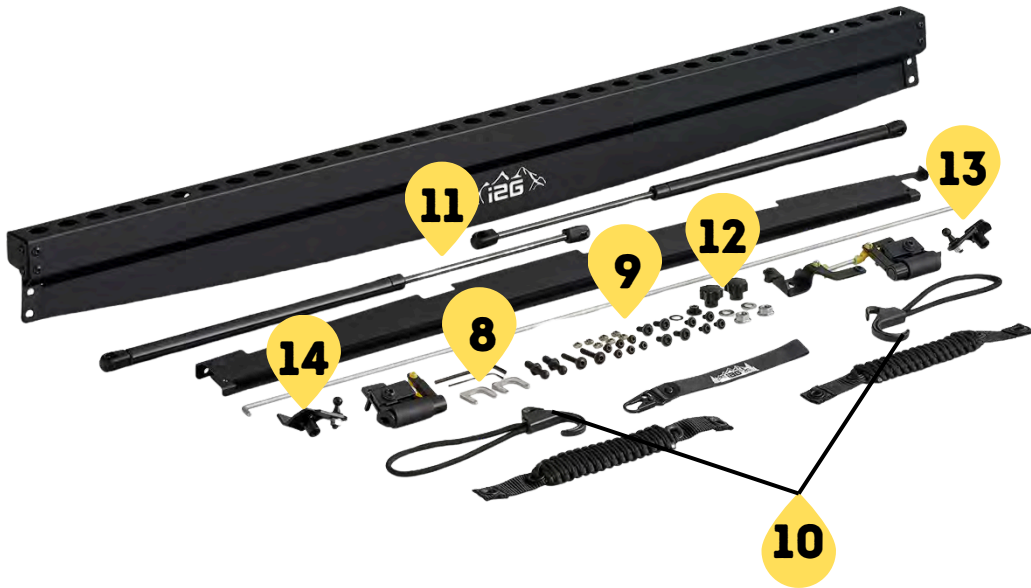

8 x2 U Spacer

9 Hardware Kit

10 x2 Black Bungee Cords w/ Hook

11 x2 Gas Struts

12 x2 Thumb Knobs

13 Driver Side EZ Lift Bracket


14 Pass. Side EZ Lift Bracket

Tools needed: Small flathead screwdriver, 10mm nut driver, 12mm & 13mm wrench, 3mm allen key, t25 & t30 torx, tape measure, painters tape



Step 1

Open the rear hatch.

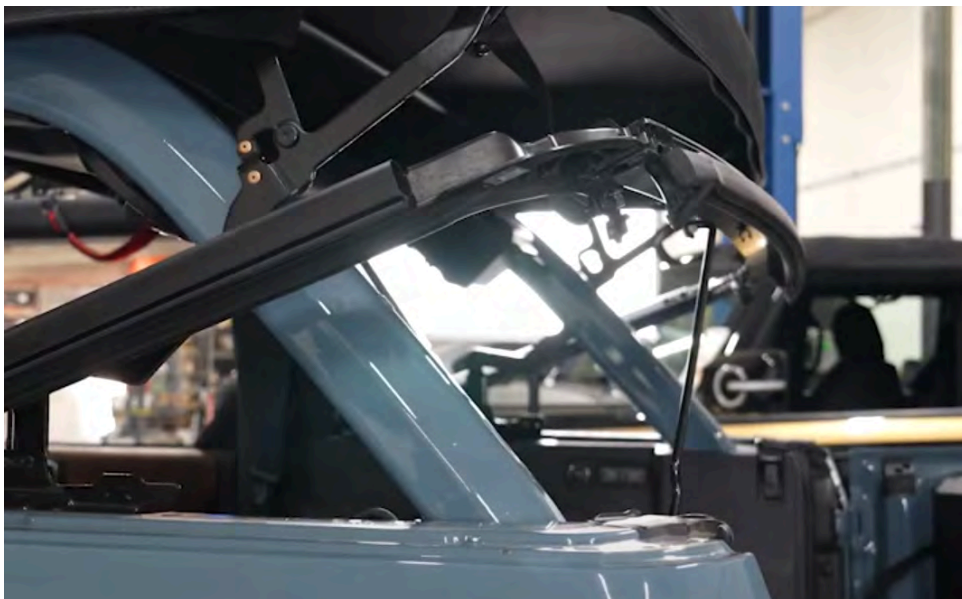

Step 1 pt.2



Step 2

Install a washer onto the stud then install to the soft top frame.

Step 2 pt.2



Step 3

Install the 13mm nut.



Step 4

Tighten with a 12 and 13mm wrench.





Step 5

Repeat process for the other side.



Step 6

Remove the 10mm prop rod nut.



Step 7

Remove the prop rod.



Step 8

Twist the prop rod clip and remove.



Step 8 pt.2



Step 9

Remove the two 10mm latch nuts and then remove the latch.

Step 9 pt.2



Step 10

Remove the two 10mm latch nuts and then remove the latch on the other side.



Step 10 pt.2






Step 11

Slide the two studs out then install the latch with tip towards the outside of the vehicle.



Step 11 pt.2

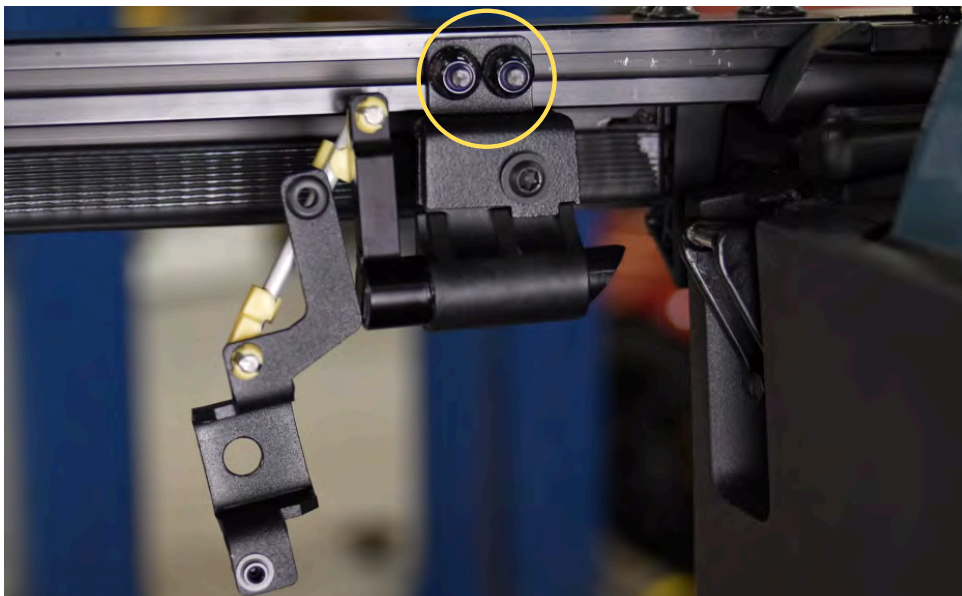

Step 12

Reinstall the two 10mm nuts from step 10 but do not tighten.



Step 13

Place the U spacer on the latch assembly and push it against the outer catch to align.

8



Step 13 pt.2



Step 14

Tighten the two 10mm latch nuts.



Step 15

On the other side slide the two studs out then install the latch with tip towards the outside of the vehicle.



Step 15 pt.2



Step 16

Reinstall the two 10mm nuts from step 10 but do not tighten.



Step 17

Place the other U spacer on the latch assembly and push it against the outer catch to align.



Step 17 pt.2




Step 18

Tighten the two 10mm latch nuts.




Step 19

Install the bushing and washer to the latch rod assembly.

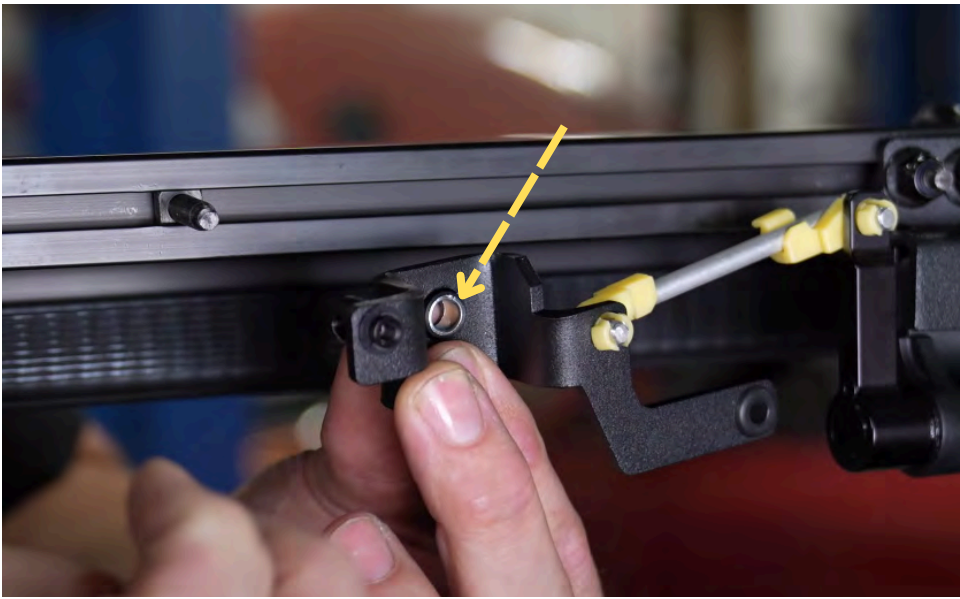

Step 19 pt.2

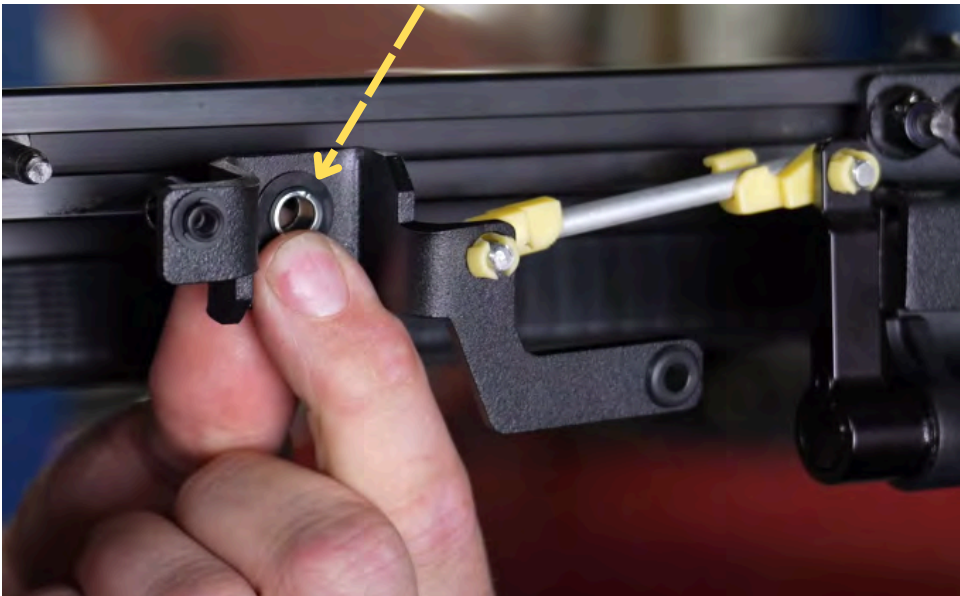

Step 19 pt.3




Step 20

Install the latch actuator to the prop rod stud from step 6.



Step 21

Reinstall the factory 10mm nut from step 6 and tighten.

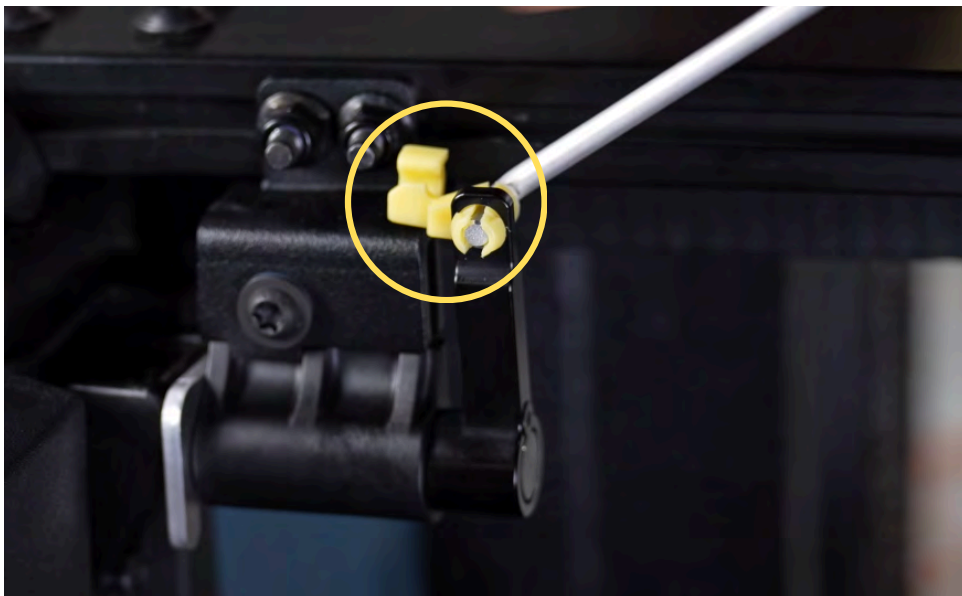

Step 22

Install the 90 degree end from the rod to the rod clip on the passenger side.

7





Step 23

Press yellow rod clip down and lock.



Step 24

Install other end by slightly flexing the rod into the swivel clamp.



Step 25

Tighten with provided allen key.

Step 25 pt.2



Step 26

Install the three allen screws and slotted head nuts to the lower cover.



Step 26 pt.2



Step 26 pt.3



Step 27

Place a piece of tape near the middle of the rear window rail.



Step 28

Measure from the outer point of the rear rail and center is around 23.5".





Step 29

Mark the tape at the center.



Step 30

Align with the center mark on the tape and install the lower cover with the nuts in the rail channel.



Step 31

Tighten the center screw.



Step 32

Tighten the other two cover screws.



Step 32 pt.2



Step 33

Locate the T25 screws and slotted head nuts. These will be used to install the grab handles.

3



Step 33 pt.2



Step 34

Loosely install the T25 screws and slotted head nuts to the grab handles.



Step 35

Feed the strap ends up into the cutouts in the lower cover.





Step 36

Install the strap end with the screw and slotted head nut to the rear rail and tighten.



Step 37

Repeat for other end of the grab handle.



Step 38

Repeat steps 35-37 for the other grab handle.



Step 38 pt.2



Step 39

Install the pull lanyard to the actuator.

4



Step 39 pt.2

Step 40

Pull down on lanyard to unlatch the rear and release the U spacers from steps 13 and 17.



Step 40 pt.2



Step 40 pt.3





Step 41

Remove the driver side T30 strap bolt (be sure to keep the twist in the strap).



Step 41 pt.2



Step 42

Install the factory washer from the T30 bolts onto the 4mm allen bolt and onto the strap.

Step 42 pt.2



Step 43

Install the EZ Lift driver side bracket onto the bolt.



13



Step 44

Install the strap to the soft top frame from step 41 with the 4mm allen bolt.



Tighten with supplied allen key.



Step 44 pt.2



Step 45

Repeat for passenger side.



Step 45 pt.2



Step 46

Install the one of the thumb knobs onto the back stud of the soft top frame.

12



Step 47

Install the bungee onto the bracket then onto the thumb knob.

10



Step 47 pt.2

Step 47 pt.3




Step 48

Repeat process for the other side.



Step 48 pt.2



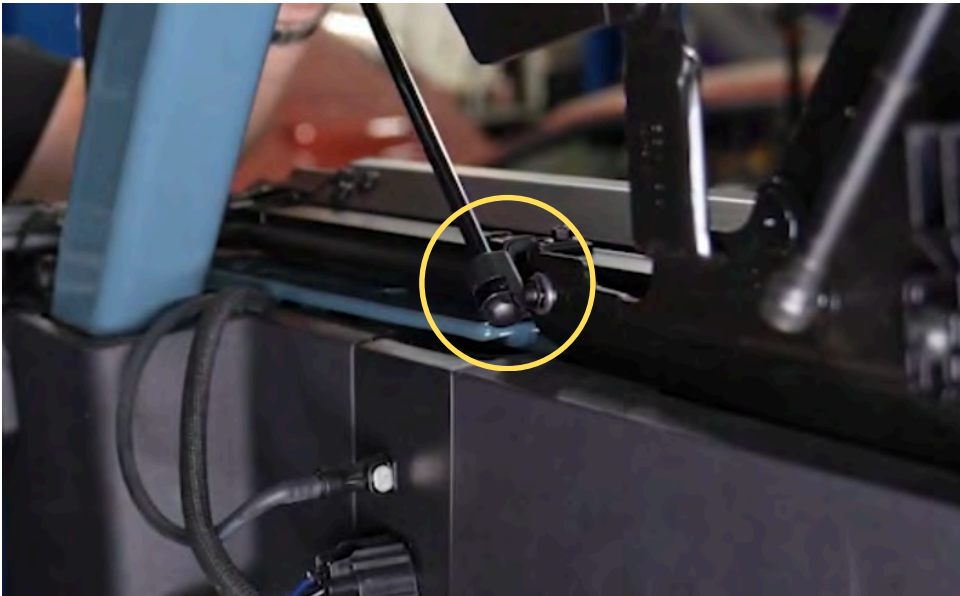

Step 49

Install the small end of the bottom ball head.

11



Step 50

Push the soft top up and install other end on the EZ Lift bracket from step 44.



Step 50 pt.2



Step 51

Repeat process on other side.



Step 51 pt.2



Step 52

Function check the EZ-Pull system.



Step 53

Pull down to make sure it closes securely.




Step 54

Pull down on lanyard to release the EZ-Pull system.




Step 54 pt.2

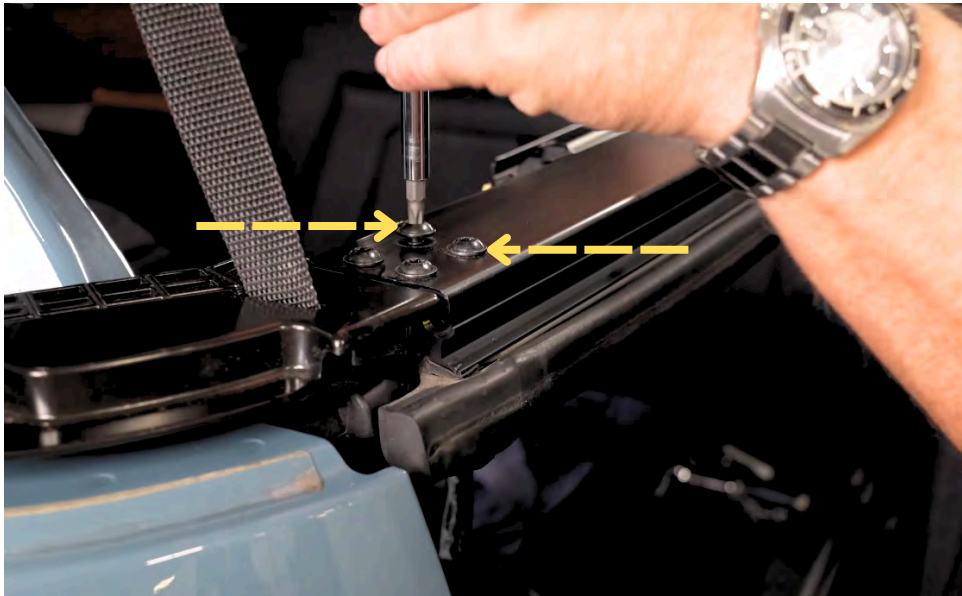


Step 55

Remove the inner two T30 bolts on both sides from the top of the rear rail.

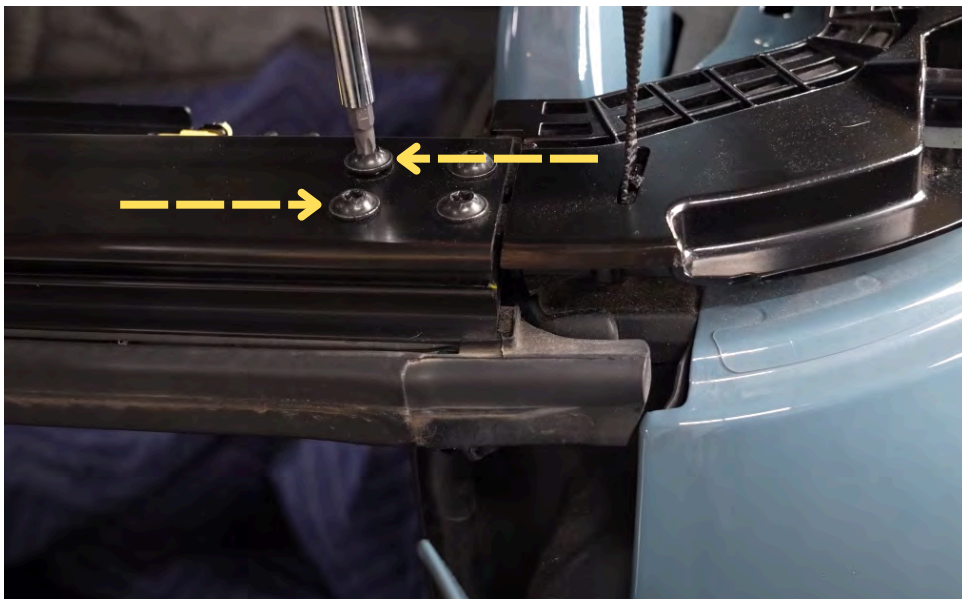

Step 55 pt.2

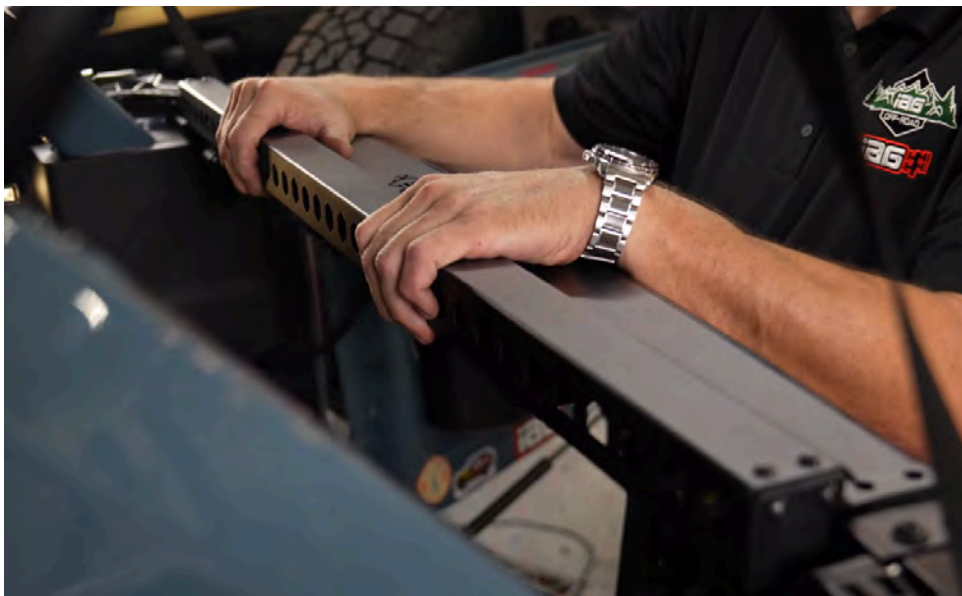

Step 56

Install the top cover by hooking over the lower cover and onto the top of the rail.

1





Step 57

Install the provided T30 bolts to the top cover on the rail but do not tighten.

Repeat for other side.



Step 57 pt.2



Step 58

Install the top cover to the lower cover with the three supplied allen screws.

Step 58 pt.2




Step 58 pt.3




Step 59

Tighten the four T30 bolts from step 55.

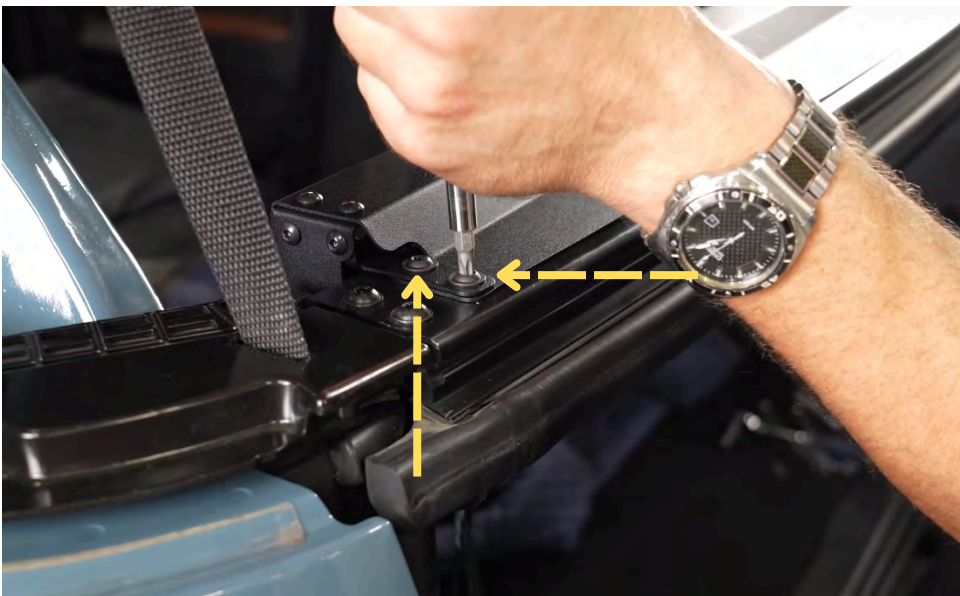

Step 59 pt.2

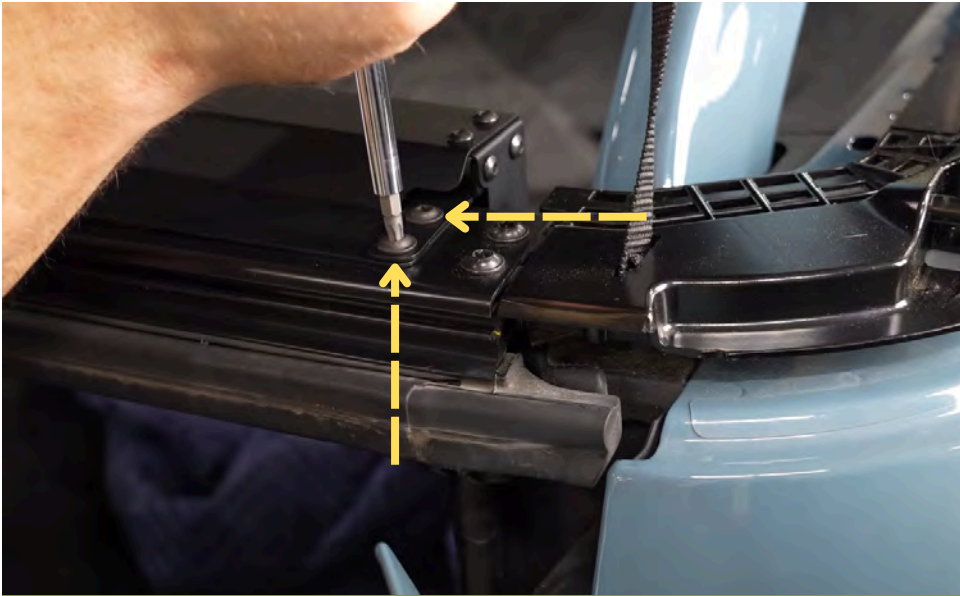

Step 60

Final install.



If you have any questions about the product or install please reach out to support@iagoffroad.com or call 410-840-3555