



U.S. BASED SUPPORT

HOURS: MONDAY - FRIDAY | 8AM - 5PM EST



[1.410.840.3555](tel:14108403555)



support@iagoffroad.com



VIDEO INSTRUCTIONS

<https://iagoffroad.com/vi/RPL-ACC-F1086>



SCAN ME



**IAG OFF-ROAD
CUTTING BOARD EXTENSION
FOR 2021+ BRONCO WITH
MULTILEVEL TAILGATE TABLE**



IAG Off-Road

**Cutting Board Extension Replacement
For 2021+ Bronco with Multilevel Tailgate Table
Part Number: RPL-ACC-F1086**

Congratulations on the purchase of your Tailgate Table Cutting Board, and thank you for choosing IAG Off-Road! These instructions are intended for users with basic mechanical skills. Professional installation is not required.

Installation video can be found on our website, or by using the following QR code.

Tools Needed:

Socket/Wrench Sizes:

- Two 4mm Allen Wrenches

Scan or click QR code for instruction video:




Parts Included:

- 1 IAG Tailgate Table Cutting Board**



Step 1

Open the Tailgate Table to the partially open position as shown.

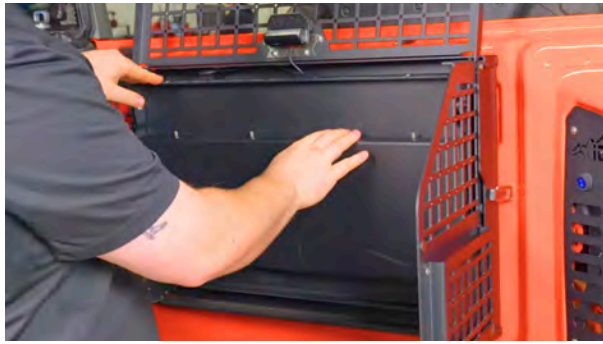

Step 2

Using two 4mm Allen Wrenches, loosen the hinge bolt from the Fold Out Table.



Step 2 pt. 2

Remove the Inner 4mm Allen Bolt from the hinge.

The 4mm Allen Sleeve and Bushing should remain on the vehicle. Careful not to drop or lose this hardware.



Step 2 pt. 3


Repeat for other side.



Step 3

Remove the Fold Out Table.


Slide the Fold Out Table up off the Pins and pull out.

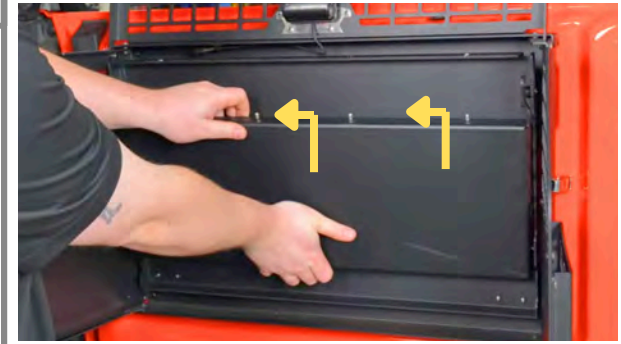

Step 4

Prepare the IAG Cutting Board Table.

Align the shown notches onto the Tailgate Table Pins and slide on.

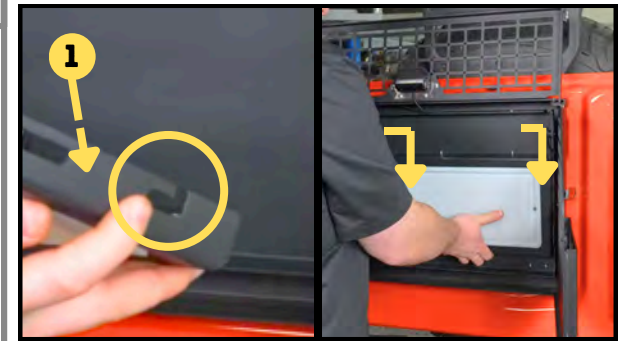


Step 5

Reinstall the 4mm Allen Bolts.

Tighten until snug.

Overtightening these bolts may cause difficulty opening the table.

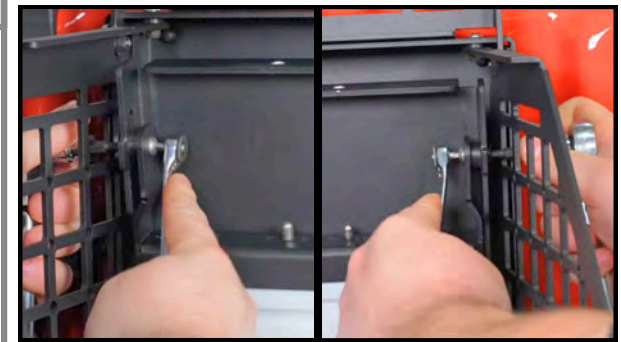

Finished!

Confirm Operation of the Fold Out Cutting Board.

